EB3600-AB

User Manual

PCIe to PCIe Expansion

MODEL

EB3600-AB

Table of Contents

Preface **6**
Advisories 6
Safety Instructions 7
Chapter 1 Introduction **9**
EB3600-AB Features 10
EB3600-AB Technical Specification 10
Pre-Installation Information 11
Parts List 11
Components of EB3600-AB unit 12
Pre-Installation Information 14
Tools Required for Installation 14
Chapter 2 Hardware Installation **14**
Installation-Procedures Overview 15
Open Enclosure 16
Install Expansion Interface Card 16
Install Host Interface Card 18
Installation of Interface card on Host server 20
Connect Interface Cables 22
Connect cables to expansion unit 23
Connect cables to computer / server 25
Cable Configurations 26
Cable configuration for EB3600-AB 27
Daisy Chain Configuration 28
Plug-in PCIe card / GPU 28
PCIe card Memory Requirements 30
PCIe card Power Requirements 31
K80 Installation 32
Connect Power Cord / Cable 34
Connect to Electrical Outlets 35
Is it ok to connect four 1200W Power Supply modules to 120V? 35
Use two separate circuit lines. 36
Don’t use multiple electrical outlets on one circuit line. 36
Power ON EB3600-AB 38
Power ON Computer 39
Hardware Check 39

Check Expansion and Host Cards LEDs....40
X16 Link....40
X8 Link....40
Check Front Panel Status LEDs....41
Check Backplane LEDs....41
Verify Installation....42
Windows....42
Linux....43
Chapter 3 Advanced Technical Information....49
EB3600-AB Configurations....49
Backplane and LEDs....50
Card Slot Link LEDs....52
Interface Card and LEDs....53
Display Functions of Interface card LEDs....54
Reset & Power Status LEDs....54
Front Panel Status LEDs....55
Fan LEDs....56
Temperature Sensor Alarm LEDs....56
Power Supply Indicator LEDs....56
Control Switches....57
SW1 and SW2....57
SW3....58
SW4....58
Fan....59
Fan Replacement....60
Fan Specs....61
SNMP / Netburner....61
NetBurner Module....62
Replacing the NetBurner....62
NetBurner Installation....63
Replacing the Interface Board....64
NetBurner Interface Board Installation....65
Power Supply unit....66
How to replace the power supply module....66
Power Supply Specifications....68
Chapter 4 Express I/O Manager....72
SNMP Features....72

Web Access and SNMP Configuration....72
Supported Internet Browser....72
To Access Express IO Manager / SNMP....73
Connect Ethernet Cable....73
Configure Network Setting....73
How to configure your network setting in Windows OS....73
How to configure your network setting in Linux / Ubuntu....74
Launch Internet Browser....75
Authentication Log-in....75
Default Home Webpage....76
Express IO Manager WEB GUI....76
HOME....76
ADMINISTRATOR....77
SNMP SETTINGS....77
ALARM SETTINGS....78
NETWORK....79
MANAGEMENT....79
Turning OFF 3.3v when servicing the chassis....80
Remote Turn ON and OFF the chassis....81
PCI-E INFO....82
Fan Control....83
Fan Configuration....83
Servicing the Server A or B (Side A or Side B)....84
Deactivating Server A/B (side A/B)....84
Reactivating Server A/B (side A/B)....85
Reset to Default Values....87
Configure your SNMP Agent....87
Retrieving the MIB File....87
Accessing the various SNMP functions....88
Chapter 5 Functional / Benchmark Tests....90
SNMP Verification Test....90
Swappable Fan Test....91
Swappable Power Supply Test....91
Express IO Manager "radio button" Test....92
Express IO Manager Administration Test....92
Chapter 6 Rack Slide Installation....93
EB3600-AB Chassis Rack installation....93

Rack Mounting 93
Rack Slides 93
Slide Rail Dimension Information 93
Specifications 94
Safety Instructions 95
Tools and Supplies Needed 96
Parts List 96
Slide Rail Installation Instructions 96
Prepare Slide Rails for Assembly (STEP 1) 96
Attach Rail to Chassis (STEP 2) 98
Assemble Slide Rails (STEP 3) 98
Add Screws to Rack Post (STEP 4) 99
Attach Slide Rail to Rack (STEP 5) 100
Attach Chassis to Slide Rail / Rack (STEP 6) 101
Secure the Chassis to the Rack (STEP 7) 102
Earth Leakage Current 102
Grounding the EB3600 Expansion Chassis 102
Regulatory Safety Requirements 103
Chapter 7 Updating Netburner / SNMP 105
How to Update the Netburner on Linux 105
Requirements 105
Procedures Overview 105
Download Files 105
Connect the Ethernet Cable 105
Launch the AutoUpdate.jar 106
Check and verify the update 108
Chapter 8 Troubleshooting 109
Chapter 9 Chassis Maintenance 111
General Chassis Cleaning 111
Cleaning the Air Filter 111
Chapter 10 Frequently Asked Questions (FAQ) 113
What are the differences between EB3600-10 and EB3600-AB? 115
Chapter 11 How to Get More Help 116
Contacting Technical Support 116
Returning Merchandise to MAGMA 116

Preface

Advisories

Five types of advisories are used throughout this manual to provide helpful information, or to alert you to the potential for hardware damage or personal injury.

NOTE
Used to amplify or explain a comment related to procedural steps or text.

IMPORTANT
Used to indicate an important piece of information or special "tip" to help you

CAUTION
Used to indicate and prevent the following procedure or step from causing damage to the equipment.

WARNING
Used to indicate and prevent the following step from causing injury.

DANGER or STOP
Used to indicate and prevent the following step from causing serious injury or significant data loss

Disclaimer: We have attempted to identify most situations that may pose a danger, warning, or caution condition in this manual. However, Magma does not claim to have covered all situations that might require the use of a Caution, Warning, or Danger indicator.

Safety Instructions

Always use caution when servicing any electrical component. Before handling the Magma Expansion chassis, read the following instructions and safety guidelines to prevent damage to the product and to ensure your own personal safety. Refer to the "Advisories" section for advisory conventions used in this manual, including the distinction between Danger, Warning, Caution, Important, and Note.

- Always use caution when handling/operating the computer. Only qualified, experienced, authorized electronics personnel should access the interior of the computer and expansion chassis.

WARNING
Never modify or remove the radio frequency interference shielding from your workstation or expansion unit. To do so may cause your installation to produce emissions that could interfere with other electronic equipment in the area of your system.

When Working Inside a Computer

1. Before taking covers off a computer, perform the following steps:
2. Turn off the computer and any peripheral devices.
3. Disconnect the computer and peripheral power cords from their AC outlets or inlets in order to prevent electric shock or system board damage.

In addition, take note of these safety guidelines when appropriate:

- To help avoid possible damage to systems boards, wait five seconds after turning off the computer before removing a component, removing a system board, or disconnecting a peripheral device from the computer.
- When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. Some cables have a connector with locking tabs. If you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before connecting a cable, make sure both connectors are correctly oriented and aligned.

CAUTION
Do not attempt to service the system yourself except as explained in this manual. Follow installation instructions closely.

Protecting Against Electrostatic Discharge

Electrostatic Discharge (ESD) Warning
Electrostatic Discharge (ESD) is the enemy of semiconductor devices. You should always take precautions to eliminate any electrostatic charge from your body and clothing before touching any semiconductor device or card by using an electrostatic wrist strap and/or rubber mat.

Static electricity can harm system boards. Perform service at an ESD workstation and follow proper ESD procedures to reduce the risk of damage to components. Magma strongly encourages you to follow proper ESD procedures, which can include wrist straps and smocks, when servicing equipment.

You can also take the following steps to prevent damage from electrostatic discharge (ESD):

- When unpacking a static-sensitive component from its shipping carton, do not remove the component's anti-static packaging material until you are ready to install the component in a computer. Just before unwrapping the anti-static packaging, be sure you are at an ESD workstation or are grounded.
- When transporting a sensitive component, first place it in an anti-static container or packaging.
- Handle all sensitive components at an ESD workstation. If possible, use anti-static floor pads and workbench pads.
- Handle components and boards with care. Don't touch the components or contacts on a board. Hold a board by its edges or by its metal mounting bracket.

Chapter 1 Introduction

EB3600-AB

Magma ExpressBox 3600-AB is a 10-Slot PCI Express® Expansion System optimized for High Performance Computing (HPC) applications. The expansion system consists of a PCIe® host interface card, High Speed/HD IO cables, a 4U rack-mount chassis containing a 10 Slot backplane and an expansion interface card, a hot swappable power supply, and high CFM hot-swappable cooling fans.

- Provides the optimum features for supporting world class High Performance Computing (HPC) applications that demand 'mission critical' features such as N+1 redundant power and cooling and high speed PCIe Gen 3 x16 connectivity.
- It comes with a network management interface, including a web based GUI and SNMP interface for monitoring the health of the chassis. The design is optimized for HPC applications built with leading edge GPUs such as NVIDIA K-Series/GRID, AMD and coprocessors.
- It is ideal for HPC applications such as oil and gas exploration, financial modeling, medical imaging, genome sequencing, and simulation – basically any application requiring big data set analysis and processing.

With the capacity for up to 9 state-of-the-art GPUs (e.g. NVIDIA K40), support for up to 12.9 Tflops (double precision) or 38.6 Tflops (single precision) can be obtained within one ExpressBox 3600. For Big Data applications, this level of performance is a game changer in the field of data mining and other applications that could not be addressed just a short number of years ago.

- Up to 38.6 Teraflops (single precision) or 12.9 Teraflops (double precision) of performance possible (data representative of nine NVIDIA K40s).
- Provides expansion for up to ten PCIe Gen 3 x16 peripherals including up to nine double width GPU modules.
- Passive host interface: no PCIe switch on host link cards, providing lowest latency possible.
- Full 300W per slot power support (with included PCI AUX power).
- Redundant N+1 air cooling for up to nine GPU modules.
- 19" Rack-mountable metal, 4U chassis 16.8" Wide x 7" High (4U) x 22.125" Deep.
- Configurable and hot swap N+1 capable power supply solutions of 1200W, 2400W, 3600W or 4800W

Product Name	Description
EB3600-AB	Ten peripheral slots and two host link slots (All Gen 3 x16)

EB3600-AB Features

- Easy "Plug and Play" installation
- PCI Express Gen 3 x16 or x8 interconnection
- All slots support full-length cards
- Status LEDs on backplane indicate active link, speed (Gen 3 or Gen 2, or Gen 1)
- Automatic power-up control by computer
- Four hot-swappable cooling fans
- Multiple power supply options with auxiliary power connectors
- Industrial 4U rack-mount enclosure
- Chassis provides superior EMI control, vibration, shock and moisture resistance
- Magma Express I/O Manager
- Constant critical component monitoring
- Front panel status LED display
- SNMP and Express I/O Manager with built-in web graphical user interface
- Serviceable Server A and / or B

EB3600-AB Technical Specification

EB3600-AB	2 PSUs per segment. 2400W at 120v or 3000W at 240V full power OR 1200W/1500W N+1 redundant for segment A and segment B independently.
HARDWARE	
Backplane	EB3600-AB: ten peripheral slots and two host link slots (All Gen 3 x16)
Interconnect Bandwidth	PCIe Gen 3 x16: 128 Gbits/sec to all peripherals and host link
ENCLOSURE	
Material	Steel Chassis
Dimension	16.8" Wide by 7" High (4U) by 22.125" Deep
HOST CONNECTION	
Host side: Any PCIe based host-equipped computer (preferably Gen 3 x16)	Expansion side: All host links are Gen 3 x16 capable and will train down to Gen 2 or 1 as needed. The host connection that the cards will automatically down train to the link width to the one that is maximum for a given slot electrically
Switchless host link adapter design for minimal host/expansion latency	
POWER SUPPLY	
1200W PSU	Additional Hot swappable 1200W AC power PSU. Can be added to base models above. Up to four total (4800W total)
ENVIRONMENT	
Ambient Temperature	0º to 50º C
Storage Temperature	-55º to 125º C
Relative Humidity	0% to 90% non-condensing
REGULATORY COMPLIANCE	
FCC Class A Verified	RoHS Compliant
CE Certified	
SUPPORTED OPERATING SYSTEMS	
Windows	Mac OS
Linux	Solaris

Pre-Installation Information

Before using the Magma Expansion chassis you should perform the following steps:

- Inventory the shipping carton contents for all of the required parts
- Gather all of the necessary tools required for installation
- Read this manual

Parts List

#	Item Description	EB3600-AB Quantity
1	Host Interface card	2
2	1-meter High Speed / HD IO cable	4
3	U.S. Standard 115V Power Cord	1 per supplied PSU
4	Expansion Interface card	2
5	Quick Start Guide	1
6	1200W Power Supply Modules (installed)	Requires 4
7	Hot-swappable Fan (installed)	4

Important

For EB3600-AB, it ships with 4 power supply bricks / modules. To support 4 GPUs it requires 2 power supply bricks.

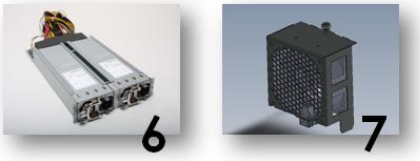

Components of EB3600-AB unit

Once you've completed your inventory, your next step is to get familiarized with components of the EB3600-AB expansion unit.

The expansion unit is composed of the following integral components

1. **Expansion Backplane**
    a. 10 PCIe x16 slot (electronic and mechanical)
    b. Two designated Link-Up SLOTs for Interface card
    c. Slot LEDs, Link and Activity LEDs (30 LEDs)
    d. Thermistor control switch
2. **Interface card**
    a. Expansion and Host mode DIP switch
    b. Speed Toggle switches
    c. Two Cable ports: one for x8 and the other is x16
3. **Power Supply, redundant and hot-swappable**
    a. Power cord socket
    b. LED status indicator
    c. Locking Thumb screw
    d. 18 (6+2 pin) PCIe connectors
    e. Hot swappable
4. **Hot-swappable Fans**
    a. 185 CFM
    b. Locking Thumb screw
    c. Air Flow: from outside going inside
5. **SNMP Interface module**
    a. Netburner
    b. RJ45 port

Front panel: you'll find the following

1. Push button On/Off switch
2. Front Panel Status LED
3. Front Grill cover (Dust-Foam filter behind the cover)

Rear Panel, you'll see the following

1. PCI Express card slot opening
2. Interface card cable ports (x8 and x16)
3. Power Supply
4. RJ-45 Ethernet port
5. Top cover Thumb Screws
6. Power Rating
7. Serial number

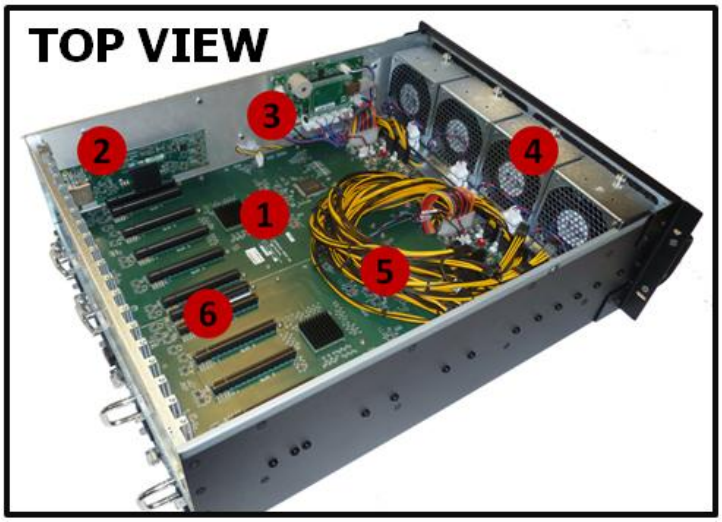

1. Backplane
2. Expansion Interface Card
3. SNMP module
4. Hot-Swappable Fans (4)
5. PCI-e power Connectors
6. PCI-e Slots (x16)

7. Push Button ON/OFF
8. LED Status Indicator
9. Front Grill Cover
10. Top Cover

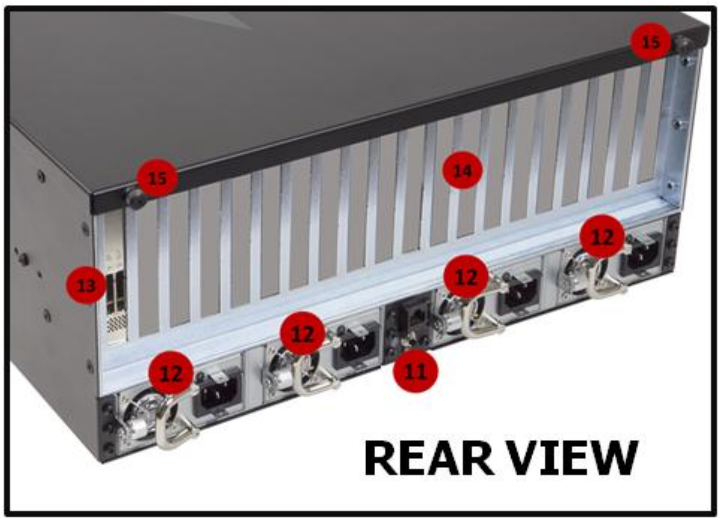

11. RJ-45
12. Power Supply (4)
13. Interface Cable Port
14. Slot Opening / Cover
15. Thumb Screw

Pre-Installation Information

Before using the Magma Expansion chassis you should perform the following steps:

- Inventory the shipping carton contents for all of the required parts
- Gather all of the necessary tools required for installation
- Read this manual

Tools Required for Installation

To complete the installation of the Magma product you will need a Phillips-head screwdriver and ESD wrist strap to prevent electrostatic discharge.

Chapter 2 Hardware Installation

The following steps will guide you through the installation of your Magma Expansion System.

CAUTION
Hardware installation shall be performed only by qualified service personnel.

Electrostatic Discharge (ESD) Warning
All add-in cards are susceptible to electrostatic discharge. When moving cards, it is best to carry the cards in anti-static packaging. If you need to set a circuit card down, be sure to place it inside or on top of an anti-static surface. For more information, see "Protecting Against Electrostatic Discharge" in the Preface.

WARNING
High voltages are present inside the expansion chassis when the unit's power cord is plugged into an electrical outlet. Disconnect the power cord from the AC outlet before removing the enclosure cover. Turning the system power off at the power on/off switch does not remove power to components. High voltage is still present.

CAUTION
Before touching anything inside the enclosure, move to an ESD station and follow proper ESD procedures. Failure to do so may result in electrostatic discharge, damaging the computer or its components. For more information, see "Protecting Against Electrostatic Discharge" in the Preface.

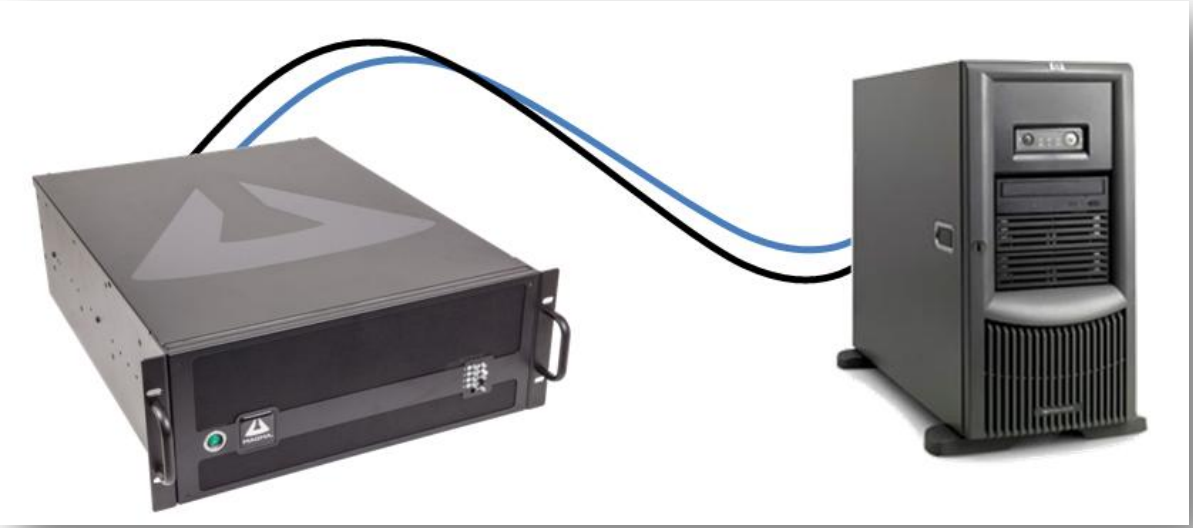

Installation-Procedures Overview

Below is the concise version on how to set up the EB3600-AB.

1. Open Enclosure
2. Install Expansion Interface card(s) (If not installed).
3. Install Host Interface card(s) into host computer
4. Install Cable (Connect A to A and B to B on interface cards between the host and expansion chassis)
5. Install PCIe cards (see notes below)
6. Attach Power Cords
7. Connect to Electrical Outlet – verify adequate circuit capacity for wattage needed (this may require multiple circuits)
8. Power- ON (power-up) EB3600-AB
9. Power-ON (power-up) Computer
10. Hardware Check
11. Verify Installation (via Operating System)

NOTE
It is highly recommended to install any 3rd party PCI-E cards / High Power PCIe cards after you have verified and tested the Magma expansion is functional and no hardware failures.

When installing 3rd Party PCIe card, start with one card first just to see if there are any software and hardware issues or incompatibility problems that may occur. This way you can troubleshoot the problem more easily and efficiently. If everything works well and there are no configuration issues, you can proceed with the installation of the remaining 3rd party PCIe cards.

Always refer to or read "3rd party manufacturer installation guide" for further instructions.

Open Enclosure 1

Loosen the thumbscrews that retain the top cover of the chassis and slide the lid towards you as shown below:

Install Expansion Interface Card 2

The Magma "Expansion" interface is the same card as the "Host" interface card only that its SW4 switch is set to "ON=EXP." By default the expansion interface card should already be installed in the Magma Expansion chassis.

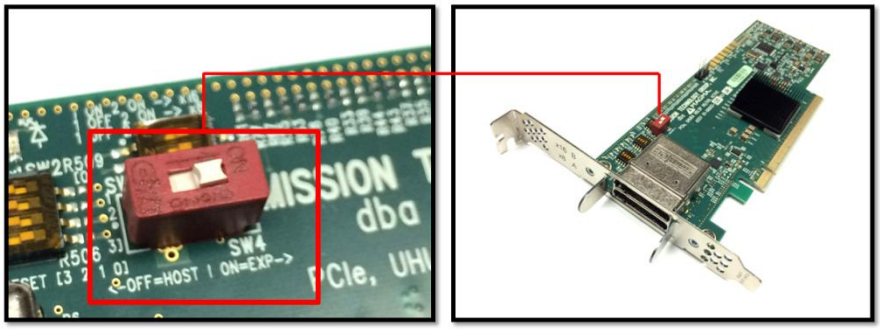

EB3600-AB comes with 2 Expansion Interface cards. There are two separate PCB backplanes side-by-side in the chassis. Each PCB backplane requires one Expansion Interface card linked to the host computer / server. It is Gen3 x16; it has two available cable ports for linking either by x8 or x16 connection.

Should you need to install the expansion interface card, make sure to check the dip switch (SW4) is set to proper configuration. The toggle switch should be "ON=EXP" position as shown from the picture below. Apply the same configuration with the second Expansion Interface card.

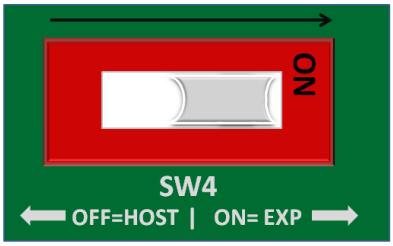

By default the Expansion Interface card is set to "ON=EXP" and configured as x16. User should not alter or change the settings of SW3. If you encounter problems, for troubleshooting purposes only check SW3; verify the dip switches are set to x16.

NOTE
The following settings on SW3 are not supported by the first edition of Interface card. Link width will not change regardless of the setting you select.
Second edition of Interface card will support the below settings.

.

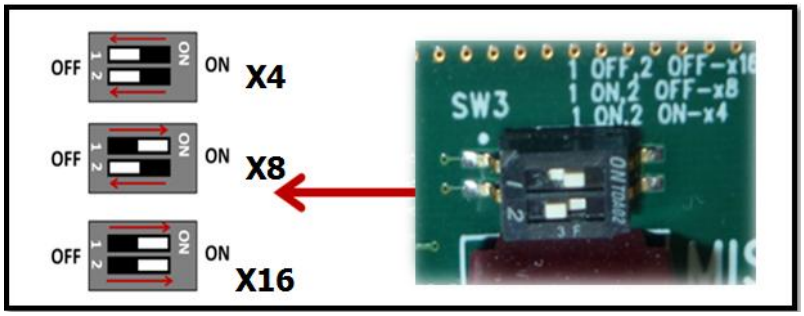

The Expansion Interface cards are already installed. If it needs to be installed, plug in the primary Expansion Interface card in the designated PCIe "SLOT 0-UPLINK (see pictures below).

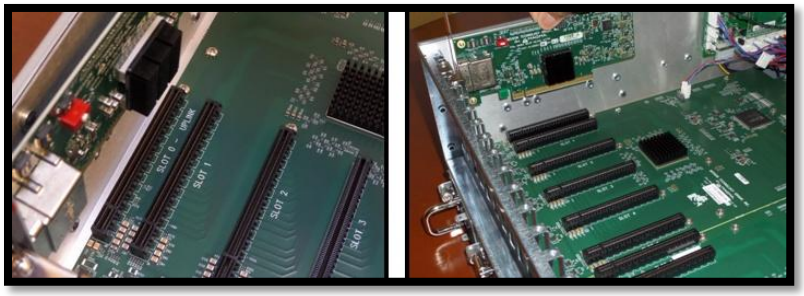

Use the PCIe "SLOT 5-UPLINK" to plug in the second Expansion Interface card. Secure the edge connector bracket with a retaining screw.

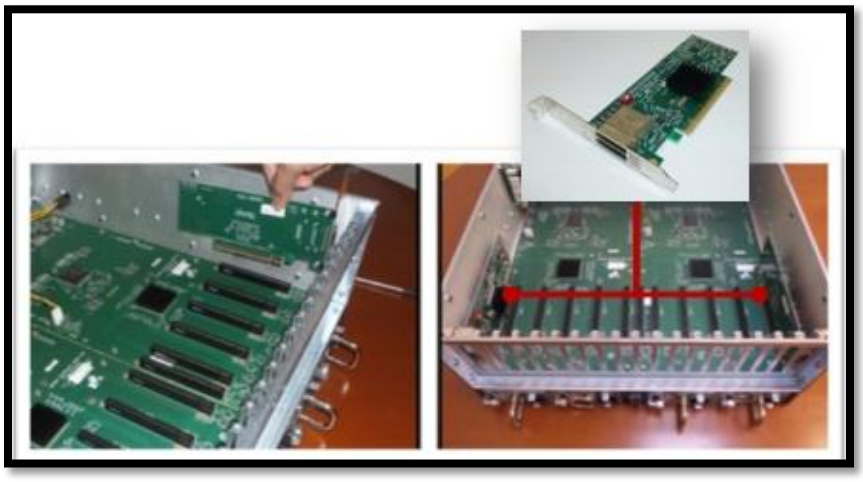

Install Host Interface Card 3

Begin installation by powering down your host computer. Use the procedures for shutting down your operating system and shutting off power to your system provided in your owner's manual or system documentation.

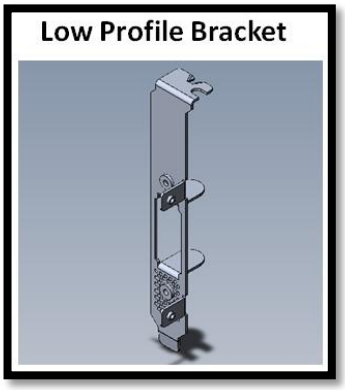

The host interface card is mounted to a "full-height" bracket as shown below. For low profile case applications, you may need to change the mounting bracket to the low profile bracket that shipped with your system. Remove the screws that hold the card to the bracket. Be sure you are using proper ESD procedures when completing this action.

When the host computer is off and all power cords are disconnected from the AC outlet, remove the cover and prepare your host card for insertion into a PCIe slot.

When the Magma interface card is used as "Host" interface i.e. installed in the host computer, the RED switch should remain OFF. Check the DIP switch and make sure it is set to OFF=HOST.

This version of Host Interface card has a mini built-in configurable toggle switch that can be set to x4, x8 and x16.

NOTE
There's no need to make changes to the link width, the card will automatically negotiate the link width if different than x16.

The Default setting for the host card is x16 and OFF=HOST. This setting should be left alone and not to be changed. Verify the interface card is set correctly for normal operation.

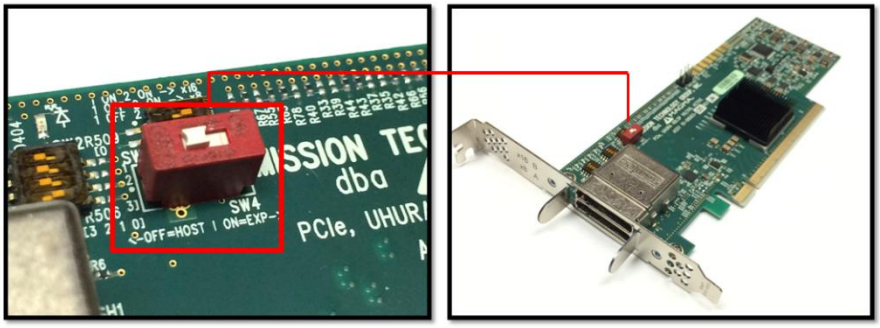

Note: The expansion chassis will NOT function if the red dip switch on the Interface card is set to ON and the card is inserted into the host computer. As shown from the picture below, the Host Interface card is set to OFF=HOST.

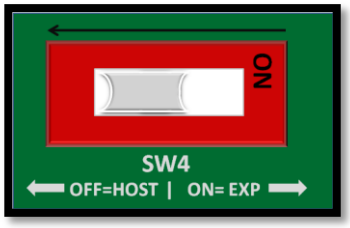

Install the two Magma PCIe host interface cards into the host computer. Use available x16 PCIe slot for both Host Interface cards. Plug in the host card to the PCIe slot closest to the PCIe CPU, this allows the BIOS to enumerate the host card first. Secure it with a retaining screw.

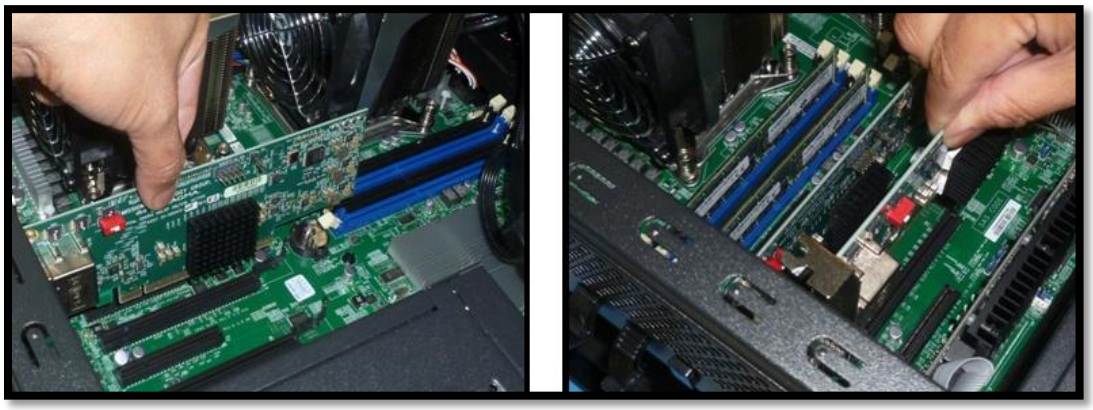

There are 2 host cards available for this chassis. It is important to know how many lanes the host computer slot can support. The host card does not need to be configured for the same number of lanes as the host computer slot. The host card will train down to whatever the PCIe slot speed is that it recognizes. For example, if the host interface card is installed in a x8 lane card slot; leave the host card setting as is. The host computer dictates what link width and speed the expansion system will operate in.

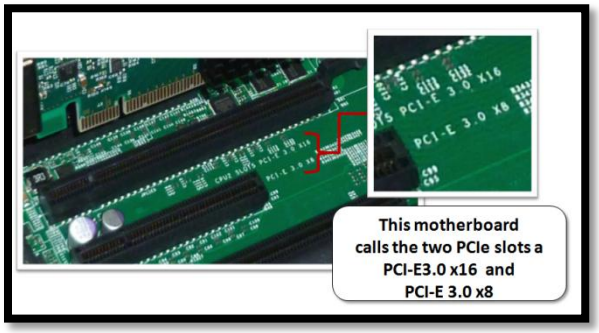

IMPORTANT
There's no need to change the dip switch setting when plugging in the Host Interface card into x4 or x8 PCIe slots. It is ok to plug in the Host card into a PCIe slot with no identification whether it is GEN1, GEN2, x4 or x8. The host card will instantly and automatically train down to whatever the speed is of the PCIe slot it recognizes.

DANGER or STOP
YOU MUST ONLY INSTALL THE PCIe HOST CARD INTO A PCI EXPRESS SLOT. Only use cards WITH brackets. This will ensure that your PCIe host card can only be inserted into a PCIe slot. Although PCI Express cards without brackets may fit into conventional PCI slots, you run the risk of damaging the PCI Express host card if you insert it into a PCI slot. Please ensure that your host computer has PCI Express slots and install the host card only into a PCI Express slot.

Installation of Interface card on Host server

You have to remove the slot-carrier housing from the host server in order to install the interface card.

1. Remove slot-carrier housing

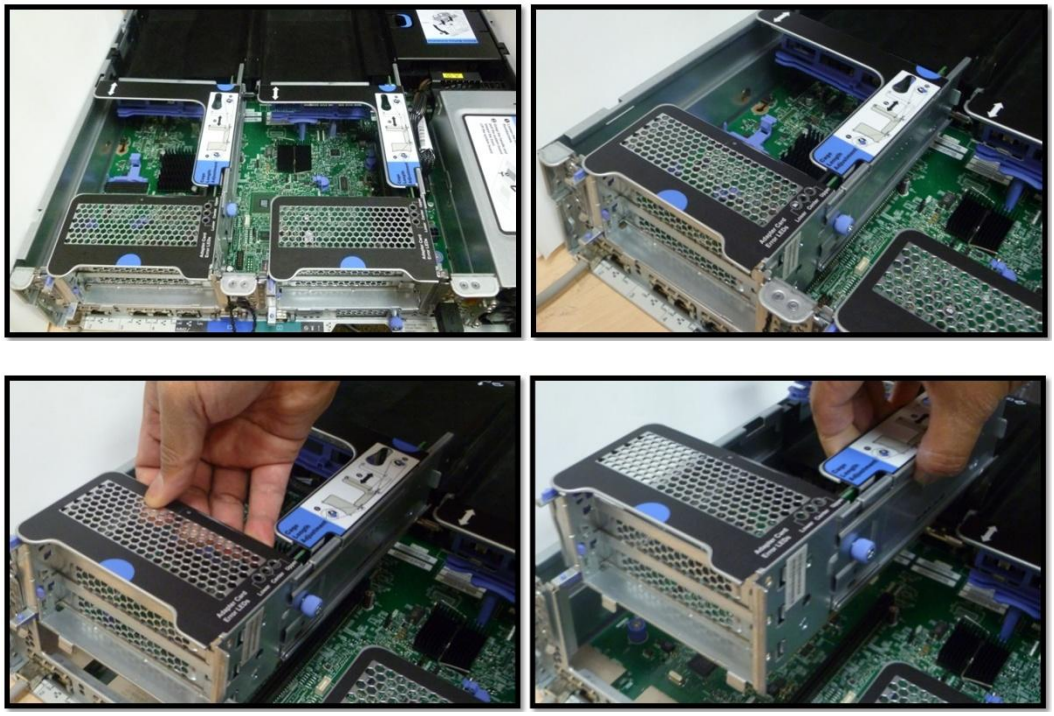

2. Install Interface card

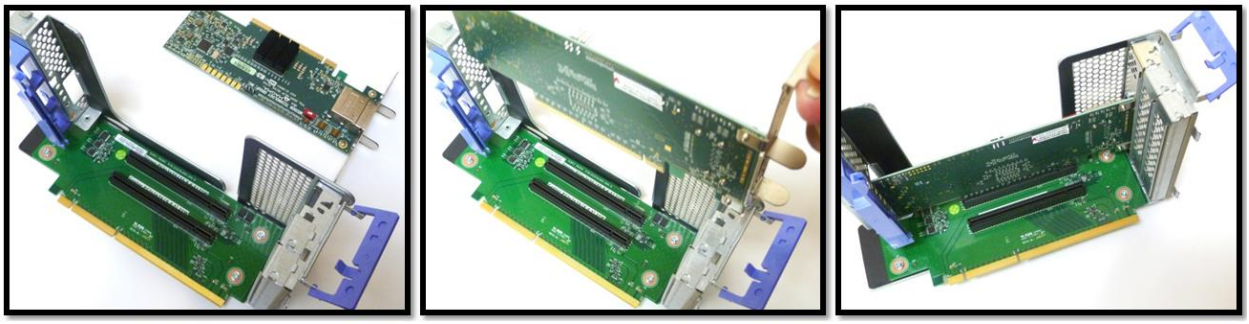

3. Secure Interface card

4. Put the slot-carrier housing back into the host server

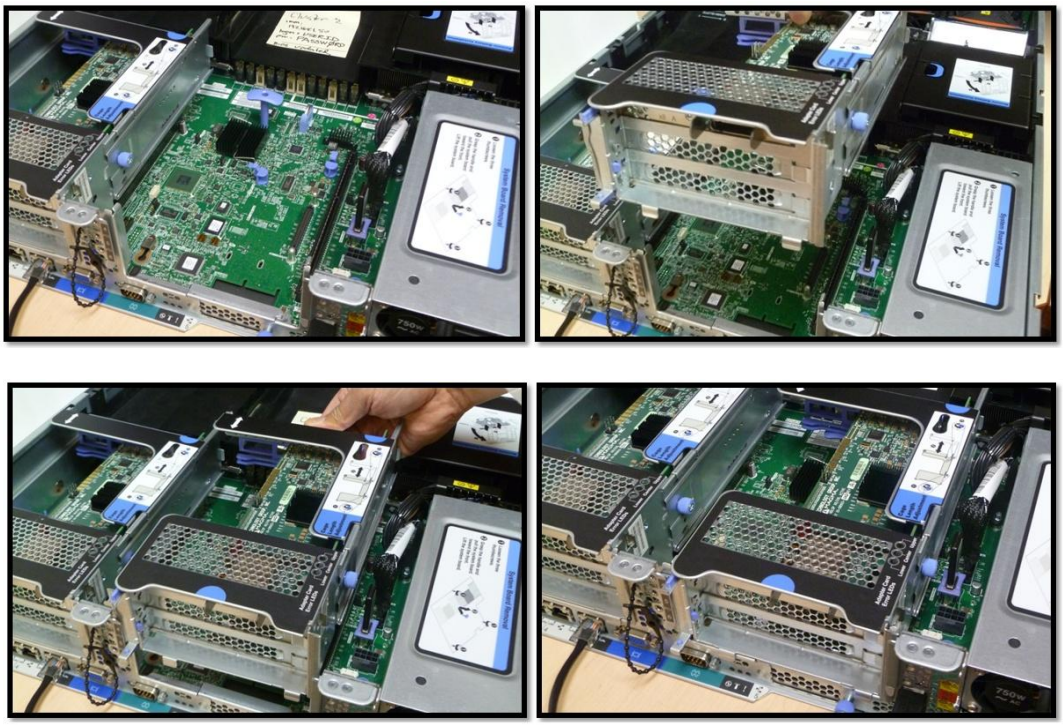

Connect Interface Cables 4

The EB3600-AB expansion unit uses High Speed / High Density IO cables (HDLSP- High Density Low Skew Pair cable) that deliver superior performance. It is an ideal solution for super-computing and data storage applications including servers, blade servers, and server clusters, providing vast modularity between systems and subsystem.

The cable is available in 1 meter length.

Model	Number of Cables
EB3600-AB	**4** High Speed / HD IO Cables (Two per Interface card)

Cable Specification	
1	An HDLSP cable provides easy interconnection for blazing system performance.
2	A High density cable system is also equipped with a rugged simple detent latching system allowing for the tightest cable placement.

Connect Cables to Expansion Interface cards and connect the other end to Host Interface cards. Be attentive which port to plug in the cable to. The Interface card has two cable ports labeled with x8 A and x16 B. Connecting the cable to the wrong port can lead the system to not operate properly. Always remember to plug in cable to "A to A" and "B to B" ports. Proper way of connecting the High Speed / HD cable to Interface card is shown from the picture below.

Electrostatic Discharge (ESD) Warning
The PCIe cables are high performance communication cables and as such are sensitive to electrostatic discharge (ESD). Use appropriate anti-static precautions and packaging when handling the cables or when performing installation and/or maintenance

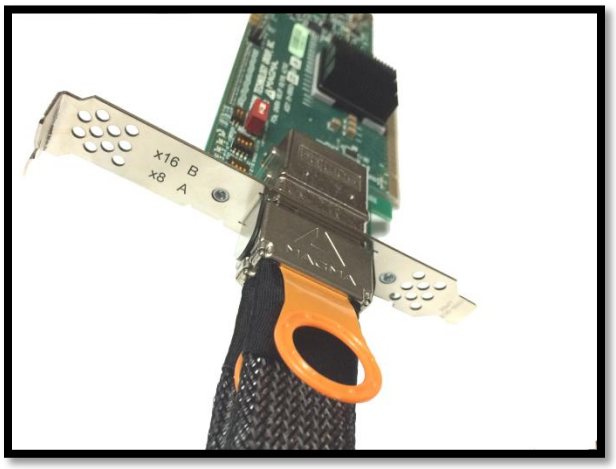

Connect cables to expansion unit

FOR EB3600-AB you need four cables. Plug in cables to Magma EB3600-AB unit

Connect the first set of cable to the expansion interface card located on the left side of the expansion unit.

- Connect the 1st cable to port X8 A
- Connect the 2nd cable to port X6 B

2. Connect the second set of cable to the expansion card located on the far right side of the expansion unit.

- Connect the 3rd cable to port X8 A
- Connect the 4th cable to port X16 B

4. Secure all the cables with a retainer clamp.

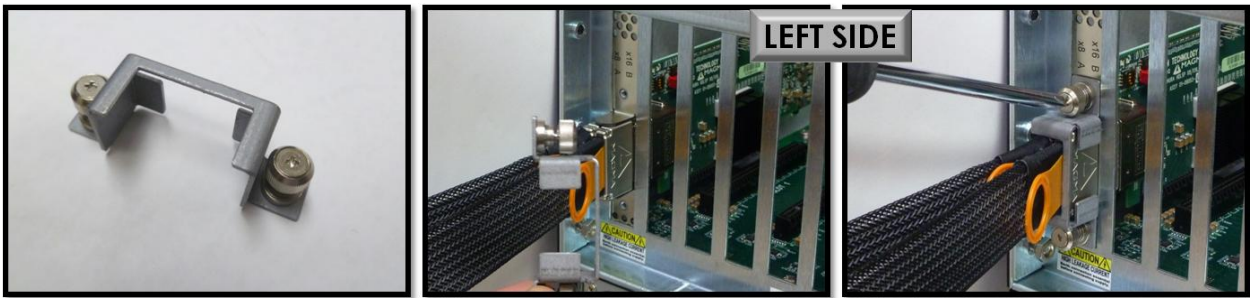

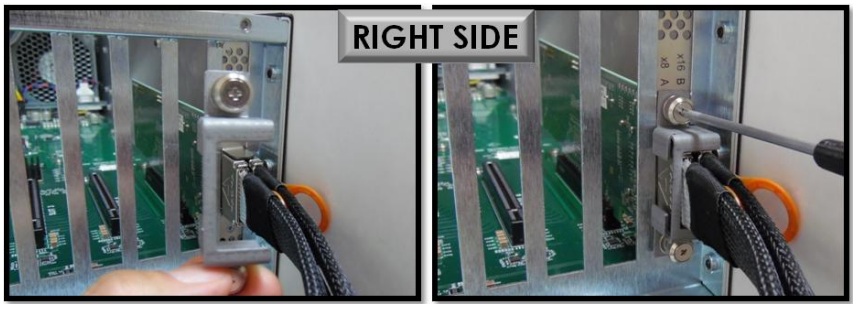

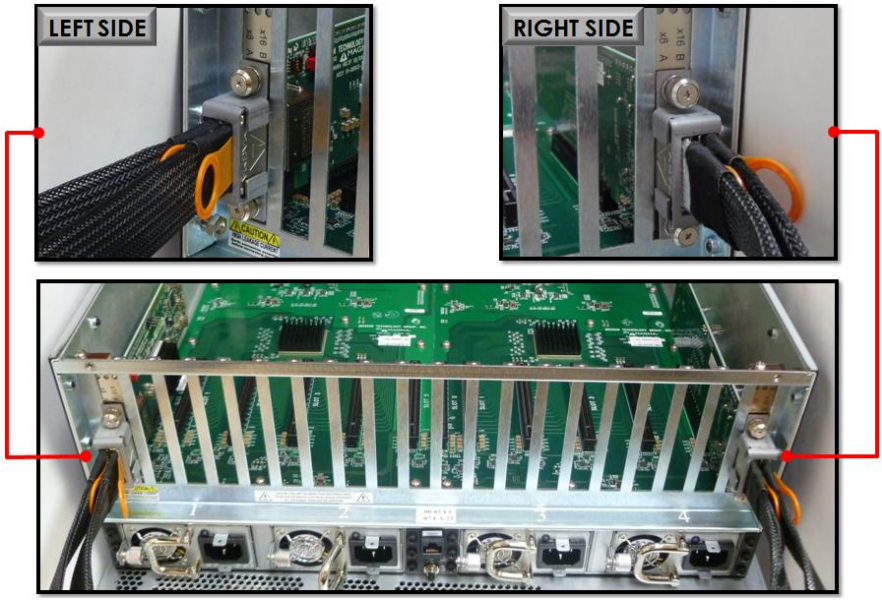

Connect cables to computer / server

1. Take the other end of the 1st cable and connect that to port X8 A of the host interface card.
2. Take the other end of the 2nd cable and connect that to port X16 B of the host interface card.

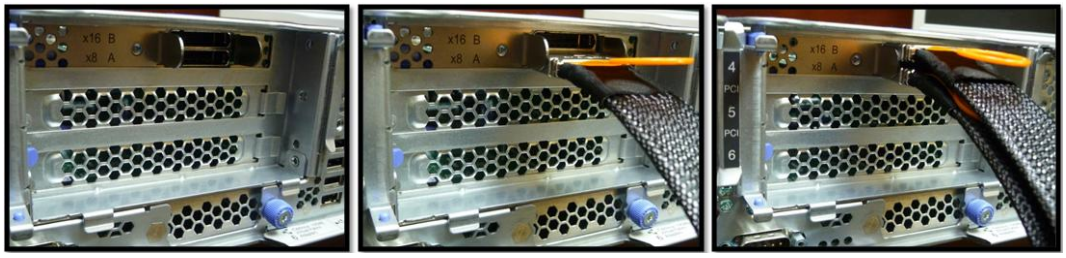

3. Do the same thing to the remaining 3rd and 4th cables. Make sure to connect the end of the cables to the appropriate ports.

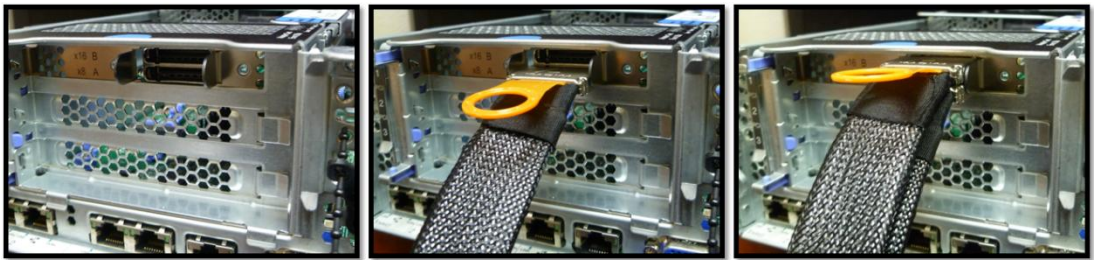

3. Secure all the cables with a retainer clamp.

This is an overview of what it looks like after connecting the cables to Magma EB3600-AB and Host Server / Computer. See picture below

Cable Configurations

The picture below shows the correct & wrong ways to connect the cables to interface cards (host and expansion).

Correct: A to A ; B to B

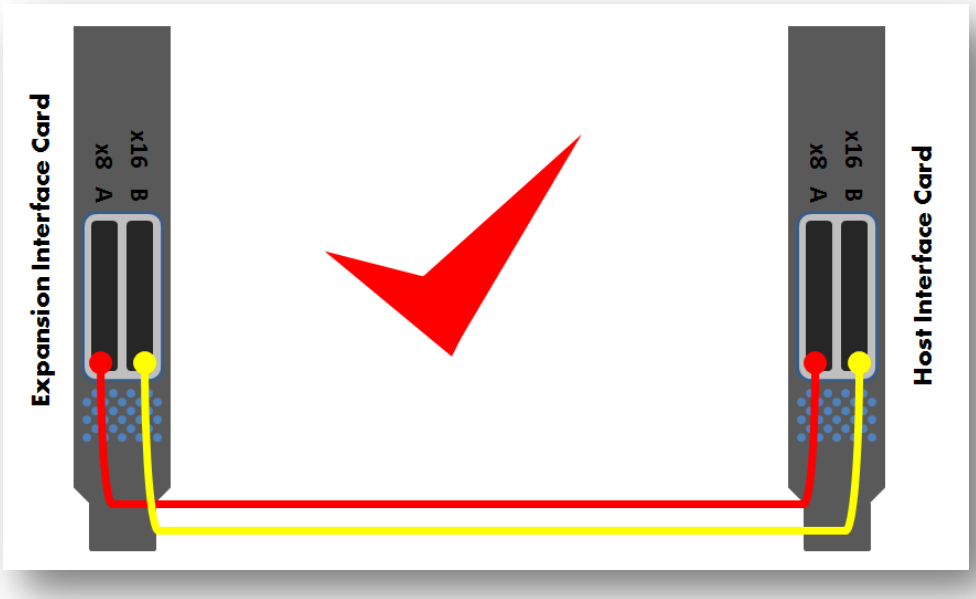

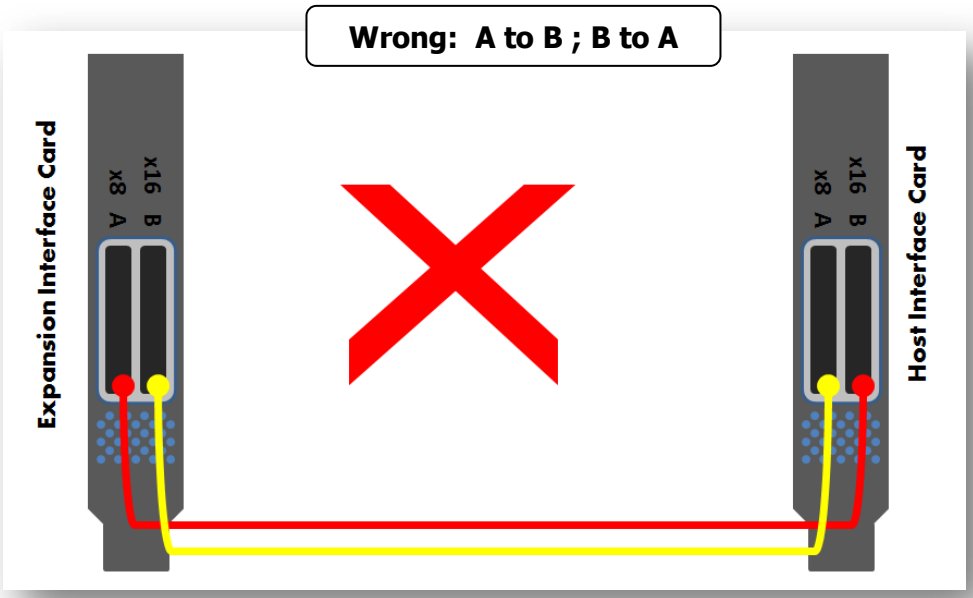

Cable configuration for EB3600-AB

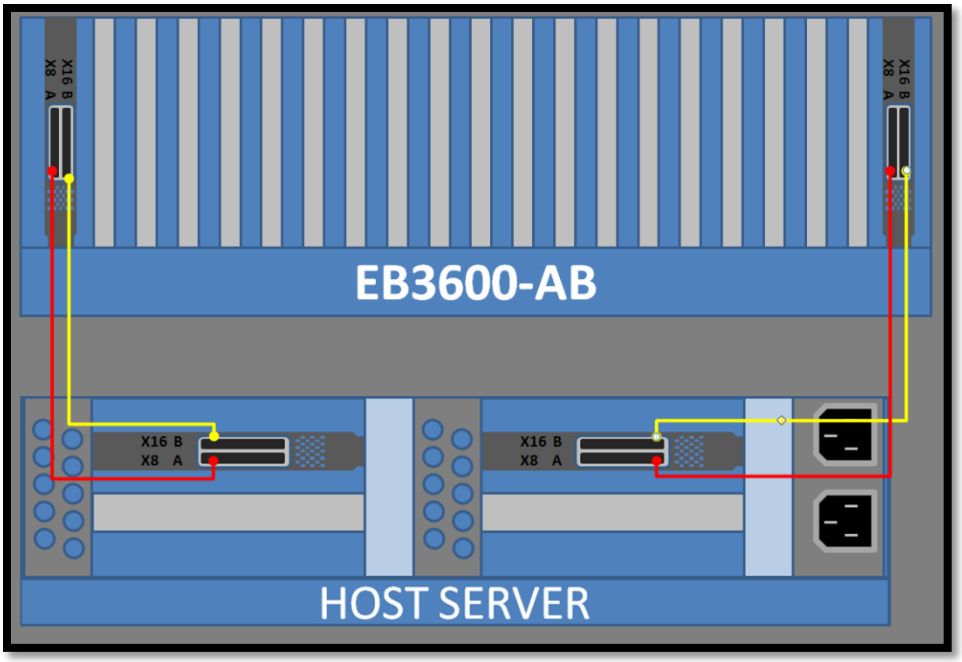

Daisy Chain Configuration

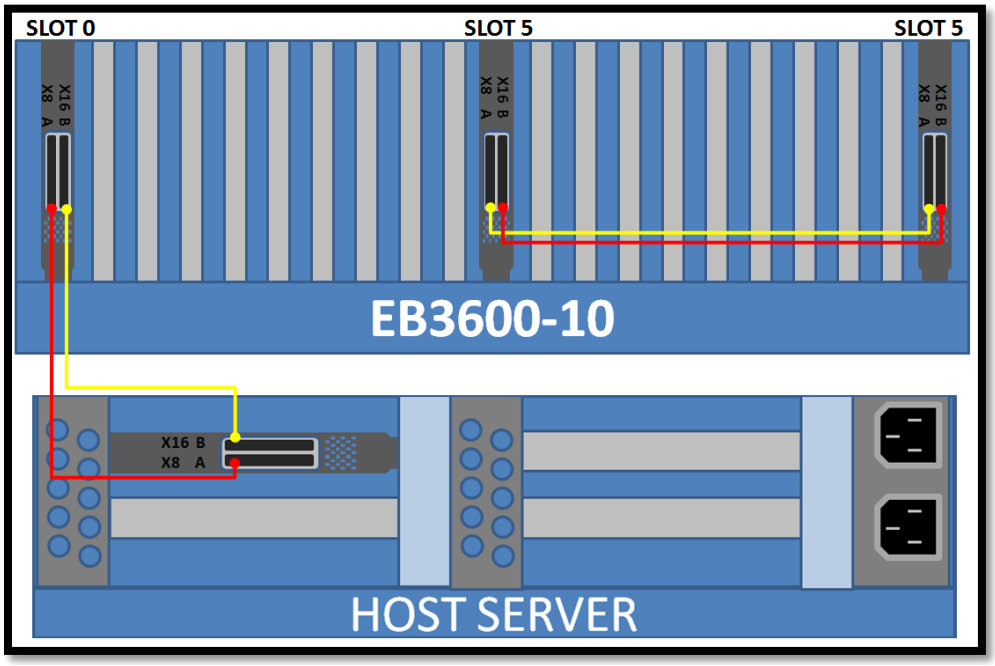

Plug-in PCIe card / GPU

5

Remove filler bracket for the expansion slot you wish to use in the chassis. Install PCI Express card into the slot connector. All slots support any combination of x1, x4, x8 and x16 PCIe cards. All slots are physically x16, but any add-in card is supported.

Make sure that all cards are fully seated in their connectors. When correctly seated, there will be a firm resistance when you pull up gently the card. To keep the cards in place, secure them in the enclosure with their retaining screws.

Connect Auxiliary power to PCIe card if required. A high power PCIe card such as a GPU requires additional power.

Aside from the power being supplied by the PCI-Express slot, which is 75 watts, there is not enough to meet the power requirement for a high-end GPU with power consumption of over 125 Watts. A direct connection to the power supply is needed to obtain additional power. This can be done by using the 6+ 2 pin PCIe cable connector from the expansion unit. Top-of-the-line graphics processing units or GPUs have a built-in AUX power port in which you may attach the PCIe cable connector. The picture below shows how the 6+2 pin connector is attached to the GPU.

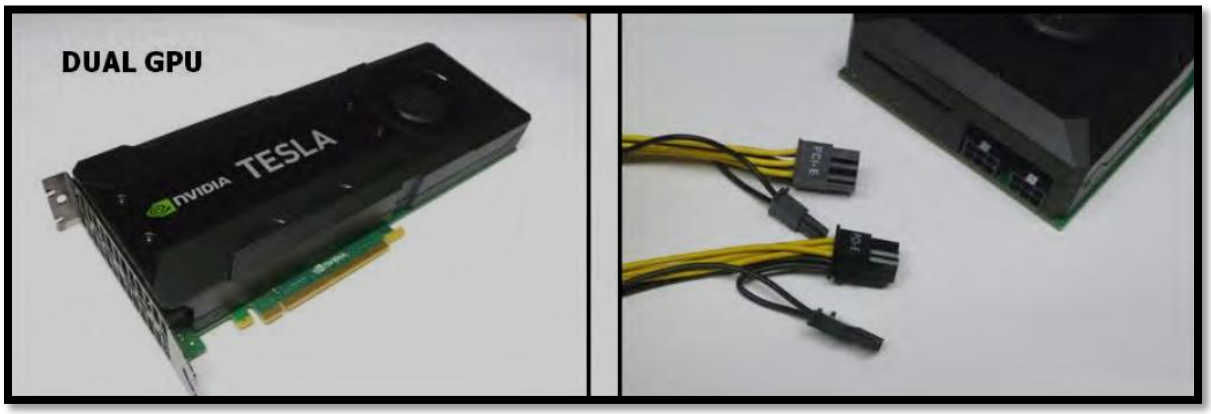

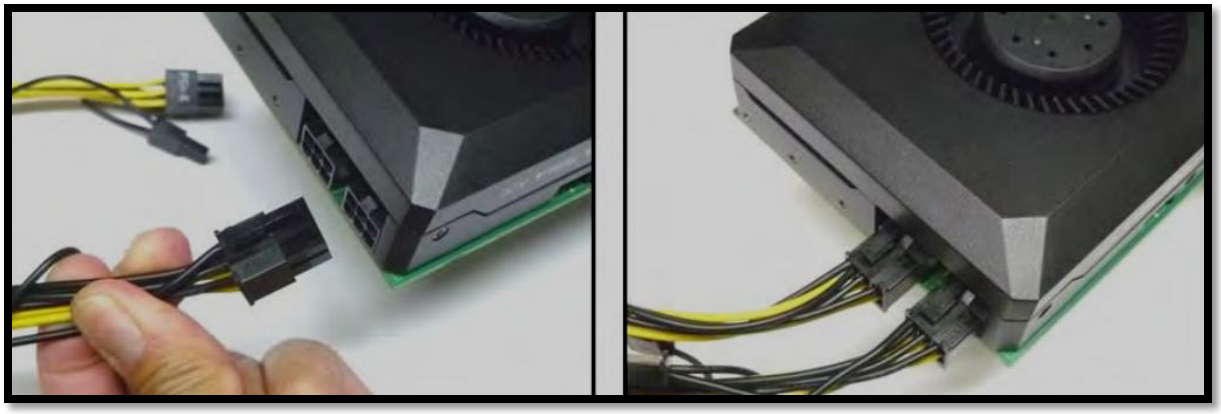

PCIe card Memory Requirements

Always check the general system and hardware requirements as well as optimal CPU and GPU settings when using High Power GPUs. For example, you are using five XYZ brand Double wide GPUs and each GPU requires 16GB of PCI Memory Address space. In order for these 5 XYZ GPUs to operate properly a total of 80G of host system memory is needed during system boot. The system BIOS, during POST, will typically check for equivalent host system memory to be able to support PCI address space. The host computer should match or exceed the memory requirements of the total GPU PCI address space to achieve better performance and avoid problems that may cause the entire system to malfunction. Random crashes and other unexpected errors can occur if GPU memory requirements are not met or the system may not boot at all if the BIOS checks for and sees a mismatch on PCI address space and host system memory capacity. Check with GPU manufacturers for details on memory and systems requirements.

NOTE
Increasing the size of the memory may not be enough for some systems, adjusting the settings in BIOS of the host system accordingly might be required (i.e. enable above 4G memory as well as increase MMIO space accordingly).

PCIe card Power Requirements

Power consumption is crucial for all CPUs and GPUs and other High-End Power Hungry PCIe cards. GPUs consume a great deal of power. As the processing power of graphic cards has increased, so has their demand for electrical power. Due to the limitations of the card slot PCI-Express connector that only supplies 75 Watts of power, present GPU cards with power consumption of over 75 Watts now includes a combination of six-pin (75 W) and or eight-pin (150 W) connectors. If these are not available, you can use the internal AUX power connectors in the expansion unit (see picture below).

There are **18 (6+2 pin) PCIe AUX** power connectors available in the expansion unit for providing extra power to PCIe cards / GPUs.

For example, when using a GPU card that has a maximum power consumption of 225W you would need to use two six-pin power connectors.

Number of Pins	Watt
6 pin connector	provides 75 Watts
8 pin connector	provides 150 Watts

Magma EB3600-AB uses a 6+2 pin PCIe power connectors. It can be used as 6-pin or 8-pin connector depending on what the PCI-E card or GPU required.

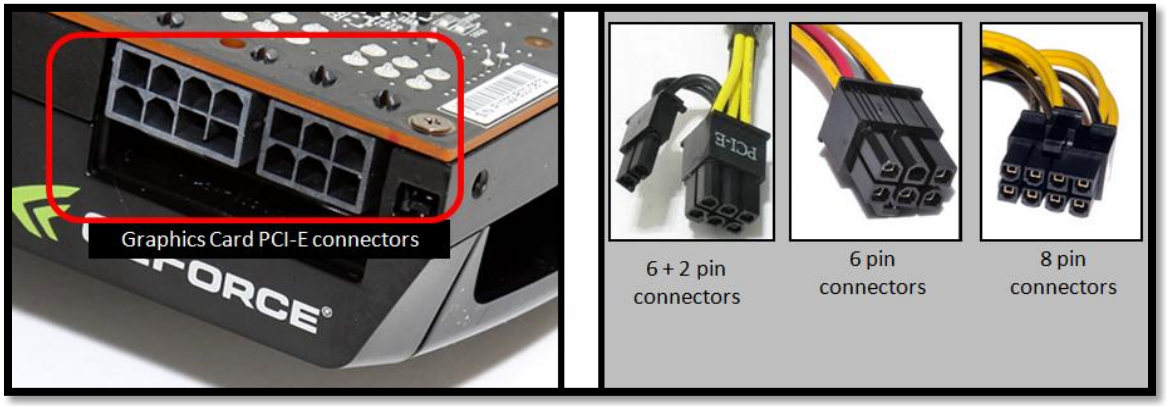

K80 Installation

1. Connect breakout auxiliary power adapter to K80 power connector.
2. Remove slot fillers.
3. Align K80 on top of the PCIe slot and slowly push it down until firmly seated.
4. Secure it with the two screws.
5. Connect the EB3600-AB auxiliary power connector to the K80 breakout auxiliary power adapter.

The K80 comes with a breakout auxiliary power adapter.

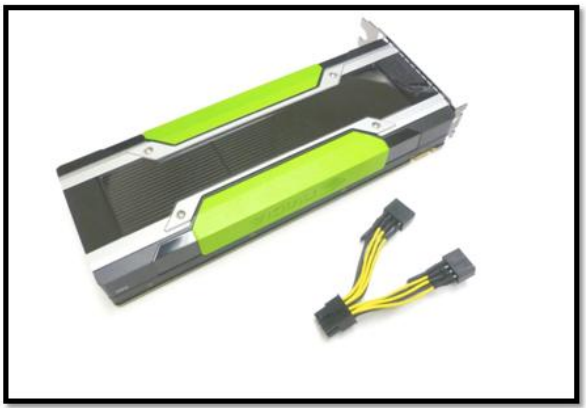
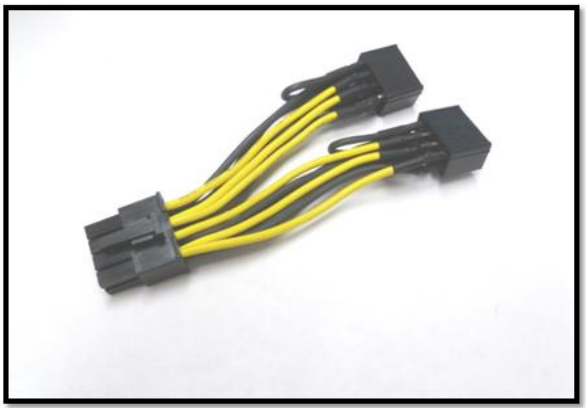

Connect the breakout auxiliary power adapter to K80 power connector.

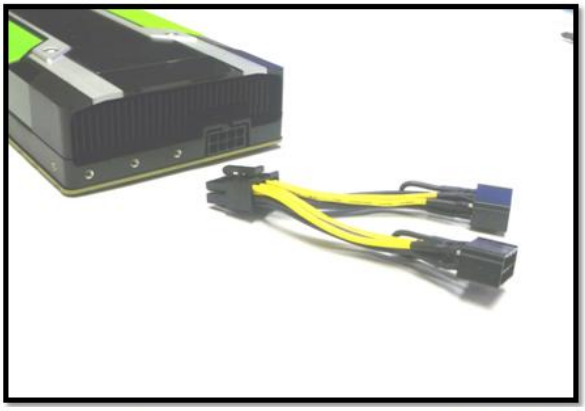
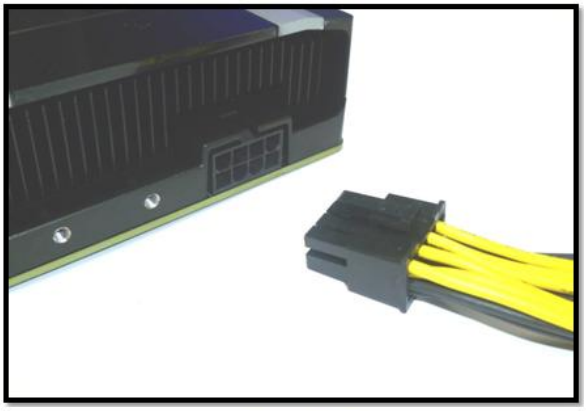
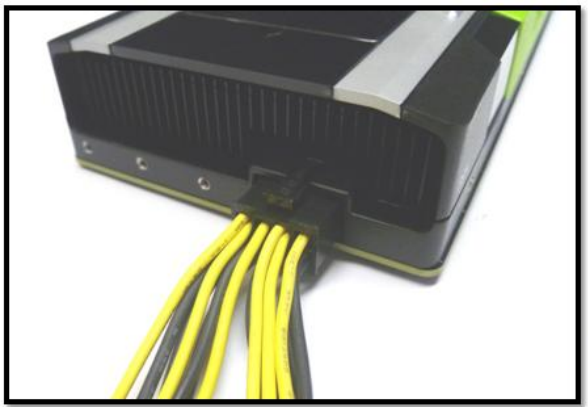
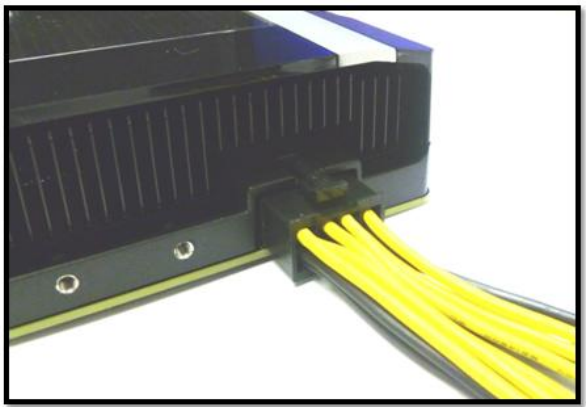

Remove slot fillers.

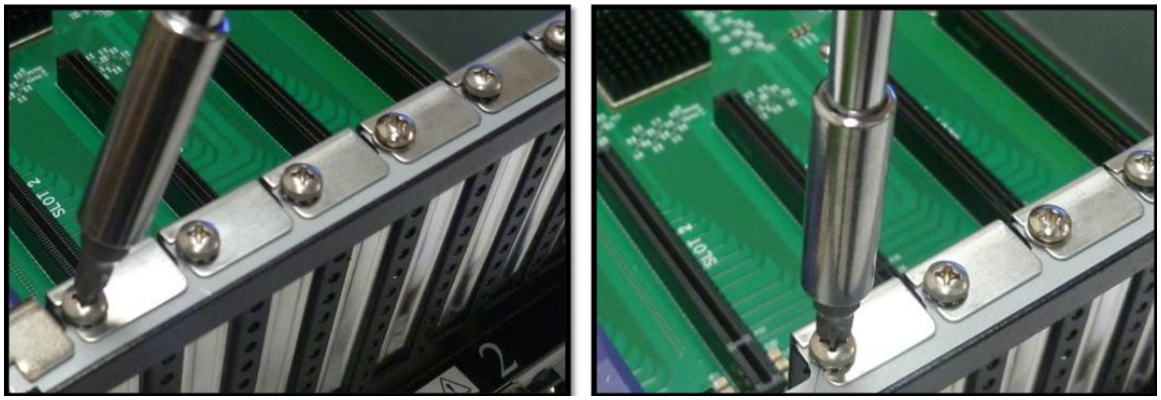

Align K80 on top of the PCIe slot and slowly push it down until firmly seated and secure it.

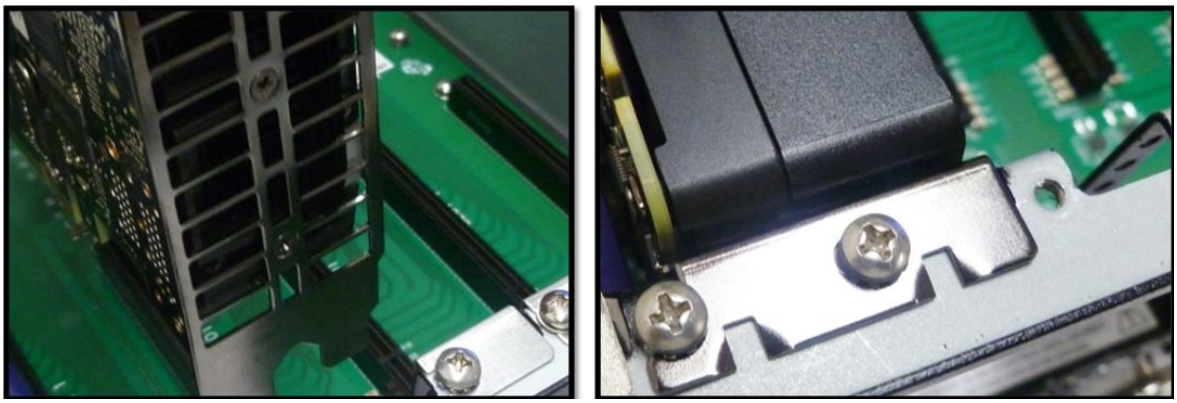

Connect the auxiliary power connector to the K80 breakout auxiliary power adapter.

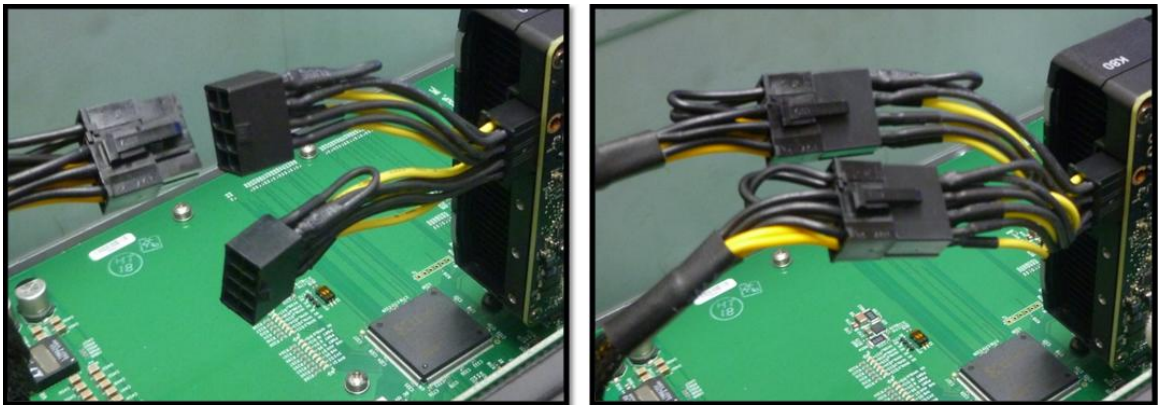

Connect Power Cord / Cable 6

- Plug: 15A 110-120V | Connector: 15A 110-120v. Magma only provides the 110-120v power cord.

NOTE
User can also use 15A 220v-230v power cord / plug. Power Plug and Electrical outlets vary from country to country.

.

Plug-in all power cords to the expansion chassis. Each supplied power supply will come with a power cord.
Up to four Power Cords for EB3600-AB.
A single expansion backplane has two power supply modules that require 2 power cords.

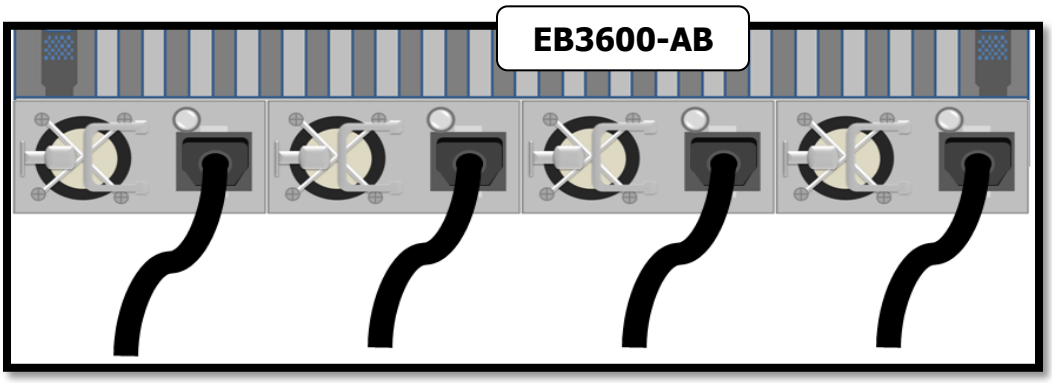

Connect to Electrical Outlets 7

Connect power cords to electrical outlets. When using four 110v power cords it is highly recommended to connect them into two or more 110v electrical outlets on different circuit lines to prevent electrical overloads. This also applies to 220v power plug. Be cautious, practice safe and correct methods when powering up your EB3600-AB expansion unit. Pictures below are different configurations of supplying power to the expansion unit.

Is it ok to connect four 1200W Power Supply modules to 120V?

Answer:

110V	220V
15 amps x 110 volts = 1650 watts	15 amps x 220 volts = 3300
20 amps x 110 volts = 2200 watts	20 amps x 220 volts = 4400
30 amps x 110 volts = 3300 watts	30 amps x 220 volts = 6600
120V	**230V**
15 amps x 120 volts = 1800 watts	15 amps x 230 volts = 3450
20 amps x 120 volts = 2400 watts	20 amps x 230 volts = 4600
30 amps x 120 volts = 3600 watts	30 amps x 230 volts = 6900

Using the above mathematical equations you can only run a single 1200W device on either 15 or 20 amp lines regardless of whether it is 120 or 110 volts. One circuit for each 1200 watt device. The power supplies will support up to 240V operation for other geographies.

If you have 30 amp, 110 or 120 volt lines you can run two 1200 watt devices.

WARNING

DO NOT use anything that uses the same amount of watts that your circuit can handle, for example, if you have a 120 volt outlet on a 15 amp circuit the max for that outlet is 1800, thus you need to stay WELL UNDER that amount. If you use exactly 1800 watts and the breaker doesn't trip then the resistance of the wires and connections can heat up causing a fire. The further from the breaker box the greater the resistance.

volts times amps = watts
watts divided by volts = amps
watts divided by amps = volts

Prior to powering up the system, we recommend that you check your breaker box for the amps for each circuit, commercial buildings or homes are rated 120 volts (note that double breakers are double the current, if your household voltage is 120 then double breakers are 240 volts)

IMPORTANT

Electrical equipment or appliances require a set amount of volts; you must make sure you plug it into the right voltage.

In order to power up the system you would need sufficient circuits. Like other appliances, EB3600-AB expansion unit requires a set amount of volts.

Use two separate circuit lines.

This applies to 110v-120V and 220V-230V. **The image below is just an example. Electrical outlets vary from country to country.**

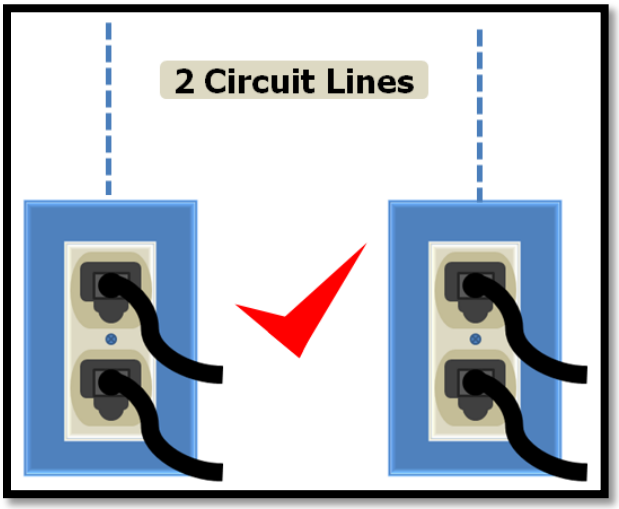

Don't use multiple electrical outlets on one circuit line.

This applies to 110v-120V and 220V-230V. **The image below is just an example. Electrical outlets vary from country to country.**

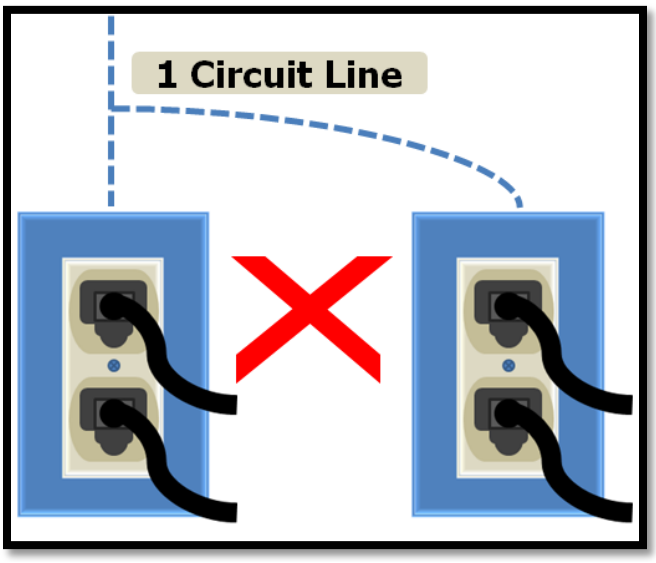

A power strip populated with four power cords should not be connected on a single electrical outlet.

This applies to 110v-120V and 220V-230V.

The image is just an example. Electrical outlets vary from country to country.

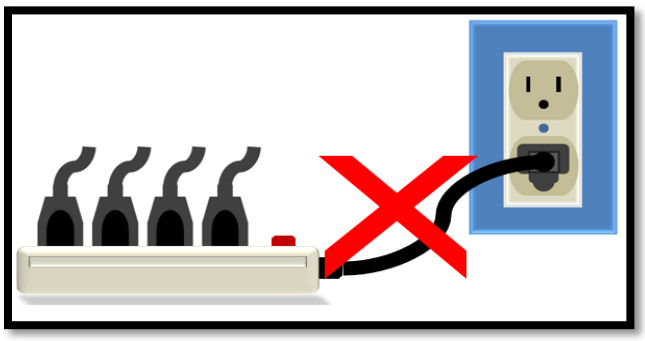

Not recommended (especially for 110-120V) since each power strip is limited to 15 Amps.

This applies to 110v-120V and 220V-230V.

The image is just an example. Electrical outlets vary from country to country.

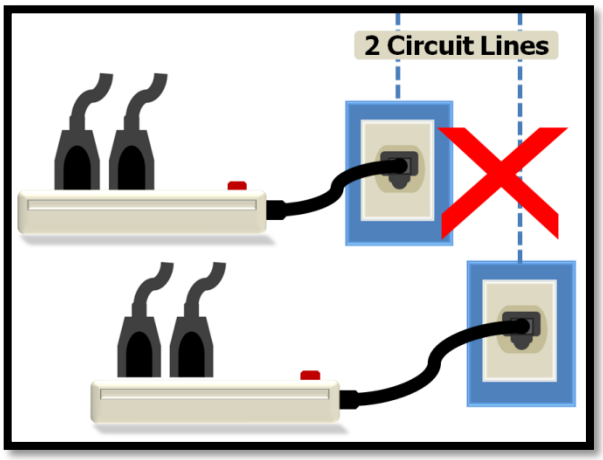

Avoid using two electrical outlets on one circuit line.

This applies to 110v-120V and 220V-230V.

The image is just an example. Electrical outlets vary from country to country.

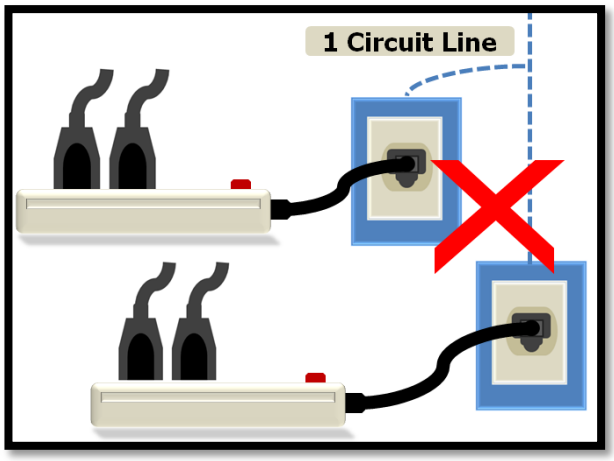

Once you have plugged in all power cables to proper electrical outlets or turned the power strip switch to ON position, all AMBER LEDs are immediately illuminated on the back of the power supply unit. Each power supply module is designated with one indicator LED.

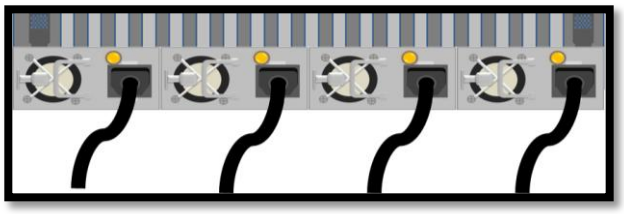

Two Solid Green LEDs (3.3V) are illuminated on both backplanes when the power cable is connected. This signifies the unit is on "standby mode.

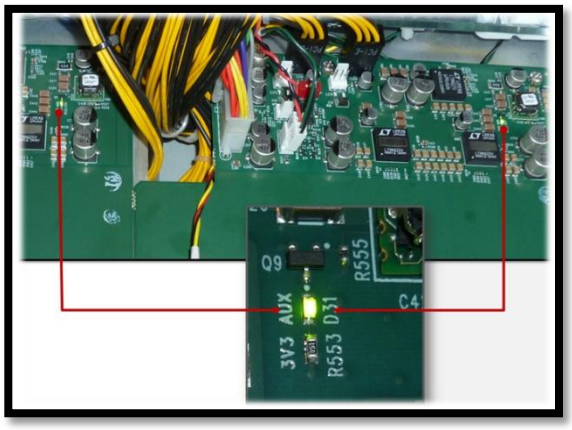

Power ON EB3600-AB 8

Press the Power Button on the front switch to power up the EB3600-AB unit. Turn ON the Magma chassis first before powering ON the host computer.

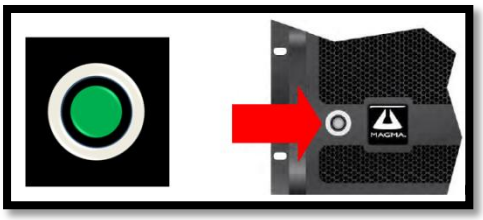

Check your installation **before** powering up the Magma Expansion chassis for the first time. Although the power supply has an over voltage protection device built into it, it may not "trip" in time to fully protect a device that has been improperly connected, or whose power cable has been damaged.

You must apply power to the expansion chassis BEFORE you power up your computer. This will allow the higher numbered buses in the bus hierarchy to be at a stable state when the host computer issues its master power-on bus reset.

Each power supply has individual power LEDs to indicate its power status. The power supply has no power switch that you can flip ON and OFF. Once the expansion unit (power cable) is plugged in to an electrical outlet the entire system is ready to be powered up through the main power switch (push button) located on the front panel.

One solid Amber LED (D5) and three solid Green LEDs (D3, D8, and D7) are illuminated on the expansion interface card. Upon connecting the power cable to an electrical outlet and applying power to the expansion unit, the following LEDs are lit.

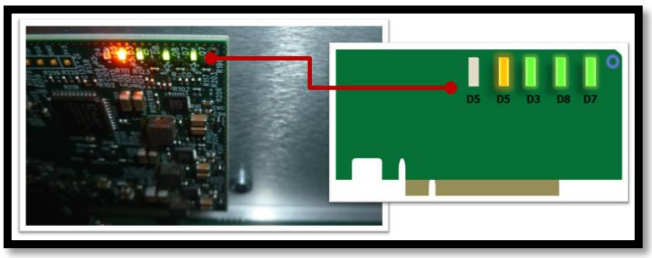

The LED on the top should turn AMBER when the power cord is connected to the device from the outlet. When the front button On/Off switch is activated or pressed, the AC POWER LED should turn green

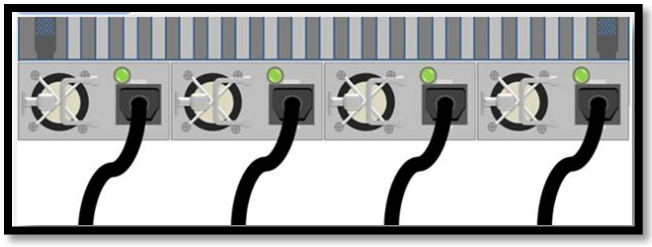

Power ON Computer 9

To effectively use your Magma chassis as part of your computer system, ensure that all the proper connections are made. Then power on your computer. This will enable your Magma chassis to turn ON.

Hardware Check 10

Once you have turned ON the Magma EB3600-AB and the host computer, the next thing to do is to check the LED status on the hardware. Verify that the following LEDs on the expansion card, host card, backplane, and front panel are illuminated.

- Interface Card and Expansion card operating normally should show up with four Solid Green LEDs (see picture below). Reset is de-asserted, LED D5 is turned off.
- 15 Solid Green LEDs on each backplane are illuminated (see picture below).
- Check LED "PORT 0 - D9" status, see if it is illuminated solid green or blinking fast.
- 6 solid Green LEDs are lit on the front Panel Status LED indicator (see picture below).

Check Expansion and Host Cards LEDs

The picture below shows the number of Solid Green LEDS that are illuminated on the Expansion and Host Interface cards when operating normally.

X16 Link

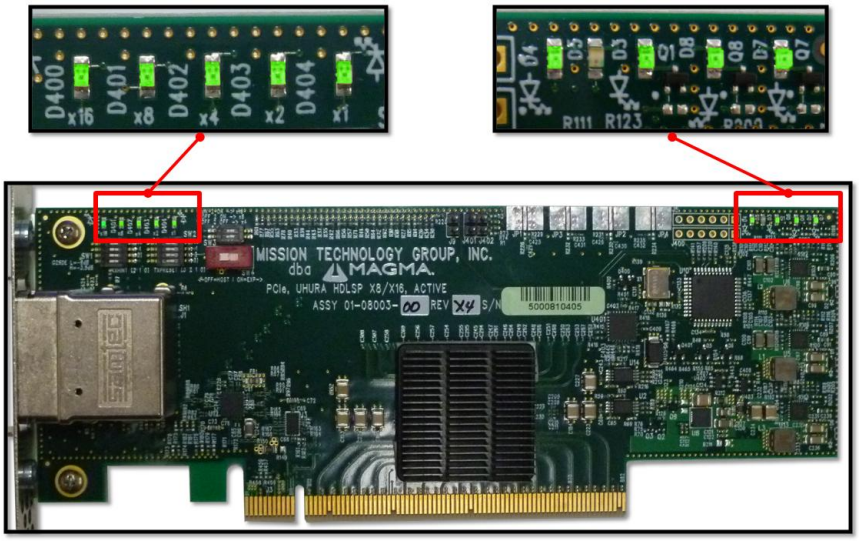

X8 Link

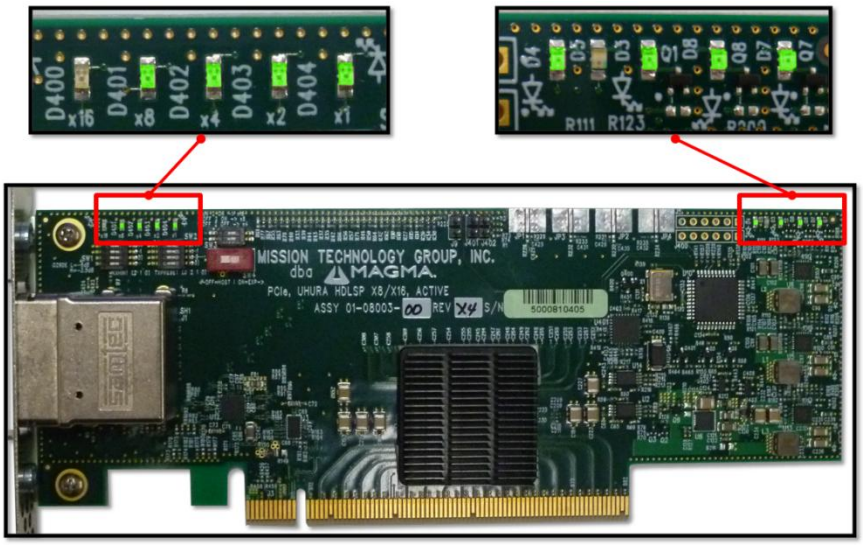

Check Front Panel Status LEDs

6 solid Green LEDs are illuminated on the Front Panel Status indicator when the system is up and running.

Check Backplane LEDs

15 Solid Green LEDs (on each backplane) are illuminated when the system is turned on.

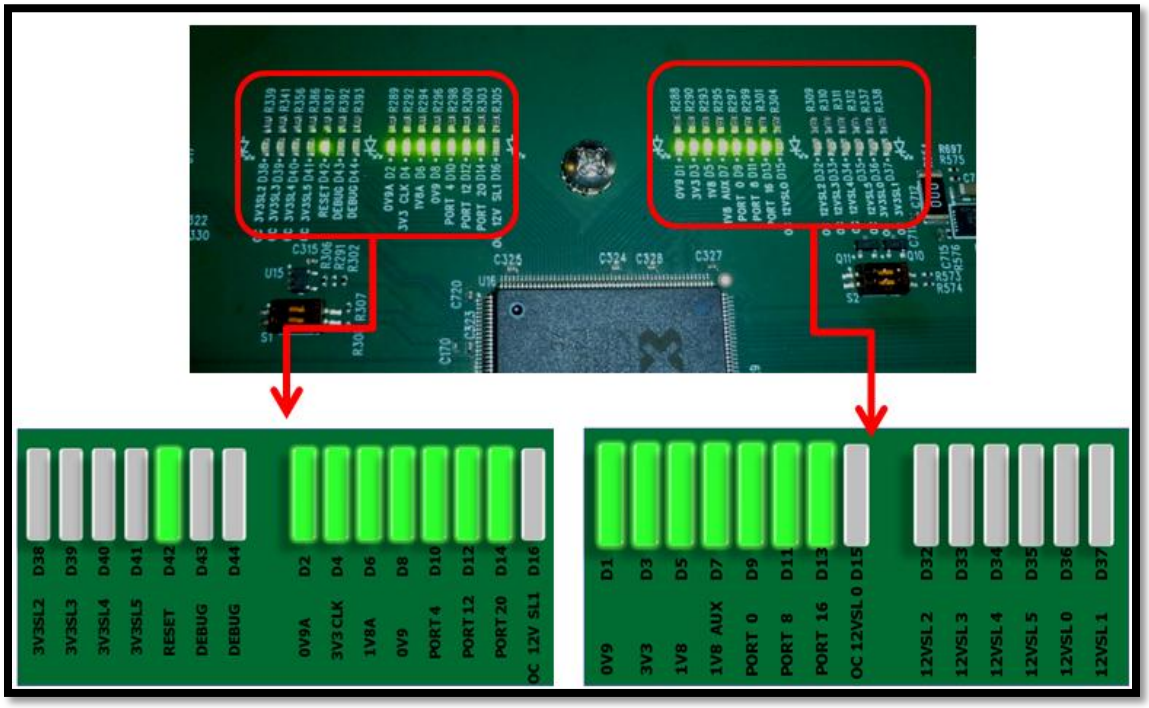
D38 D39 D40 D41 D42 D43 D44
3V3SL2 3V3SL3 3V3SL4 3V3SL5 RESET DEBUG DEBUG
D2 D4 D6 D8 D10 D12 D14 D16
0V9A 3V3 CLK 1V8A 0V9 PORT 4 PORT 12 PORT 20 OC 12V SL1
D1 D3 D5 D7 D9 D11 D13 D15
0V9 3V3 1V8 1V8 AUX PORT 0 PORT 8 PORT 16 OC 12VSL 0
D32 D33 D34 D35 D36 D37
12VSL 2 12VSL 3 12VSL 4 12VSL 5 12VSL 0 12VSL 1

LED	STATUS	COLOR
D14, D12, D10, D8, D6, D4, D2, D42	ON	Solid Green
D1, D3, D5, D7, D9, D11, D13	ON	Solid Green
D33, D39, D40, D41, D43, D44, D16	OFF	None
D37, D36, D35, D33, D32, D15	OFF	None

Verify Installation 10

Windows

No additional software or drivers are needed. The operating system should automatically recognize the Magma expansion chassis.

To verify a successful installation on Windows, find the 'My Computer' icon and "right click" on it. Then select 'Manage' from the pop-up menu.

Next, click on 'Device Manager' in the leftmost Computer Management window. Finally, click on the View Menu and select View Devices by Connection.

Open ACPI (BIOS) □ Open PCI Bus□Click the '+' to expand sub devices several times until your reach PCI Express Root Port with a PCI Standard PCI-to-PCI Bridge beneath it.

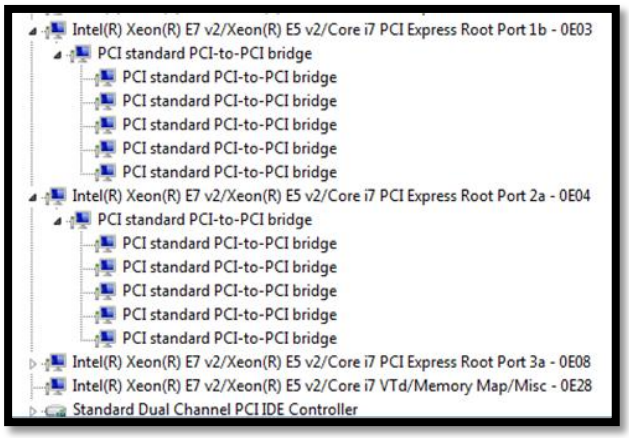
Intel(R) Xeon(R) E7 v2/Xeon(R) E5 v2/Core i7 PCI Express Root Port 1b - 0E03
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
Intel(R) Xeon(R) E7 v2/Xeon(R) E5 v2/Core i7 PCI Express Root Port 2a - 0E04
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
PCI standard PCI-to-PCI bridge
Intel(R) Xeon(R) E7 v2/Xeon(R) E5 v2/Core i7 PCI Express Root Port 3a - 0E08
Intel(R) Xeon(R) E7 v2/Xeon(R) E5 v2/Core i7 VTd/Memory Map/Misc - 0E28
Standard Dual Channel PCI IDE Controller

The Device Manager will display the available slots within the chassis. As reference, you can determine which slot you inserted your PCIe card in by following the outline that is shown below.

The Magma chassis has 2 PCIe Switch devices that enable the slots to work:

- The 1st PCIe Switch controls Slots 1,2,3,4,5
- The 2nd PCIe Switch controls slots 0,1,2,3,4,

If the verification is successful, you can install 3rd Party cards as well as auxiliary peripherals, such as hard drives into the chassis.

Linux

Once the EB360-AB expansion unit has been installed in a Linux-based system, its installation can be verified by typing the following command lines:

lspci –t Displays the overall structure of the PCIe expansion system

lspci –vv Lists additional information about the PCIe switch (in our case it will list the Integrated Device Technology (IDT) information.

lspci –vvv Displays the most comprehensive information about the expansion system.

Typical output from lspci –vvv is verbose, but you can dig through the information to find very important information. There are so many registers and settings associated with PCI Express Switches.

For example, the image below is showing the Magma Chassis on Bus 2, Device 0, and Function 0. Some information has been deleted, but notice the **Link Supported Speed is 8GT/s, Width x16** . This is helpful to know that the chassis is configured for x8 PCI Express Speeds highlighted in red

In order to obtain detailed information you must login as a sudo user in Linux and type "lspci –vv"

```
02:00.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa) (prog-if 00 [Normal decode])
        Control: I/O+ Mem+ BusMaster+ SpecCycle- MemWINV- VGASnoop- ParErr- Stepping- SERR- FastB2B- DisINTx+
        Status: Cap+ 66MHz- UDF- FastB2B- ParErr- DEVSEL=fast >TAbort- <TAbort- <MAbort- >SERR- <PERR- INTx-
        Latency: 0, Cache Line Size: 64 bytes
        Region 0: Memory at f7300000 (32-bit, non-prefetchable) [size=256K]
        Bus: primary=02, secondary=03, subordinate=08, sec-latency=0
        Secondary status: 66MHz- FastB2B- ParErr- DEVSEL=fast >TAbort- <TAbort- <MAbort- <SERR- <PERR-
        BridgeCtl: Parity- SERR- NoISA- VGA- MAbort- >Reset- FastB2B-
                PriDiscTmr- SecDiscTmr- DiscTmrStat- DiscTmrSERREn-
        Capabilities: [40] Power Management version 3
                Flags: PMEClk- DSI- D1- D2- AuxCurrent=0mA PME(D0+,D1-,D2-,D3hot+,D3cold+)
                Status: D0 NoSoftRst+ PME-Enable- DSel=0 DScale=0 PME-
        Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
                Address: 00000000feeff00c  Data: 41d1
                Masking: 000000ff  Pending: 00000000
        Capabilities: [68] Express (v2) Upstream Port, MSI 00
                DevCap:  MaxPayload 2048 bytes, PhantFunc 0
                         ExtTag- AttnBtn- AttnInd- PwrInd- RBE+ SlotPowerLimit 75.000W
                DevCtl:  Report errors: Correctable- Non-Fatal- Fatal- Unsupported-
                         RlxdOrd- ExtTag- PhantFunc- AuxPwr- NoSnoop+
                         MaxPayload 128 bytes, MaxReadReq 128 bytes
                DevSta:  CorrErr+ UncorrErr- FatalErr- UnsuppReq+ AuxPwr- TransPend-
                LnkCap:  Port #0, Speed 8GT/s, Width x16, ASPM L1, Exit Latency L0s <4us, L1 <4us
                         ClockPM- Surprise- LLActRep- BwNot-
                LnkCtl:  ASPM Disabled; Disabled- CommClk-
                         ExtSynch- ClockPM- AutWidDis- BWInt- AutBWInt-
                LnkSta:  Speed 8GT/s, Width x8, TrErr- Train- SlotClk- DLActive- BWMgmt- ABWMgmt-
                DevCap2: Completion Timeout: Not Supported, TimeoutDis-, LTR+, OBFF Via message
                DevCtl2: Completion Timeout: 50us to 50ms, TimeoutDis-, LTR+, OBFF Disabled
                LnkCtl2: Target Link Speed: 8GT/s, EnterCompliance- SpeedDis-
                         Transmit Margin: Normal Operating Range, EnterModifiedCompliance- ComplianceSOS-
                         Compliance De-emphasis: -6dB
                LnkSta2: Current De-emphasis Level: -6dB, EqualizationComplete+, EqualizationPhase1+
                         EqualizationPhase2+, EqualizationPhase3+, LinkEqualizationRequest+
        Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
        Capabilities: [100 v1] Device Serial Number aa-87-00-10-b5-df-0e-00
```

Use the "lspci | grep 8796" command to check that the Magma card slot devices are detected (see image below).

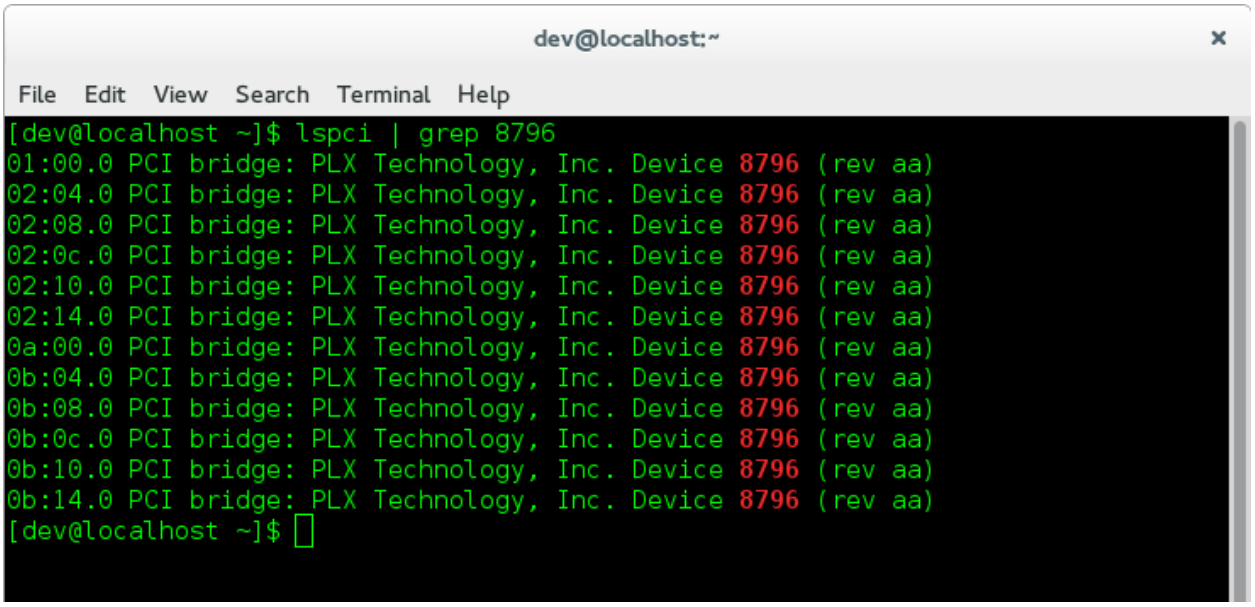
dev@localhost:~
File Edit View Search Terminal Help
[dev@localhost ~]$ lspci | grep 8796
01:00.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
02:04.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
02:08.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
02:0c.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
02:14.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
0a:00.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
0b:04.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
0b:08.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
0b:0c.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
0b:10.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
0b:14.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa)
[dev@localhost ~]$

Below is the output text of "lspci-vv". Showing all Magma card slot devices with two GPU cards installed. Magma devices are highlighted in **red**. Two GPUs plugged in are highlighted in **green.**

01:00.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Memory at f7100000 (32-bit, non-prefetchable) [size=256K]
Bus: primary=01, secondary=02, subordinate=07, sec-latency=0
I/O behind bridge: 0000e000-0000efff
Memory behind bridge: f6000000-f70fffff
Prefetchable memory behind bridge: 00000000e0000000-00000000f1ffffff
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Upstream Port, MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [b00] Latency Tolerance Reporting
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

02:04.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Bus: primary=02, secondary=03, subordinate=03, sec-latency=0
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Downstream Port (Slot+), MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00

Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

02:08.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev aa) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Bus: primary=02, secondary=04, subordinate=04, sec-latency=0
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Downstream Port (Slot+), MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

02:0c.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Bus: primary=02, secondary=05, subordinate=05, sec-latency=0
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Downstream Port (Slot+), MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

02:10.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Bus: primary=02, secondary=06, subordinate=06, sec-latency=0
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Downstream Port (Slot+), MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

02:14.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Bus: primary=02, secondary=07, subordinate=07, sec-latency=0

I/O behind bridge: 0000e000-0000efff
Memory behind bridge: f6000000-f70fffff
Prefetchable memory behind bridge: 00000000e0000000-00000000f1ffffff
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Downstream Port (Slot+), MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

07:00.0 VGA compatible controller: NVIDIA Corporation GK107 [NVS 510] (rev a1) (prog-if 00 [VGA controller])
Subsystem: NVIDIA Corporation Device 0967
Flags: bus master, fast devsel, latency 0, IRQ 60
Memory at f6000000 (32-bit, non-prefetchable) [size=16M]
Memory at e0000000 (64-bit, prefetchable) [size=256M]
Memory at f0000000 (64-bit, prefetchable) [size=32M]
I/O ports at e000 [size=128]
[virtual] Expansion ROM at f7000000 [disabled] [size=512K]
Capabilities: [60] Power Management version 3
Capabilities: [68] MSI: Enable+ Count=1/1 Maskable- 64bit+
Capabilities: [78] Express Endpoint, MSI 00
Capabilities: [b4] Vendor Specific Information: Len=14 <?>
Capabilities: [100] Virtual Channel
Capabilities: [128] Power Budgeting <?>
Capabilities: [600] Vendor Specific Information: ID=0001 Rev=1 Len=024 <?>
Capabilities: [900] #19
Kernel driver in use: nvidia
Kernel modules: nouveau, nvidia

07:00.1 Audio device: NVIDIA Corporation GK107 HDMI Audio Controller (rev a1)
Subsystem: NVIDIA Corporation Device 0967
Flags: bus master, fast devsel, latency 0, IRQ 17
Memory at f7080000 (32-bit, non-prefetchable) [size=16K]
Capabilities: [60] Power Management version 3
Capabilities: [68] MSI: Enable- Count=1/1 Maskable- 64bit+
Capabilities: [78] Express Endpoint, MSI 00
Kernel driver in use: snd_hda_intel
Kernel modules: snd_hda_intel

0a:00.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Memory at f5100000 (32-bit, non-prefetchable) [size=256K]
Bus: primary=0a, secondary=0b, subordinate=10, sec-latency=0
I/O behind bridge: 0000d000-0000dfff
Memory behind bridge: f4000000-f50fffff
Prefetchable memory behind bridge: 00000000c0000000-00000000d1ffffff
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Upstream Port, MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [b00] Latency Tolerance Reporting
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport

```
        Kernel modules: shpchp

0b:04.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
        Flags: bus master, fast devsel, latency 0
        Bus: primary=0b, secondary=0c, subordinate=0c, sec-latency=0
        Capabilities: [40] Power Management version 3
        Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
        Capabilities: [68] Express Downstream Port (Slot+), MSI 00
        Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
        Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
        Capabilities: [fb4] Advanced Error Reporting
        Capabilities: [138] Power Budgeting <?>
        Capabilities: [10c] #19
        Capabilities: [148] Virtual Channel
        Capabilities: [e00] #12
        Capabilities: [f24] Access Control Services
        Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
        Kernel driver in use: pcieport
        Kernel modules: shpchp

0b:08.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
        Flags: bus master, fast devsel, latency 0
        Bus: primary=0b, secondary=0d, subordinate=0d, sec-latency=0
        Capabilities: [40] Power Management version 3
        Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
        Capabilities: [68] Express Downstream Port (Slot+), MSI 00
        Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
        Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
        Capabilities: [fb4] Advanced Error Reporting
        Capabilities: [138] Power Budgeting <?>
        Capabilities: [10c] #19
        Capabilities: [148] Virtual Channel
        Capabilities: [e00] #12
        Capabilities: [f24] Access Control Services
        Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
        Kernel driver in use: pcieport
        Kernel modules: shpchp

0b:0c.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
        Flags: bus master, fast devsel, latency 0
        Bus: primary=0b, secondary=0e, subordinate=0e, sec-latency=0
        Capabilities: [40] Power Management version 3
        Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
        Capabilities: [68] Express Downstream Port (Slot+), MSI 00
        Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
        Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
        Capabilities: [fb4] Advanced Error Reporting
        Capabilities: [138] Power Budgeting <?>
        Capabilities: [10c] #19
        Capabilities: [148] Virtual Channel
        Capabilities: [e00] #12
        Capabilities: [f24] Access Control Services
        Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
        Kernel driver in use: pcieport
        Kernel modules: shpchp

0b:10.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
        Flags: bus master, fast devsel, latency 0
        Bus: primary=0b, secondary=0f, subordinate=0f, sec-latency=0
        I/O behind bridge: 0000d000-0000dfff
        Memory behind bridge: f4000000-f50fffff
        Prefetchable memory behind bridge: 00000000c0000000-00000000d1ffffff
        Capabilities: [40] Power Management version 3
        Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
        Capabilities: [68] Express Downstream Port (Slot+), MSI 00
        Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
        Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
```

Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

0b:14.0 PCI bridge: PLX Technology, Inc. Device 8796 (rev a) (prog-if 00 [Normal decode])
Flags: bus master, fast devsel, latency 0
Bus: primary=0b, secondary=10, subordinate=10, sec-latency=0
Capabilities: [40] Power Management version 3
Capabilities: [48] MSI: Enable+ Count=1/8 Maskable+ 64bit+
Capabilities: [68] Express Downstream Port (Slot+), MSI 00
Capabilities: [a4] Subsystem: PLX Technology, Inc. Device 8796
Capabilities: [100] Device Serial Number aa-87-00-10-b5-df-0e-00
Capabilities: [fb4] Advanced Error Reporting
Capabilities: [138] Power Budgeting <?>
Capabilities: [10c] #19
Capabilities: [148] Virtual Channel
Capabilities: [e00] #12
Capabilities: [f24] Access Control Services
Capabilities: [b70] Vendor Specific Information: ID=0001 Rev=0 Len=010 <?>
Kernel driver in use: pcieport
Kernel modules: shpchp

0f:00.0 VGA compatible controller: NVIDIA Corporation GK107 [NVS 510] (rev a1) (prog-if 00 [VGA controller])
Subsystem: NVIDIA Corporation Device 0967
Flags: bus master, fast devsel, latency 0, IRQ 61
Memory at f4000000 (32-bit, non-prefetchable) [size=16M]
Memory at c0000000 (64-bit, prefetchable) [size=256M]
Memory at d0000000 (64-bit, prefetchable) [size=32M]
I/O ports at d000 [size=128]
[virtual] Expansion ROM at f5000000 [disabled] [size=512K]
Capabilities: [60] Power Management version 3
Capabilities: [68] MSI: Enable+ Count=1/1 Maskable- 64bit+
Capabilities: [78] Express Endpoint, MSI 00
Capabilities: [b4] Vendor Specific Information: Len=14 <?>
Capabilities: [100] Virtual Channel
Capabilities: [128] Power Budgeting <?>
Capabilities: [600] Vendor Specific Information: ID=0001 Rev=1 Len=024 <?>
Capabilities: [900] #19
Kernel driver in use: nvidia
Kernel modules: nouveau, nvidia

0f:00.1 Audio device: NVIDIA Corporation GK107 HDMI Audio Controller (rev a1)
Subsystem: NVIDIA Corporation Device 0967
Flags: bus master, fast devsel, latency 0, IRQ 17
Memory at f5080000 (32-bit, non-prefetchable) [size=16K]
Capabilities: [60] Power Management version 3
Capabilities: [68] MSI: Enable- Count=1/1 Maskable- 64bit+
Capabilities: [78] Express Endpoint, MSI 00
Kernel driver in use: snd_hda_intel
Kernel modules: snd_hda_intel

Chapter 3 Advanced Technical Information

EB3600-AB Configurations

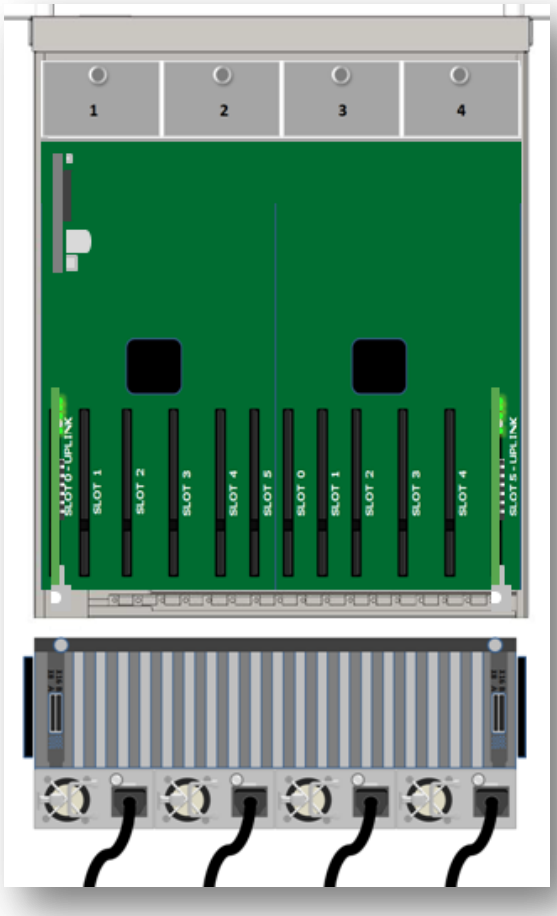

HARDWARE	EB3600-AB
Backplane	2
Expansion Interface Card	2
IO Cable	4
Fan	4
Power Supply	4
6+2pin PCIe Connector	18
Power Cord	4
Host Interface Card	2

Backplane and LEDs

a. 10 PCIe x16 slot (electrical and mechanical)
b. Two designated Link-Up SLOTs for Interface card (see picture below)
c. Slot LEDs, Link and Activity LEDs (see below)

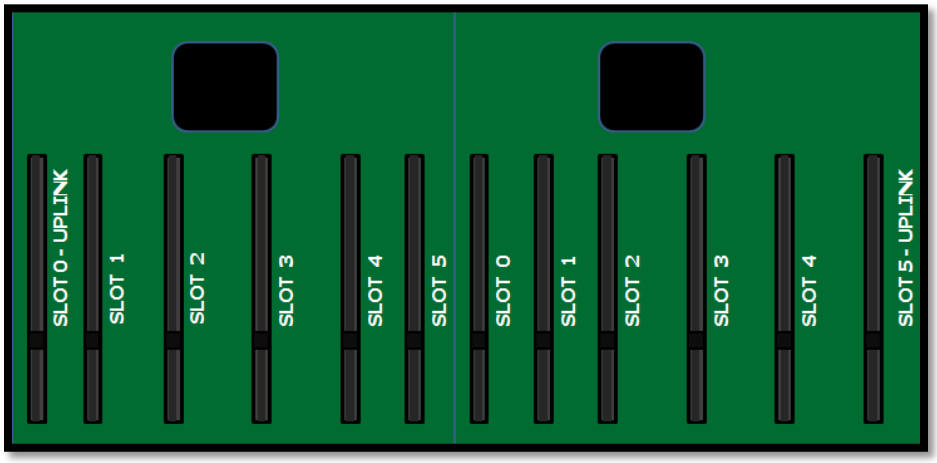

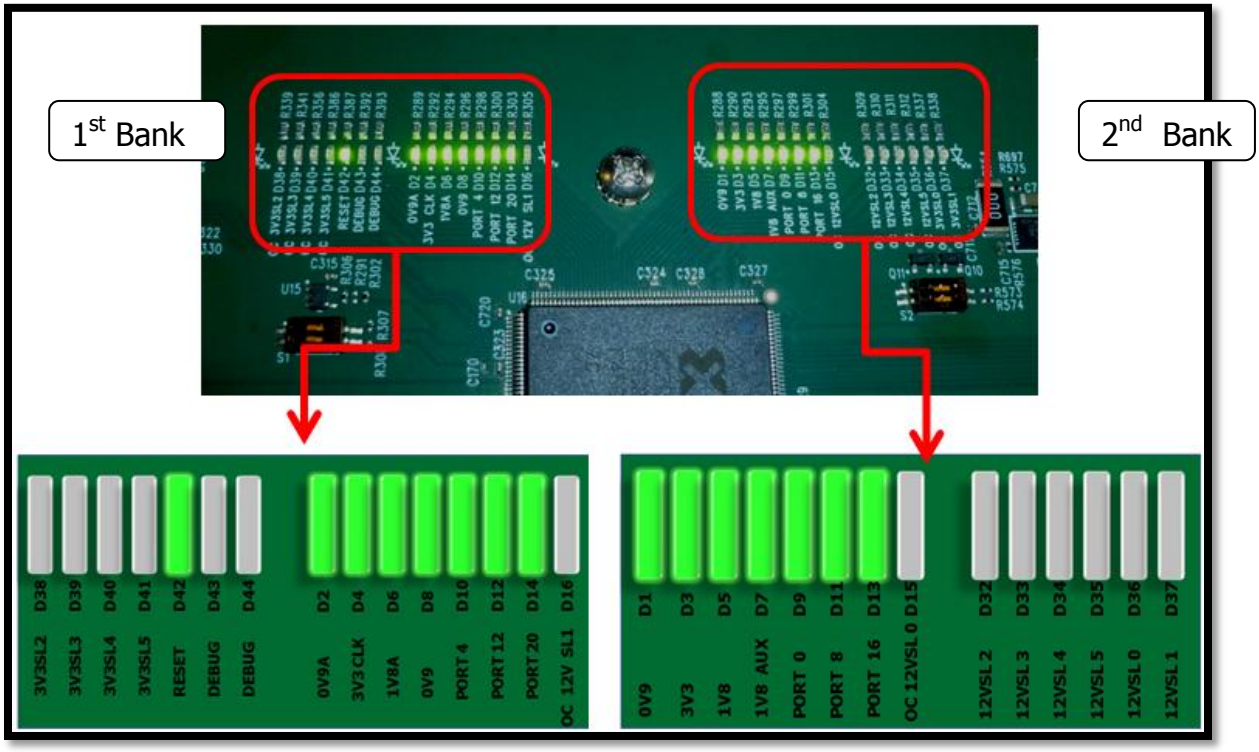
1st Bank
2nd Bank
D38 D39 D40 D41 D42 D43 D44
3V3SL2 3V3SL3 3V3SL4 3V3SL5 RESET DEBUG DEBUG
D2 D4 D6 D8 D10 D12 D14 D16
0V9A 3V3 CLK 1V8A 0V9 PORT 4 PORT 12 PORT 20 OC 12V SL1
D1 D3 D5 D7 D9 D11 D13 D15
0V9 3V3 1V8 1V8 AUX PORT 0 PORT 8 PORT 16 OC 12VSL 0
D32 D33 D34 D35 D36 D37
12VSL 2 12VSL 3 12VSL 4 12VSL 5 12VSL 0 12VSL 1

LEDs	DESCRIPTION	When Lit (Solid Green or blinking)	When Off
1st Bank			
3v3SL2 (D38)	Debug	N/A	NA
3V3SL3 (D39)	Debug	N/A	NA
3V3SL4 (D40)	Debug	N/A	NA
3V3SL5 (D41)	Debug	N/A	NA
RESET (D42)	PCIe Reset	EB3600-AB is in reset	EB3600-AB is out of reset
DEBUG (D43)	Debug	N/A	NA
0V9A (D2)	900 mV Analog Power	Solid - power rail OK	OFF - power rail out of range
3V3 CLK (D4)	3.3V Clock Power	Solid - power rail OK	OFF - power rail out of range
1V8A (D6)	1.8V Analog Power	Solid - power rail OK	OFF - power rail out of range
0V9 (D8)	Debug	N/A	N/A
PORT4 (D10)	**Slot 5 Link**	Solid - Gen 3 Link Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF – not Linked
PORT 12 (D12)	**Slot 4 Link**	Solid - Gen 3 Link Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF – not Linked
PORT 20 (D14)	**Slot 3 Link**	Solid - Gen 3 Link Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF – not Linked
12V SL1 (D16)	Debug	NA	NA
LEDs	**DESCRIPTION**	**When Lit (Solid Green or blinking)**	**When Off**
2nd Bank			
0V9 (D1)	900mV I/O Power	Solid - power rail OK	OFF - power rail out of range
3V3 (D3)	3.3V System Power	Solid - power rail OK	OFF - power rail out of range
1V8 (D5)	1.8V System Power	Solid - power rail OK	OFF - power rail out of range
1V8 AUX (D7)	1.8V Aux System Power	Solid - power rail OK	OFF - power rail out of range
PORT 0 (D9)	**Slot 0 Link**	Solid - Gen 3 Link; Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF - Not Linked
PORT 8 (D11)	**Slot 1 Link**	Solid - Gen 3 Link; Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF - Not Linked
PORT 16 (D12)	**Slot 2 Link**	Solid - Gen 3 Link; Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF - Not Linked
12VSL0 (D15)	Debug	NA	NA
12VSL2 (D32)	Debug	NA	NA
12VSL3 (D33)	Debug	NA	NA
12VSL4 (D34)	Debug	NA	NA
12VSL5 (D35)	Debug	NA	NA
3V3SL0 (D36)	Debug	NA	NA
RESET (D42)	PCIe Reset	EB3600-AB is in reset	EB3600-AB is out of reset
DEBUG (D43)	Debug	NA	NA
DEBUG (D44)	Debug	NA	NA
0V9A (D2)	900 mV Analog Power	Solid - power rail OK	OFF - power rail out of range
3V3 CLK (D4)	3.3V Clock Power	Solid - power rail OK	OFF - power rail out of range
1V8A (D6)	1.8V Analog Power	Solid - power rail OK	OFF - power rail out of range

Card Slot Link LEDs

SLOT#	LED	Description	When Lit (Solid Green or blinking)	When Off
Slot 0	**PORT 0 (D9)**	**Slot 0 Link**	Solid - Gen 3 Link; Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF - Not Linked
Slot 1	**PORT 8 (D11)**	**Slot 1 Link**	Solid - Gen 3 Link; Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF - Not Linked
Slot 2	**PORT 16 (D12)**	**Slot 2 Link**	Solid - Gen 3 Link; Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF - Not Linked
Slot 3	**PORT 20 (D14)**	**Slot 3 Link**	Solid - Gen 3 Link Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF – not Linked
Slot 4	**PORT 12 (D12)**	**Slot 4 Link**	Solid - Gen 3 Link Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF – not Linked
Slot 5	**PORT4 (D10)**	**Slot 5 Link**	Solid - Gen 3 Link Fast Blinking - Gen 2 Link, Slow Blinking - Gen 1 Link	OFF – not Linked

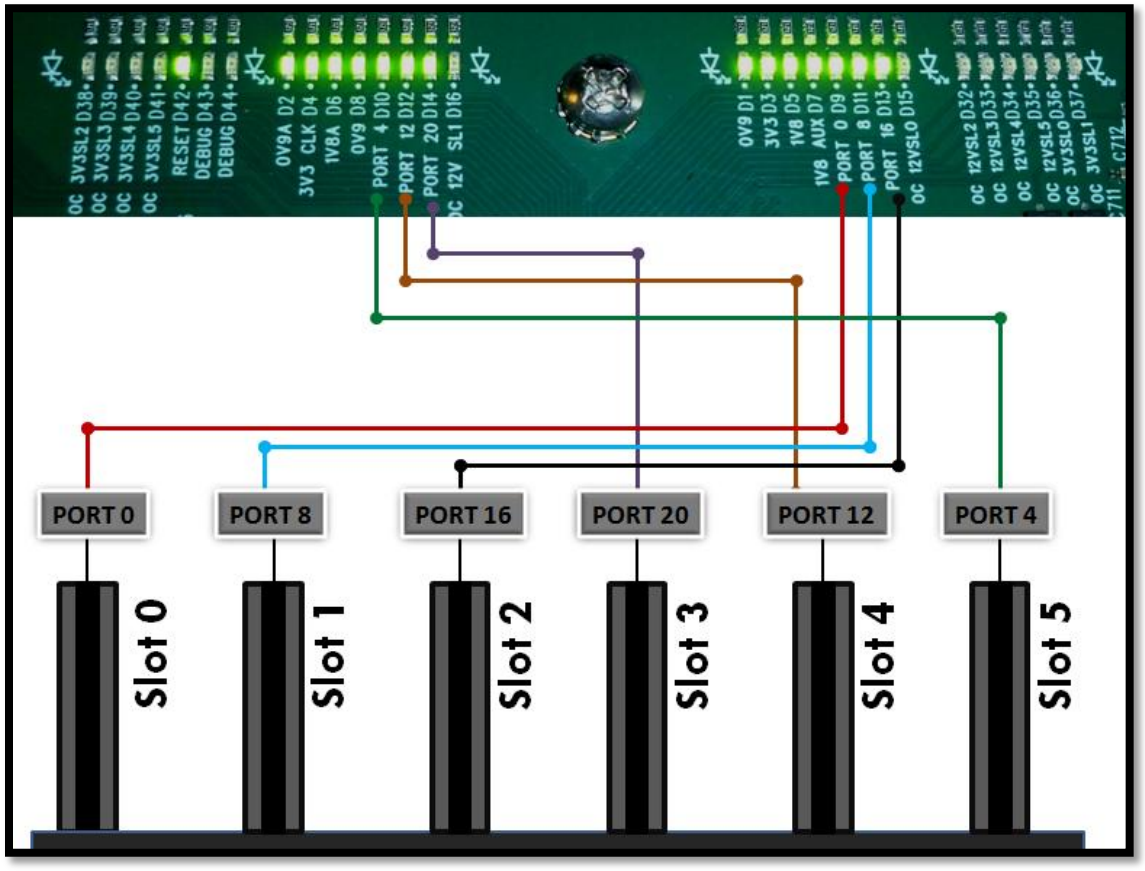

Interface Card and LEDs

- Interface card is x16
- It is capable of operating at x16, x8 , x4 , x2 and x1 link widths
- When the Amber LED (D5) is ON, the Reset is Asserted
- When the Amber LED (D5) is OFF, it is de-asserted
- When Interface card is being used as Host, need to set to OFF. For expansion set to ON.

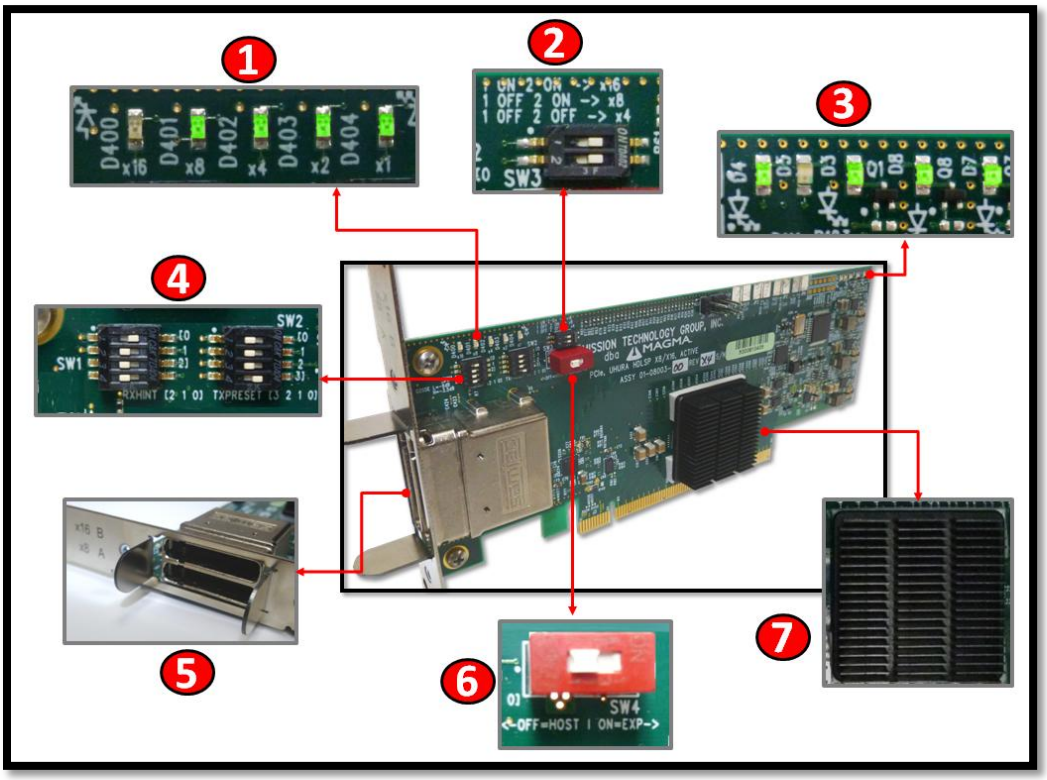

Interface Card	
1	Link Width LED indicators
2	SW3, dip switches for speed / lane settings
3	Reset & Power Status LEDs
4	Rx Hint and Tx presets
5	Cable ports, x8-A and x16-B
6	SW4, toggle switch for interface mode setting (host or expansion)
7	Heatsink

During normal operation LEDs D7, D8 and D3 should be on and solid green at all times. If any of these LEDs are off it means that there is a power problem with the unit.

LED D5 will turn on (Amber) when PCIe reset is asserted and turn off when the reset is de-asserted.

If any of the Interface cables are not connected correctly, the LED D5 will stay ON (Amber). Once the cables are connected correctly and the expansion board is powered on and the host is turned on then the amber LED D5 should be off.

Display Functions of Interface card LEDs

1. Link width mode diplays LED indicator .

D404:x1
D403: x2
D402: x4
D401: x8
D400: x16

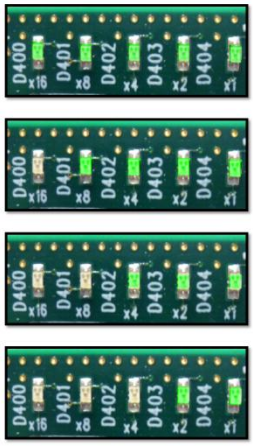

If the LEDs are lit solid, then it is a gen 3 link. If not the alternate display will be activated.

2. Phase equalization mode.

D400: will not be lit.
D401: Phase equalization complete.
D402: Phase 3 successful.
D403: Phase 2 successful.
D404: Phase 1 successful.

For any link below gen 3, the display will alternate between these two. A 75% on 25% off duty cycle indicates a gen 2 link whereas a 25% on 75% off duty cycle is a gen 1 link.

Reset & Power Status LEDs

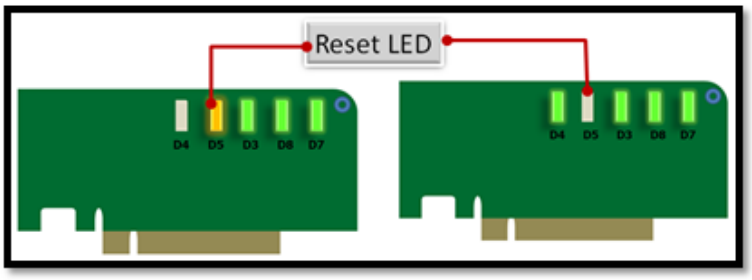

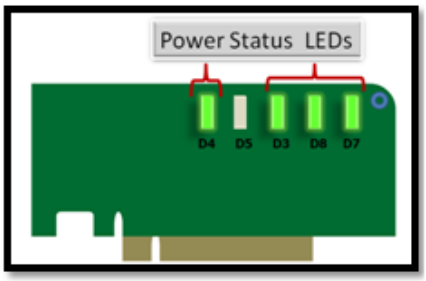

LEDs D4, D3, D8, AND D7 when illuminated signify "power is good" (see table below).

LED	Name	Description / Functions	When OFF	When ON
D5	reset	PCIe fundamental reset. When ON system is in reset and/or the high speed cables have been connected incorrectly. When off while the main power is ON, the system is out of PCIe reset	de-asserted	asserted
D4	PCIe clock present	Lights up if a PCIe clock has been detected	No clock present	Clock is present
D3	3.3V good	When on means that the locally generated 3.3V is good and within specification. When off means that there is a problem with the local 3.3V	3.3V is bad	3.3V is good
D8	1.0V good	When on means that the locally generate 1.0V is good and within specification. When off means that there is a problem with the local 1.0V	1.0V is bad	1.0V is good
D7	1.0V good	When on means that the locally generate 1.0V is good and within specification. When off means that there is a problem with the local 1.0V	1.0V is bad	1.0V is good

Front Panel Status LEDs

LEDs on the front panel monitor internal temperature and show status of fans and power supplies. All LED's should be green at all times. An orange LED means a fault of the corresponding item. The locator LED and locator switches on the front and back panel locate the chassis in a rack installation. Push the switch on either end of the chassis and the LED will blink on both front and back. Pressing either switch again, on either side of
the chassis will turn the LED off.

Should a problem occur with the chassis we included below explanations as to what all these items are and how they should be treated.

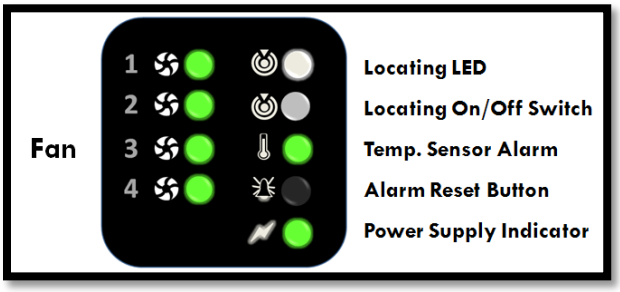

Under normal operating conditions the status indicator LED's should be green at all times.
An orange LED means a fault of the corresponding item listed in the picture above. If the chassis is functioning improperly, you have the option of resetting the entire system by pressing and holding the Alarm Reset button (shown in the above diagram) until the LEDs blink. The color of the LEDs will turn orange. This will enable the entire device to reboot to its default settings. You can only do this once the chassis is turned off, but still operates on standby power. So, ensure the power cable is connected between the chassis and the AC outlet.

Fan LEDs

Temperature Sensor Alarm LEDs

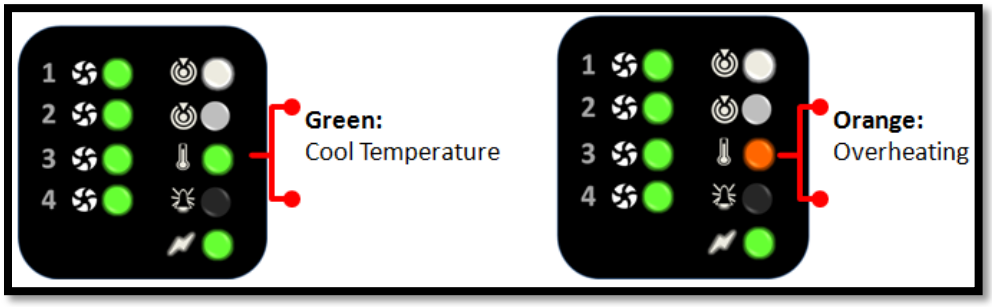

Power Supply Indicator LEDs

If the LED stays Orange after replacing or swapping the faulty component, you have to reset the SNMP to factory default settings. Hold the Alarm Reset button (see picture below) until the LEDs blink. The color of the entire LEDs will turn orange and the device will reboot to its default settings, all LEDs should turn on solid Green.

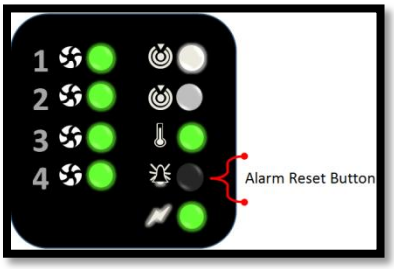

Control Switches

There are four control switches on the interface card: SW1, SW2, SW3 and SW4

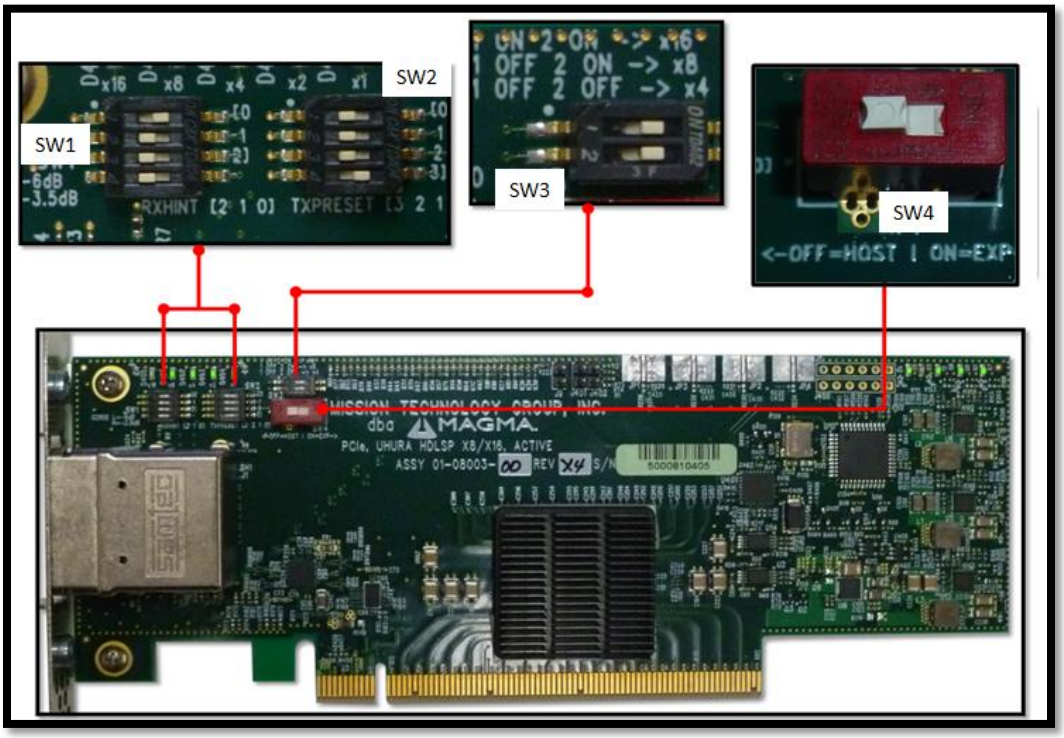

SW1 and SW2

SW1 and SW2 should not be altered or changed.
See screenshot below for their corresponding combination of dip switch settings.

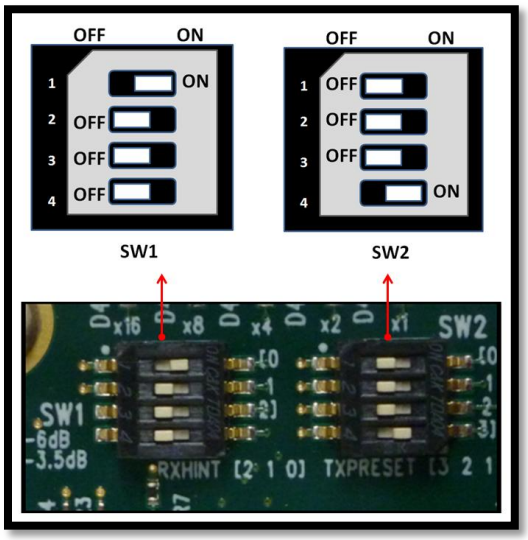

SW3

Link width can be changed by using the following dip switch settings. By default, the card is set to x16.

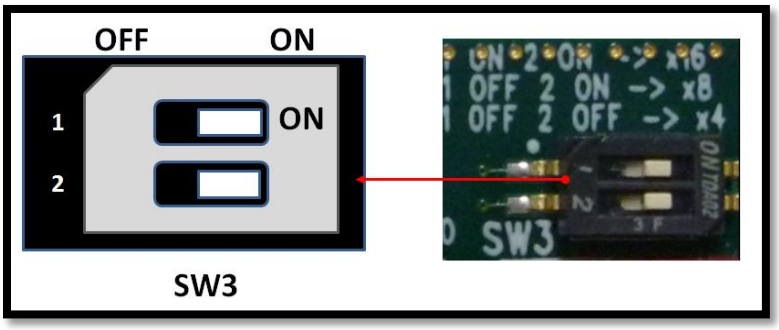

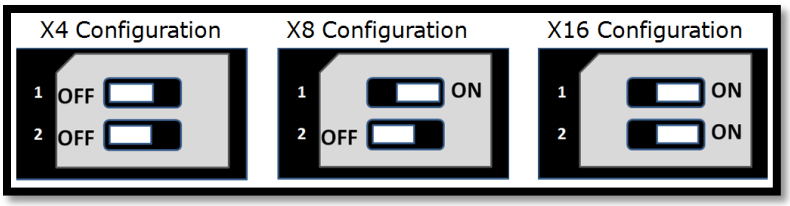

SW4

Toggle switch for interface mode setting , the interface card can be used either host or expansion . Below are the two mode-settings for the interface card.

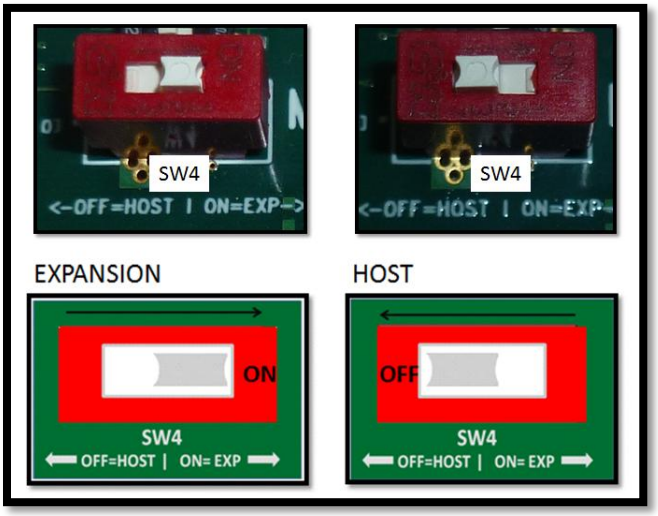

Fan

EB3600-AB expansion unit has four fans installed enough to provide cooling to the extreme-high-heat-generating GPUs. These are high CFM / RPM and hot-swappable fans.

The picture below is the top view of the EB3600-AB unit (viewing from the back-end) showing the order of fans starting from left to right. Each fan is labeled with a number that corresponds to their fan-slot assignment on SNMP web management. Fan#1 is located on the far left side of the expansion chassis and Fan#4 is on the far right side of the expansion unit.

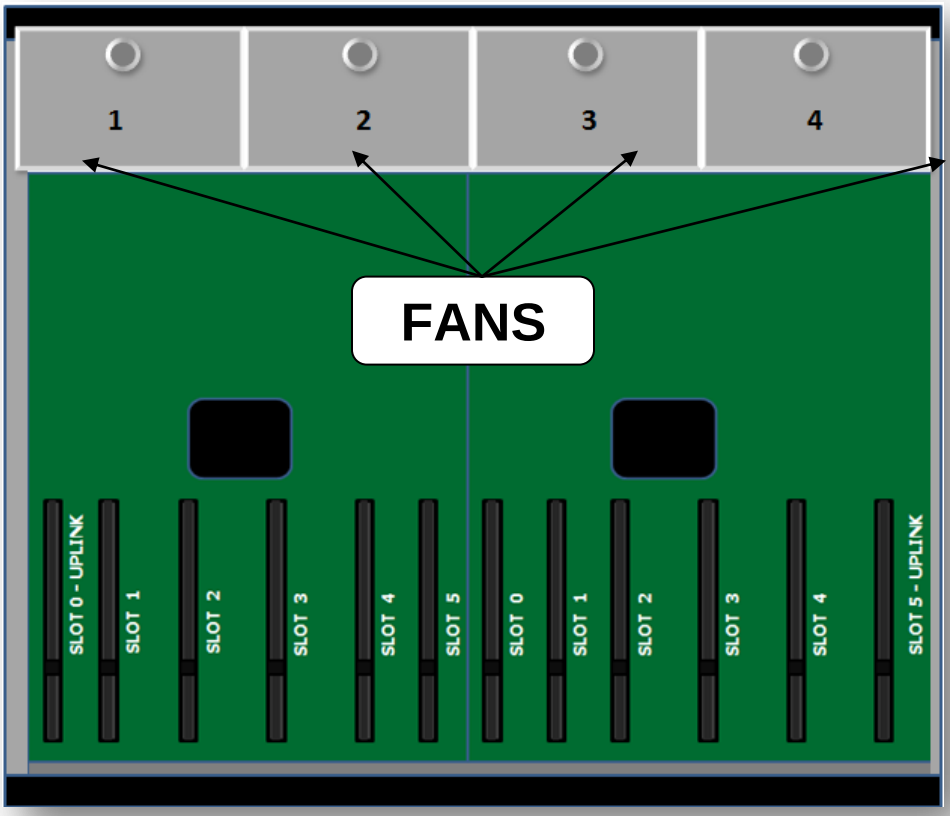

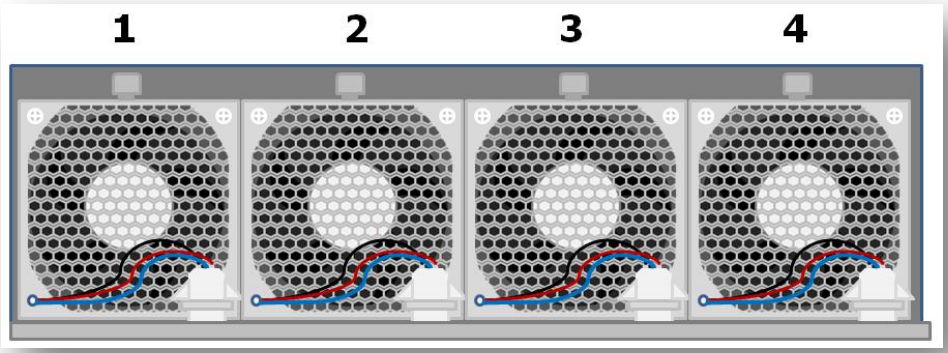

Fan Replacement

EB3600-AB is designed to allow "hot-swappable" fan replacement while the chassis is powered on. First you will need to remove the chassis lid. Then locate the fan that has failed, unlock its thumbscrew, lift up its metal tab and pull it out. Insert the new fan in and secure it in place. Verify the new fan is spinning and restore the chassis lid.

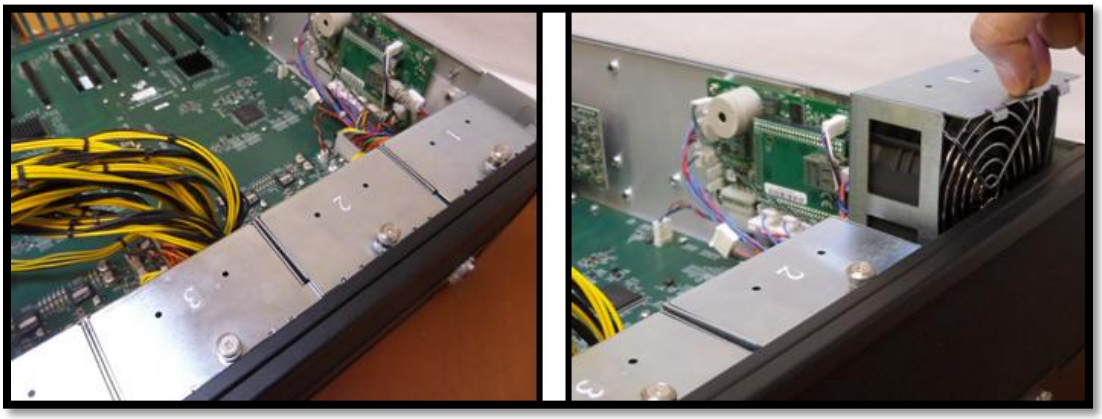

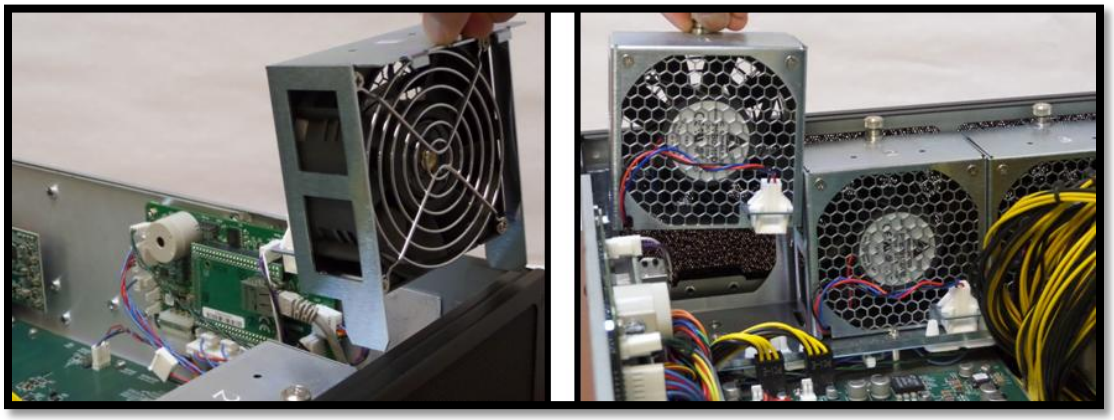

Fan Specs

92mm X 92mm X 38mm FAN, 185 CFM.

ITEM	DESCRIPTION
Rated Voltage	12 VDC
Operation Voltage	7.0-13.2 VDC
Input Current	3.10 (3.72 max) A
Input Power	37.20 (44.64 max) W
Speed	8000 RPM
Max Air Flow (at Zero Static Pressure)	4.957 (min 4.461) m3/min 175.03 (min 157.52)CFM
Max Air Pressure (at Zero Air Flow)	46.21 (min 37.43) mnH20 1.819 (min 1.473) inchH20|
Acoustical Noise (AVG)	66.5 (Max 71.5) dB-A
Installation Type	UL: Class A
Operating Temp	10 to +60 Deg C
Storage Temp	-40 to +70 Deg C
Operating Humidity	5 to 90% RH
Storage Humidity	5 to 95 RH

SNMP / Netburner

The Interface board for the Netburner module provides simple Ethernet connectivity allowing you to have direct and quick access to control devices such as the fan, power supply, and temperature and PCIe slots via the SNMP Web Management. The Netburner is programmed with custom SNMP Web GUI for managing and monitoring devices.

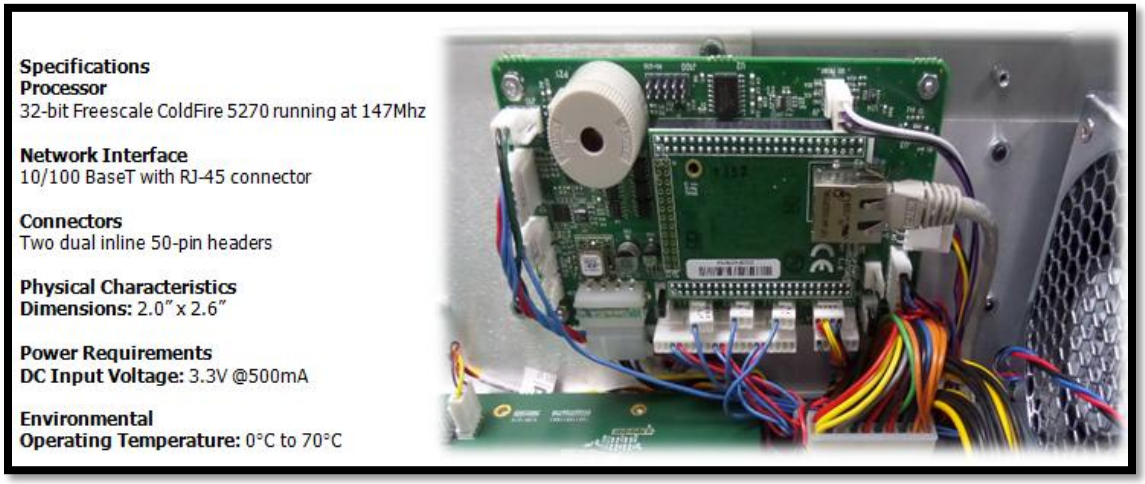

NetBurner Module

Replacing the NetBurner

If you need to replace your defective or non-functional NetBurner module follow the instructions below.

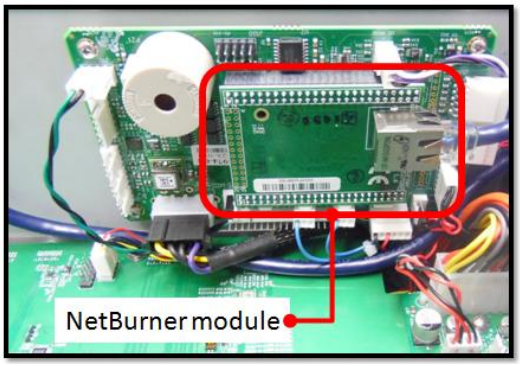

1. Position the expansion unit on its side to gain access to the NetBurner module.
2. Unplug the Ethernet cable.

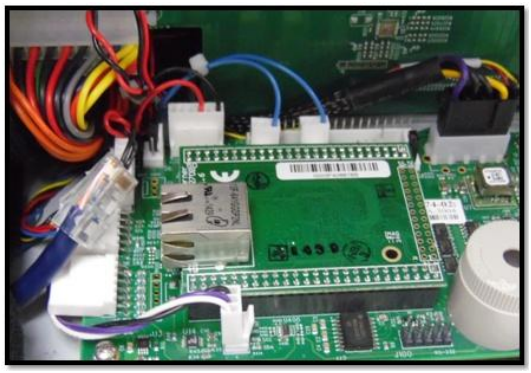

3. Lift the NetBurner card out of the interface board with two hands by placing both index fingers underneath the side of the card and both thumbs on the topside of the card, see pictures below.

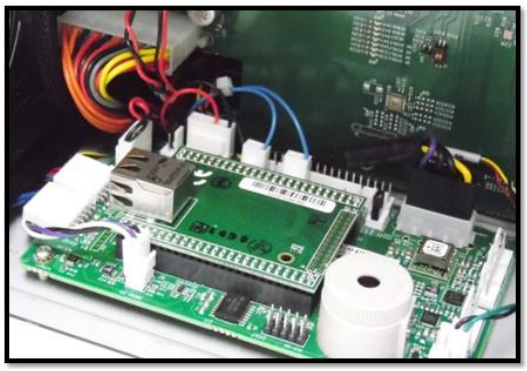

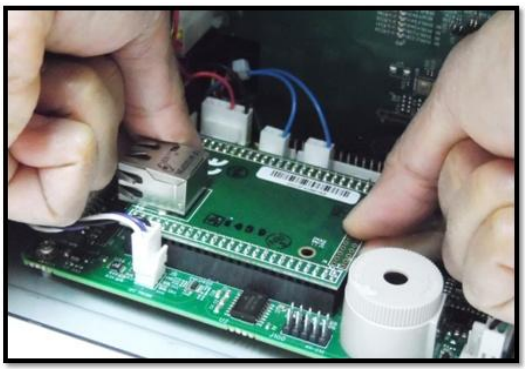

4. Use firm upward pressure underneath the card and a gentle rocking motion until the card comes loose, see pictures below.

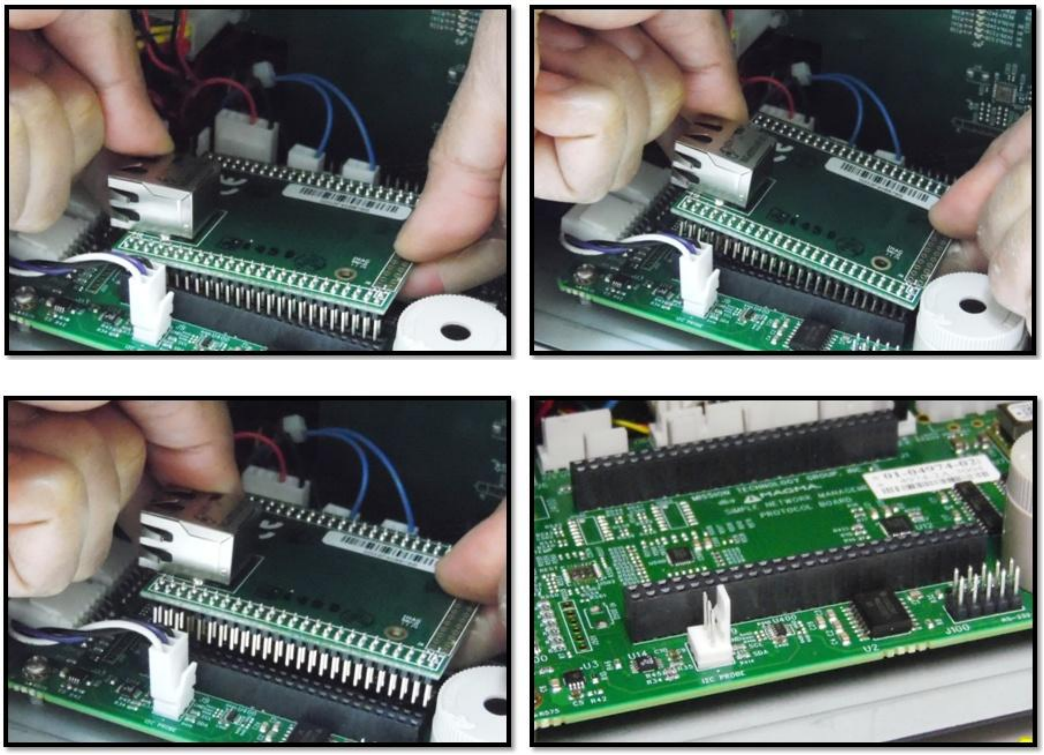

NetBurner Installation

1. Align the NetBurner module on top of the Interface board connectors.

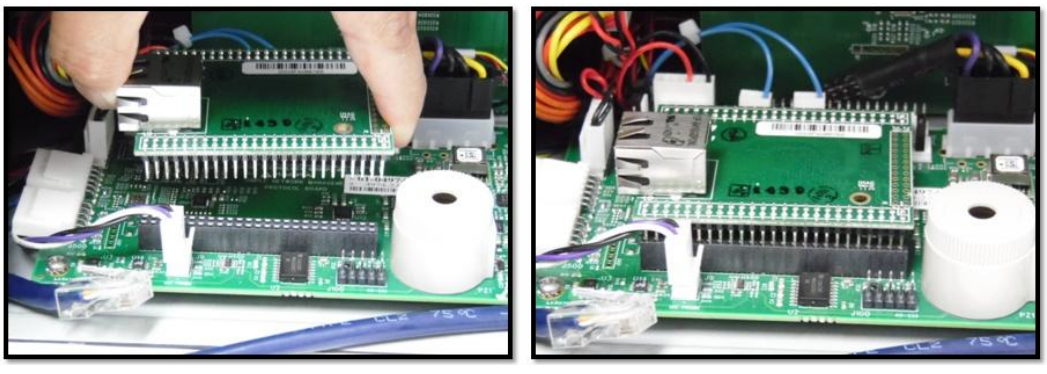

2. Gently apply pressure on top of the NetBurner module and slowly press it down until the board is firmly seated.

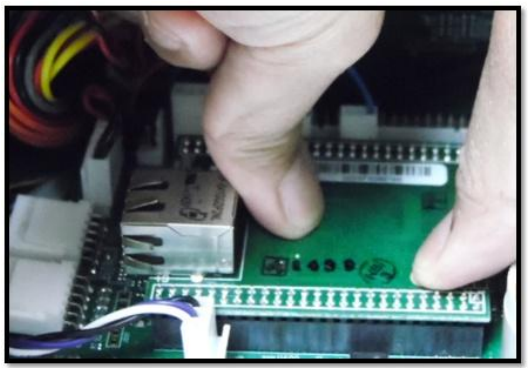
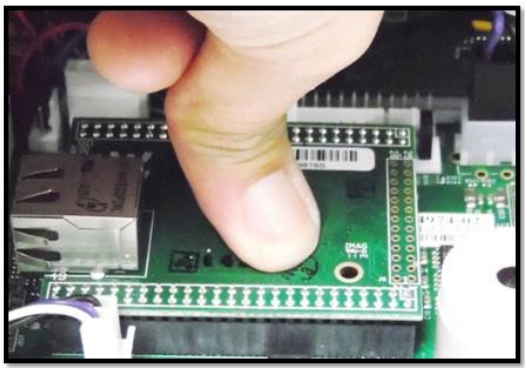

3. Reconnect the Ethernet cable to the RJ45 port.

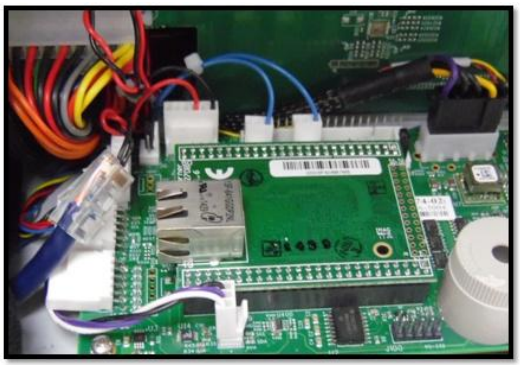
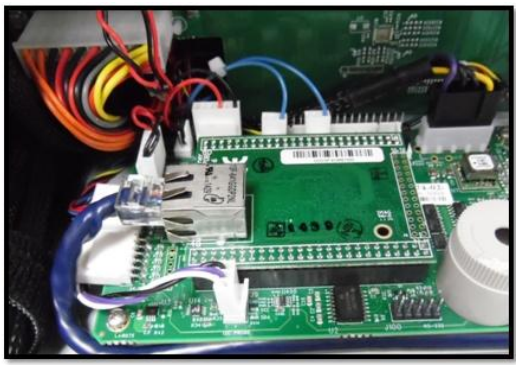

Replacing the Interface Board

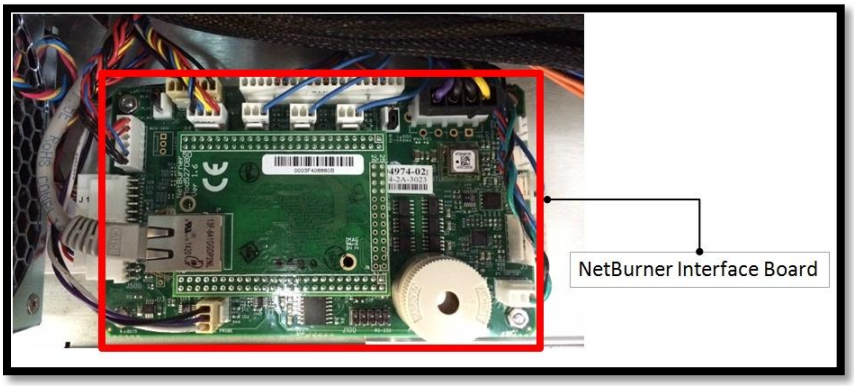

1. Disconnect all the wires including the Ethernet cable from the board, see picture below.
2. Remove screw and nuts, see picture below.

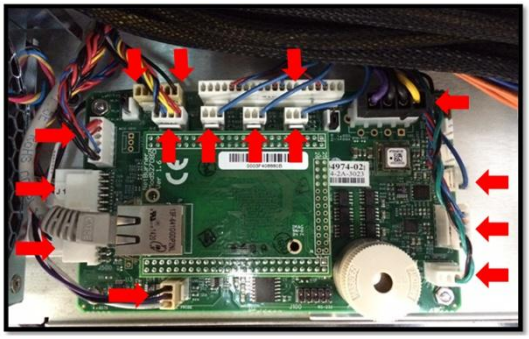

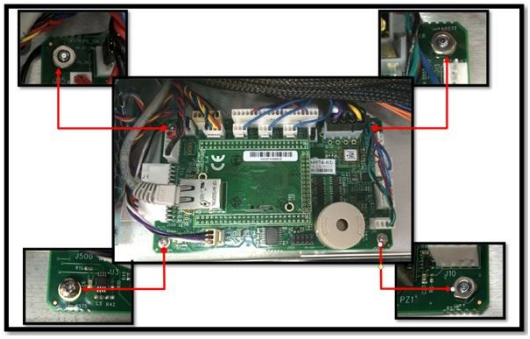

3. Remove the interface board.

NetBurner Interface Board Installation

To install the new Interface board, just follow the previous steps in reverse order.

1. Place the board in the chassis and align it on top of the 4 mounting screw-holes.
2. Secure the board. Connect all wires and plug in the Ethernet cable.

Power Supply unit

Configurable and hot swap capable power supply solutions of (1200W, 2400W, 3600W or 4800W).

Magma EB3600-AB Expansion chassis uses a redundant power supply with the ability to easily replace a power module in the event of a failure. It includes two hot-swappable modules that share the power load requirements during normal operations.

- Should one module fail for any reason, the power load will be shifted to the other module.
- An indicator for the failure would be the LEDs on the back panel of the power supply behind the chassis.
- For non-functioning equipment, these indicators would not show.

In case of power supply failure the audible alarm would be initiated to alert you on this condition. If this is the case, press the black button on the status panel on the front of the unit to stop the audible alert.

How to replace the power supply module

1. Put the Magma EB3600-AB to standby mode or turn it OFF.
2. Unscrew the thumbscrews located on the back, simply grab the handle, and pull.
3. Insert the new power supply module. Secure the power supply
4. Turn ON the Magma EB3600-AB expansion unit.

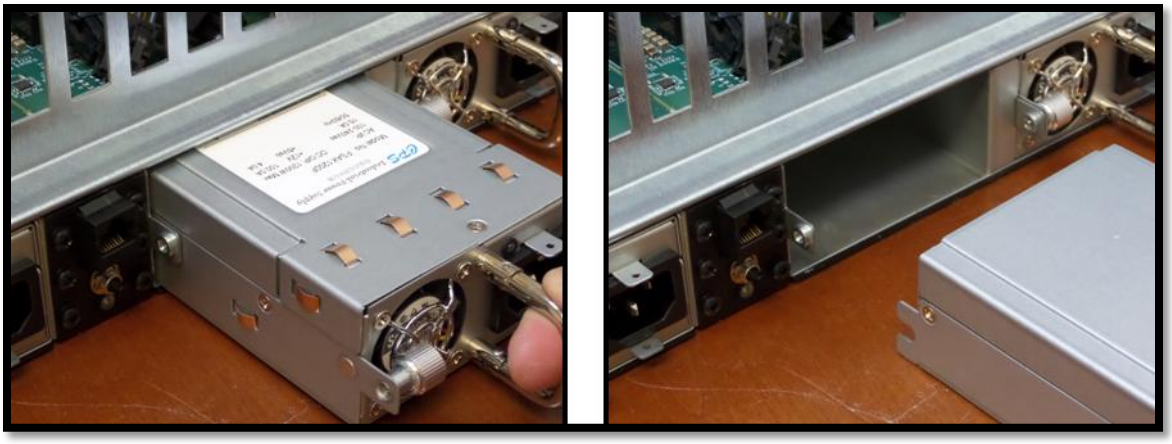

If the alarm continues, you need to reset the system to default setting by pressing and holding the Alarm Reset button (shown in the above diagram) until the LEDs blink. The color of the LEDs will turn orange. This will enable the entire device to reboot to its default settings. You can only do this once the chassis is turned off, but is still operating in standby power. So, ensure the power cable is connected between the chassis and the AC outlet.

Each power supply module is labeled with a number that corresponds to their PSU-slot assignment on SNMP web management. PSU#1 is located on the far left side of the expansion chassis and PSU#4 is on the far right side of the expansion unit. The "Input Rating" (110-240) label is located on top of the power supply module.

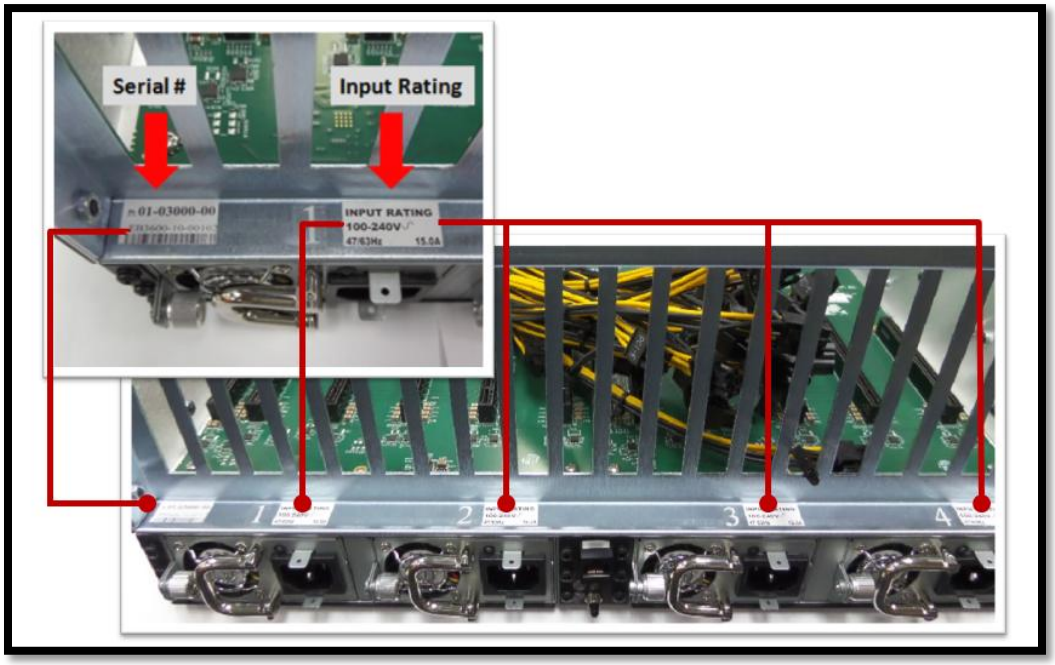

Power Supply Specifications

Scope

This document defines a series of power supply systems with the output power of up to 1200W and with +12V & +5Vsb output rails or ATX output rails for 1U system application.

The power supply system consists of one (1), or two (2) power supply modules providing the +12V & +5Vsb output rails and one (1) power distribution backplane providing the removable or redundancy function of the power supply modules and also generating the +5V, +3.3V, and -12V output rails which are powered by +12V output.

The power supply module is capable of "HOT SWAP" exchanging with active current sharing and/or isolation MOSFETs built in for +12V output, and droop current sharing and/or isolation diode built in for +5Vsb output. The AC input is rated 90-264Vrms with power factor corrected (PFC > 0.95). A 38mm high reliable Sanyo Denki fan is installed to the power supply module for cooling the power supply module, power devices on the distribution backplane and part of the system.

AC Input

Table 1 lists AC input voltage and frequency range for continuous operation. The power supply is capable of supplying full-rated output power over the input voltage ranges specified.

Parameter	Min	Nominal Input	Max	Unit
V_{in} Voltage	90	100-240	264	Vrms
V_{in} Frequency	47	50/60	63	Hz
V_{in} Current /1200W		15.0		A

a) The inrush current of power supply module is less than 120A under the conditions of 240Vrms input and 25oC ambient cold start. The inrush current is limited to the extent that no damage will be done to the power supply
under any specified line, load, and temperature conditions.
b) The leakage current of the power supply module is less than 1.5 mA measured at 264Vac input.
c) The repetitive ON/OFF cycling of AC input voltage will not damage the power supply.
d) The power supply can automatically recover from AC power loss.
e) The power supply is equipped with primary fuse for input over-current protection, and meets product safety requirement.

DC Output

DC Output Voltage Regulations

The DC output voltages remain within the regulation ranges shown in Table 2 for both the power supply module and the completed power system when measured at the load end of the output connectors under all AC line, O/P loads, and environmental conditions.

	+12V	+5V	+3.3V	-12V	+5Vsb	Unit
Range	±5%	±5%	±5%	±10%	±5%	Volt
Min	+11.40	+4.75	+3.14	-10.80	+4.75	Volt
Nom	+12.00	+5.00	+3.30	-12.00	+5.00	Volt
Max	+12.60	+5.25	+3.46	-13.20	+5.25	Volt

Table 2. DC Output Voltage Regulations

a) The remote sensing is provided to +12V, +5V, and +3.3V outputs to compensate for excessive cable drops.
b) +5V, +3.3V, and -12V outputs are located on the power distribution backplane.

DC Output Load Distributions

The Table 3 defines the power supply typical output load distribution.

Output Voltage	Minimum Current (A)	1200W O/P Max. Current (A)
+12V	1.0	100.0
+5Vsb	0.0	3.0/4.0

Table 3A. DC Output Load Distribution (power supply module)

Output Voltage	Note	1200W O/P Max. Current (A)
+12V	1.0A min.	100.0
+5V	2 PSU ON	40.0
	1 PSU ON	30.0
+3.3V	2 PSU ON	40.0
	1 PSU ON	30.0
-12V	0.0A min.	0.8
+5Vsb	PS_ON	4.0
	PS_OFF	3.0
The Max. combined O/P of +5V & +3.3V	2 PSU ON	75.0
	1 PSU ON	60.0

Table 3B. DC Output Load Distribution (completed power system)

a) The total continuous output power is 750W~1200W max. For one (1) or two (2) modules installed.
b) The peak current of +12V output is 110% of max rated current and may last for 15 msec.
c) No minimum load is required to +5V, +3.3V, -12V and +5Vsb outputs.

DC Output Efficiency (power supply module)

The power supply efficiency is 80% minimum measured at 20%, 50%, full load and nominal line input, which is 115Vrms and 230Vrms conditions.

Output Protection

Over Voltage Protection

The power supply can provide latch-mode over voltage protection as defined in Table 8.

Output	Min.	Nom.	Max.	Unit
+12VDC	13.6	14.6	15.6	Volts
+5VDC	5.5	6.25	7.0	Volts
+3.3VDC	3.7	4.1	4.5	Volts

Table 8. Over Voltage Protection

Over Current Protection
130% maximum for +12V output
150% maximum for +3.3V and +5V outputs

Short-circuit Protection
The power supply will shut down and latch off for shorting the +12VDC, +5VDC, and +3.3VDC rails to return or any other rails. Shorts between main output rails and +5Vsb will not cause any damage to the power supply. The power supply will shut down and latch off for shorting the negative rail. +5Vsb is capable of being shorted indefinitely, but when the short is removed, the power supply will recover automatically or by cycling PS_ON. The power supply is capable of withstanding a continuous short circuit to the outputs without damage or overstress to the unit.

No-load Operation
No damage or hazardous condition will occur with all the DC output connectors disconnected from the load. The power supply may latch into the shutdown state.

Isolation
Primary to Secondary 4242Vdc
Primary to Earth GND 2800Vdc

Output Signals (Redundant System)

Audible Alarm & Power Fail Signal
The Audible alarm and Power Fail signal are available from the signal card located on the backplane. The audible alarm is silent and the Power Fail signal is "High" when all power modules are functioning properly. The audible alarm will sound and the Power Fail signal will be "Low" under the following conditions :

a. One of the power supply modules is not functioning and is still attached to the backplane.
b. One of the power supply modules is attached to the backplane without an AC power cord plugged in.
Removing the not functioning power module from the backplane or pushing the reset switch provided will reset the audible alarm and also the Power Fail signal.

LED light
The LED light installed on the power supply module is functioning as following:

a. Green color – Power module is ON and working properly.
b. Amber color – Power module is under Standby Mode or has default.
c. No color – No AC Power Connection.

Environmental

The following subsections define recommended environmental specifications and test parameters. Based on the typical conditions to which a power supply may be subjected during operation or shipment.

Temperature
Operating -10°C to +50°C
Non-operating -40°C to +85°C

Humidity
Operating 10% to 90% relative humidity (non-condensing)
Non-operating 5% to 95% relative humidity (non-condensing)

Altitude
Operating 0 to 16,000 feet (5000 meter)
Storage 0 to 50,000 feet

Mean Time between Failures (MTBF)
100K hours minimum at full load 25°C

Chapter 4 Express I/O Manager

EB3600-AB contains extra features that could be utilized to monitor the status of the components on the backplane and the items in the chassis such as the state of the power supplies, fan status, and temperature. It is observed on a remote computer if an equipment malfunction has occurred.

SNMP Features

EB3600-AB supports the Simple Network Management Protocol (SNMP) for remote monitoring and administration by offering the following features:

- Internal Temperature monitoring
- Clear Alarm button monitoring
- Swappable fan status (for fans 1,2,3 and 4 in the front)
- Power supply 1 status
- Power supply 2 status
- Power supply 3 status
- Power supply 4 status
- Traps are defined to alert the SNMP server in case of overheating or failure in any of the subsystems mentioned above
- Remote chassis turn on
- Remote Audible Alarm
- Remote Turn on Locator LED
- Serviceable Server A or B (Side A or Side B)

Web Access and SNMP Configuration

To ensure that you can successfully monitor your new system, you will need to connect it to a local or private hub using a standard RJ-45 Ethernet Cable. To obtain access to the Magma chassis, direct your web browser to the given IP address: **192.168.1.10**. You must configure your network on this same domain for this to work. Later, you can change the IP address to another domain or to use DHCP

Supported Internet Browser

- Google Chrome
- Firefox

IMPORTANT
For compatibility and best performance it is highly recommended to use Google Chrome as the primary web browser and Firefox as the secondary.

To Access Express IO Manager / SNMP

1. Connect Ethernet cable to Magma EB3600-AB and Host computer.
2. Configure Network adapter settings
3. Launch Internet browser (recommend to use Google Chrome or Firefox). Enter the IP address in the URL **192.168.1.10**, then press "ENTER"
4. Authentication login comes up. Enter **"default"** for User Name and **magma** for Password.
5. The user will be directed to the MAGMA Express IO Manager default home webpage.

Connect Ethernet Cable

Connect one end of the cable to the RJ-45 port, located to the top of the Expansion Interface card (back of the chassis). Connect the other end to your local area network connector or any computer. In case you connect the chassis to a local computer/laptop, be sure to use a Hub with a regular network cable ***or*** a crossover cable without a Hub.

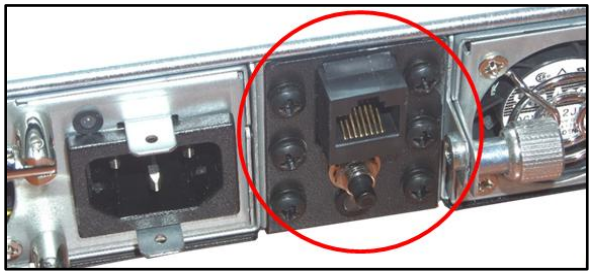

Configure Network Setting

Configure your computer's network setting to correlate to the default IP address of the Magma chassis . The IP address of the Magma chassis is **192.168.1.10.**

Set your network settings to configure manually and enter an IP address for your computer of 192.168.1.40 where 40 can really be any free number other than 10. To verify we've successfully detected the Magma Expansion chassis on our network open your web browser and direct it to the IP address of the chassis that is **192.168.1.10**.

How to configure your network setting in Windows OS

This setting is applicable to Windows 7, 8 and Windows server.

You need to disconnect your laptop or desktop computer prior to setting up the Network adapter.

1. Go to your computer
2. Right click the " network icon" below the system tray
3. Click "Open Network & Sharing Center"
4. Click Local Area Network
5. Click Properties
    a. Select "Internet Protocol Version 4 (TCP/IPV4)
    b. Click Properties

6. Select "Use the following IP address"
    a. For IP address enter 192.168.1.20
    b. For Subnet mask enter 255.255.255.0
7. Click OK

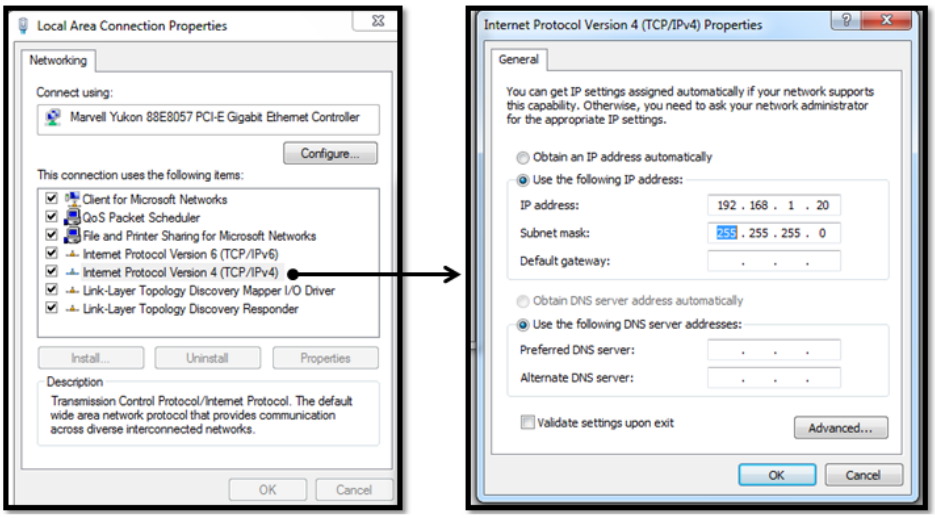
Local Area Connection Properties
Networking
Connect using:
Marvell Yukon 88E8057 PCI-E Gigabit Ethernet Controller
Configure...
This connection uses the following items:
Client for Microsoft Networks
QoS Packet Scheduler
File and Printer Sharing for Microsoft Networks
Internet Protocol Version 6 (TCP/IPv6)
Internet Protocol Version 4 (TCP/IPv4)
Link-Layer Topology Discovery Mapper I/O Driver
Link-Layer Topology Discovery Responder
Install...
Uninstall
Properties
Description
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.
OK
Cancel
Internet Protocol Version 4 (TCP/IPv4) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
192 . 168 . 1 . 20
Subnet mask:
255 . 255 . 255 . 0
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Validate settings upon exit
Advanced...
OK
Cancel

How to configure your network setting in Linux / Ubuntu

1. Start or launch the Terminal window.
2. Stop Network Manager by typing **service NetworkManager stop** command in the terminal.
3. Type **sudo ifconfig eth0 192.168.1.40 netmask 255.255.255.0** (see screenshot below).
4. Type **route add default gw 192.168.1.1**
5. Then press enter to accept the new settings.



6. You need to restart the network by typing **service network restart** command in the terminal.
7. Type **ifconfig**, to check and verify that the new IP address and Subnet mask have been accepted (see screenshot below).

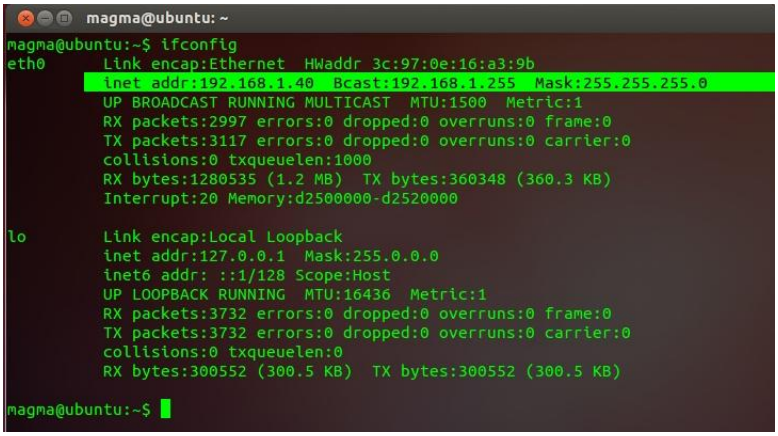
magma@ubuntu: ~
magma@ubuntu:~$ ifconfig
eth0 Link encap:Ethernet HWaddr 3c:97:0e:16:a3:9b
inet addr:192.168.1.40 Bcast:192.168.1.255 Mask:255.255.255.0
UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
RX packets:2997 errors:0 dropped:0 overruns:0 frame:0
TX packets:3117 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:1280535 (1.2 MB) TX bytes:360348 (360.3 KB)
Interrupt:20 Memory:d2500000-d2520000
lo Link encap:Local Loopback
inet addr:127.0.0.1 Mask:255.0.0.0
inet6 addr: ::1/128 Scope:Host
UP LOOPBACK RUNNING MTU:16436 Metric:1
RX packets:3732 errors:0 dropped:0 overruns:0 frame:0
TX packets:3732 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:0
RX bytes:300552 (300.5 KB) TX bytes:300552 (300.5 KB)
magma@ubuntu:~$

When done, you can reset the Network Adapter IP address and restart your Network Manager.

- reset the Network Adapter IP address, **sudo ip addr flush eth0** command in the terminal.
- restart your Network Manager , type **service NetworkManager start** command in the terminal.

Launch Internet Browser

For Windows OS, open your internet browser and enter the IP address in the URL 192.168.1.10 window.

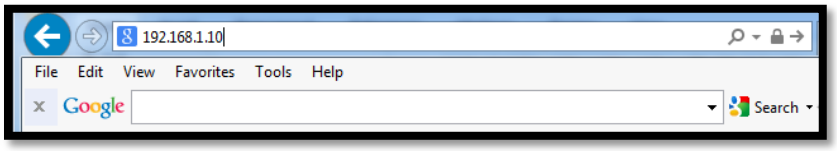

For Linux / Ubuntu, type xdg-open http://192.168.1.10 on the terminal window (see screenshot below).

If you're getting an error or unable to start the Express IO Manager check your Ethernet cable connection. Make sure the Ethernet cable is plugged in and firmly inserted. Check to see if the cable has been cut, chewed, or otherwise damaged. If it is damaged or broken please replace it with a known good cable.

Authentication Log-in

The Authentication login for the browser will appear. The define username will be "**default**" and the password to be "**magma**".

Windows Log-in screen:

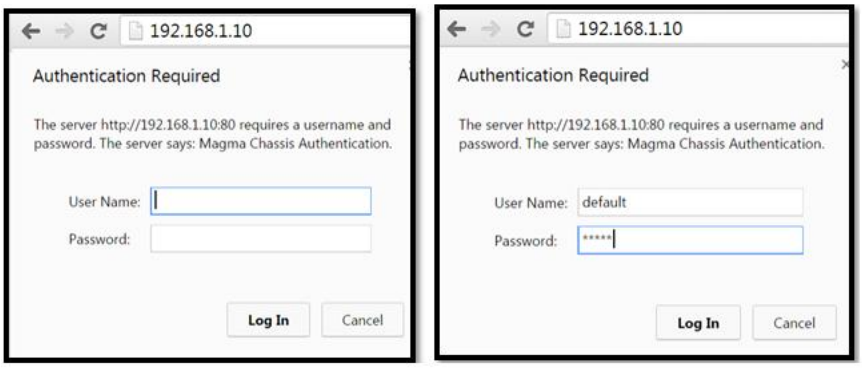

Linux / Ubuntu Log-in screen:

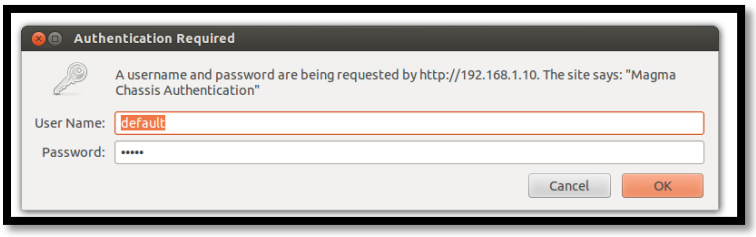

Default Home Webpage

The user will be directed to the MAGMA home webpage for the expansion device. See screenshot below as the default home webpage.

Express IO Manager WEB GUI

HOME

The HOME page provides an overview for the status of the chassis. It allows you to view the number of fans, power supplies, and temperature sensors that are attached to your chassis along with the number of users that have access to the device.

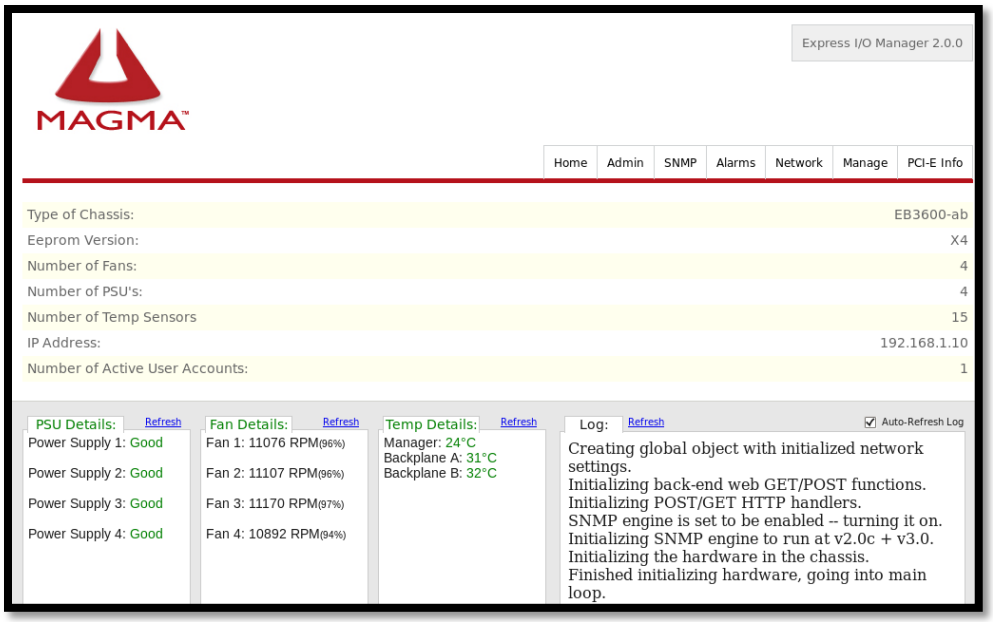

ADMINISTRATOR

The device is capable of allowing separate users have access to the PCIe system. Based on the MODE that the device is operating in, a maximum of 4 users could share the same Expansion set. To add users, click on the check-box and then enter their name under **Enable/Disable Users**. You would then configure their setting based on login information and remote monitoring. The configuration is displayed on the Administration tab or **Admin**.

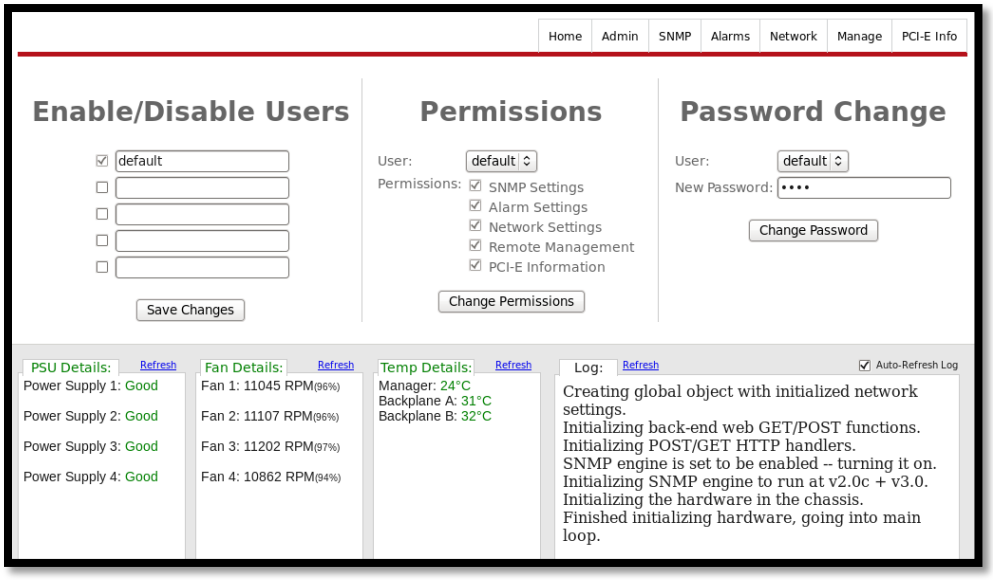

SNMP SETTINGS

In the **SNMP Settings**, the main administrator of the device can either activate or deactivate the monitoring system by using the check-box option. You can also obtain an MIB file in text format for a report.

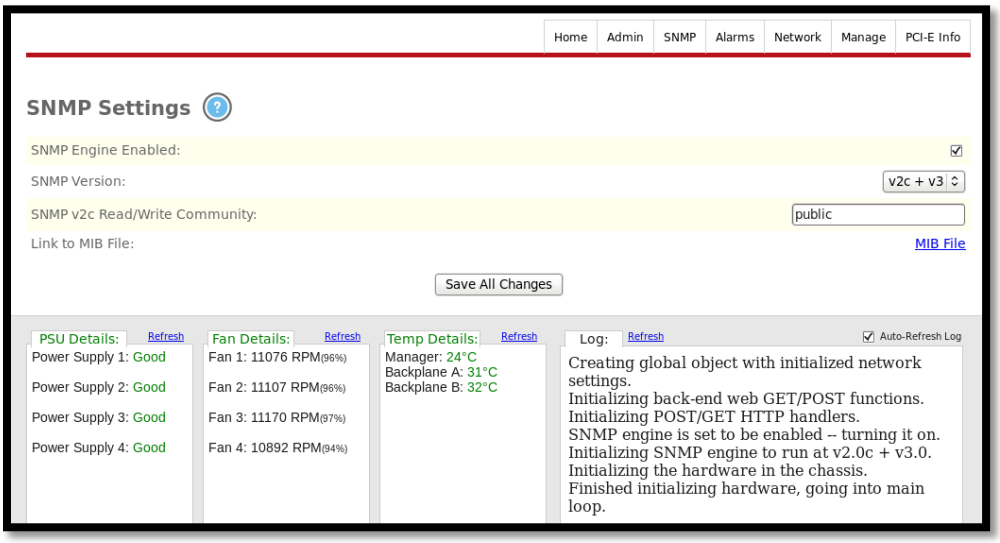

ALARM SETTINGS

With the SNMP built into the chassis, you can oversee the configurations that are used to set off an alarm whenever there's a malfunction with the equipment pertaining to the interior of the chassis. This feature is shown on **Alarm Settings**. These settings are recommended to stay at its default condition.

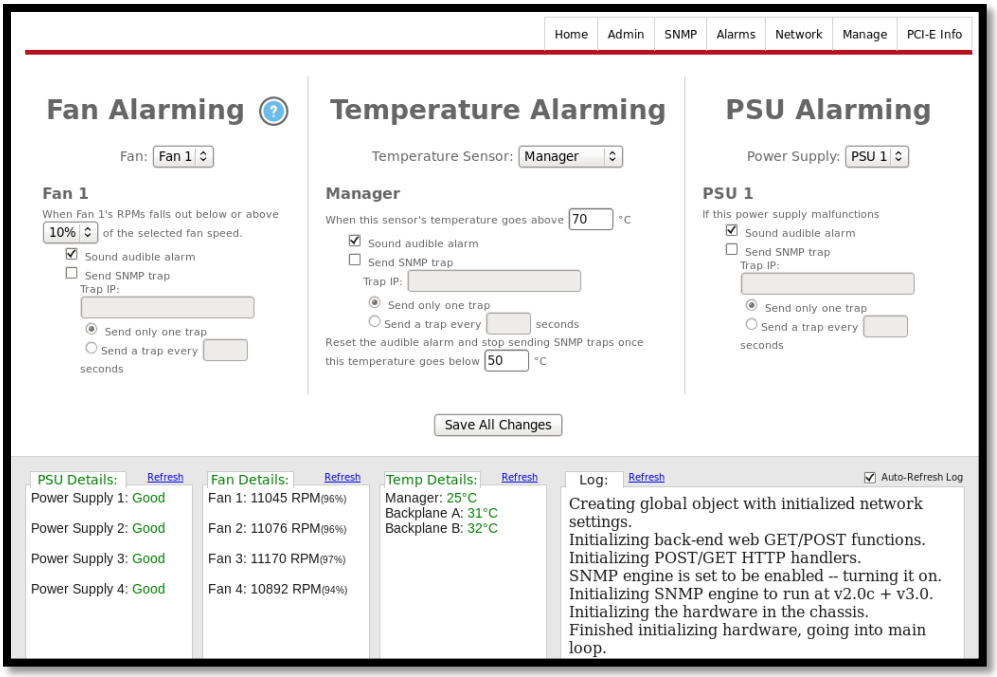

NETWORK

The **Network** tab allows you to change your IP address. It can also permit or prevent certain IP addresses from accessing the extended feature of the chassis.

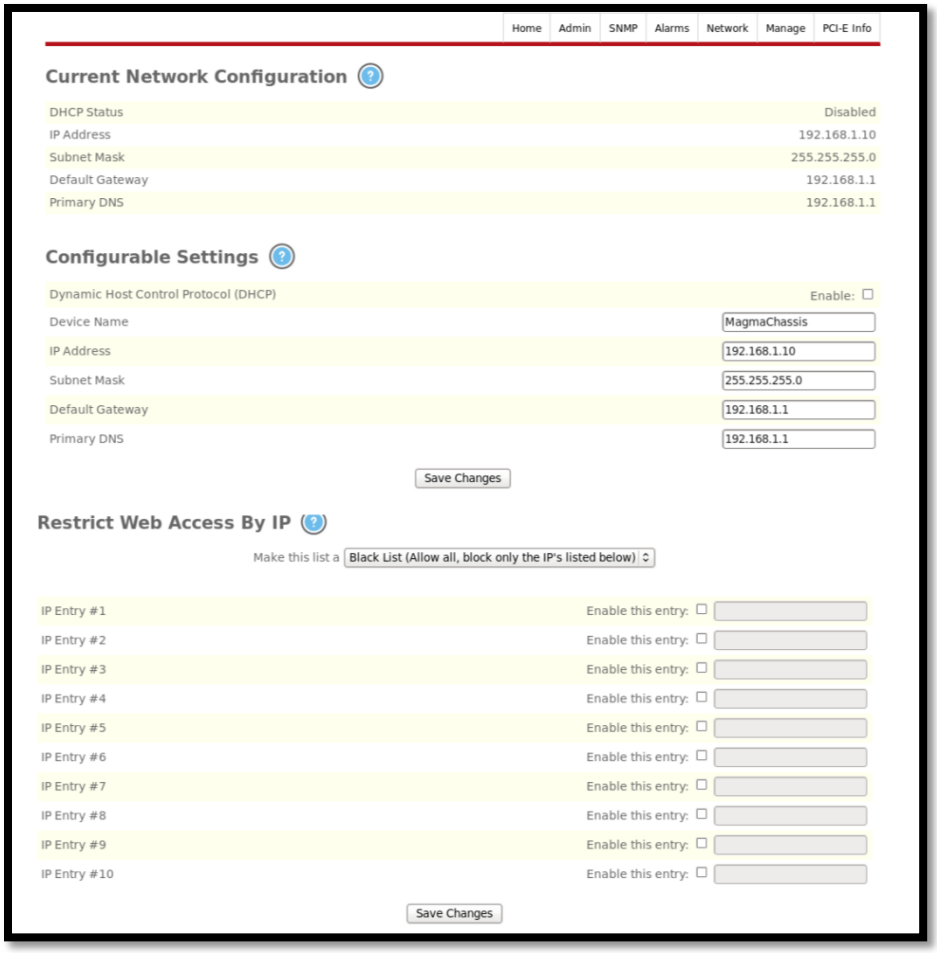

MANAGEMENT

Management is a feature that's available through the SNMP. This section allows you to the do the following.

1. You have the option of configuring the alarm to be ON and in alert mode while the chassis is powered by clicking the **Turn On Audible Alarming Feature**. By default, this alarm should already be activated. If any problems occur, an alarm from the chassis will emit a sound to alert you. Ensure the conditions of the internal fans, power supplies, or electrical components on the PCIe backplane are functional. To verify what is causing the chassis to respond improperly, you can turn off the alarm by pressing **Silence Audible Alarm**.
2. Turning OFF 3.3v when servicing the chassis.
3. Remote Turn ON / OFF the chassis.

Turning OFF 3.3v when servicing the chassis

Allows you to turn off 3.3v power on side A and B. The left side is A and right is B from back of chassis. The only reason to turn this off is to service the chassis if A or B server goes down and you need to replace a GPU, you need to disable 3.3 v standby power to service chassis via GUI. Once disabled you will need to enable 3.3v standby to turn on the side A or B otherwise when you turn on your host, host turn on won't work. This is enabled by default.

- SIDE A= Turn A Aux Power Off
- SIDE B = Turn B Aux Power Off

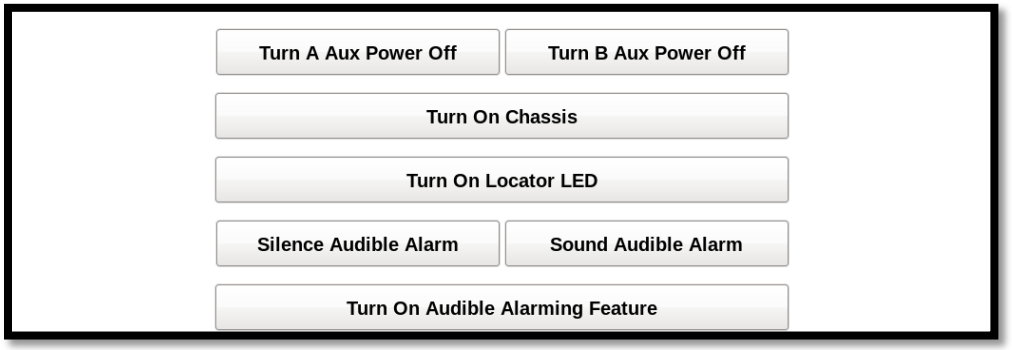
Turn A Aux Power Off
Turn B Aux Power Off
Turn On Chassis
Turn On Locator LED
Silence Audible Alarm
Sound Audible Alarm
Turn On Audible Alarming Feature

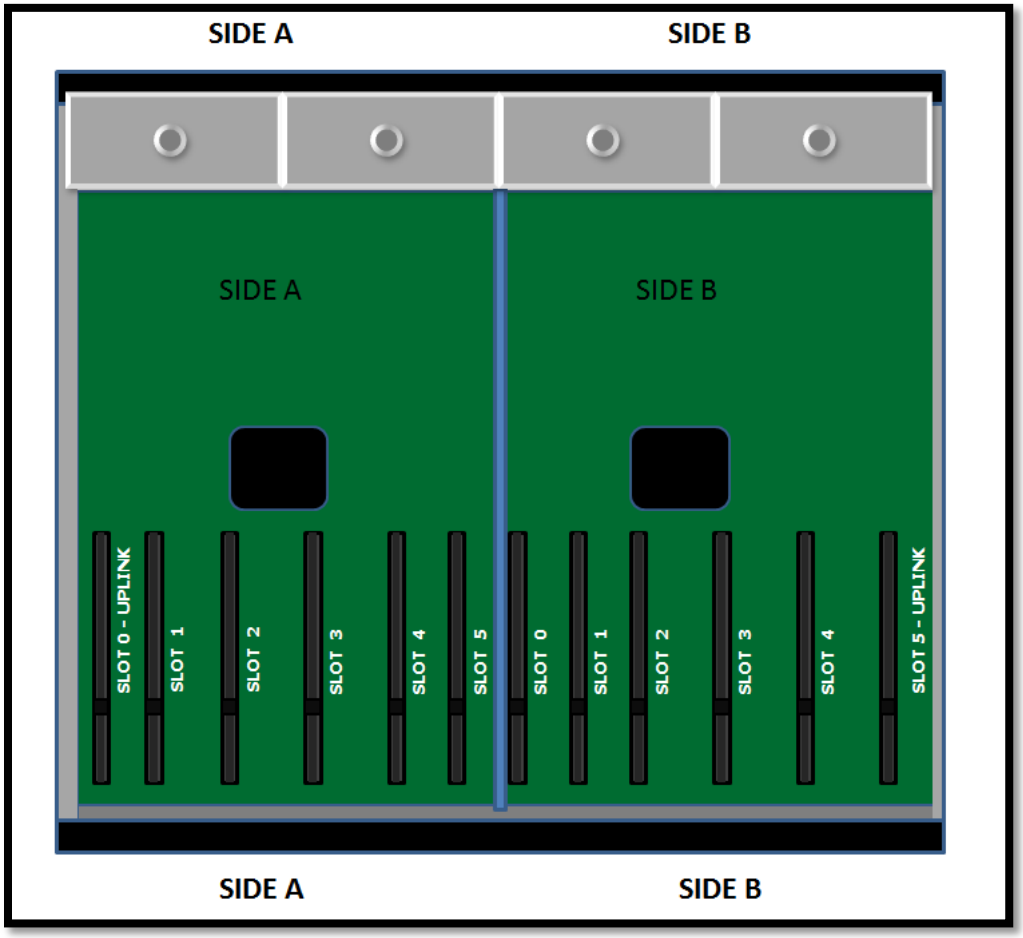

Remote Turn ON and OFF the chassis

Allows you to turn ON and OFF the expansion chassis using the GUI. You can only do this if you are not connected and linked to a host computer.
The "Turn On / Off Chassis" is enabled when host computer and chassis are not linked. The " Turn Off Chassis" or " Turn On Chassis" is greyed out if the expansion chassis is linked to a live host computer.

If you are already connected to a host computer do the following.

1. Power down the host computer.
2. Press the expansion chassis front power button to Off position.
3. Refresh the Express IO Manager. The remote "Turn On Chassis" is enabled.
4. Press the "Turn On Chassis" button to power up the expansion chassis.
5. When the expansion chassis is powered up, the "**Turn On Chassis**" button changes to **"Turn Off Chassis".**
6. To turn off the expansion chassis, just press the "Turn Off Chassis" button.

If you are <u>not connected</u> to a host computer do the following:

1. Connect the power cords to the expansion chassis.
2. **<u>Do not</u>** press the expansion chassis front power button.
3. Refresh the Express IO Manager. The remote "Turn On Chassis" is enabled.
4. Press the "Turn On Chassis" button to power up the expansion chassis.
5. When the expansion chassis is powered up, the "Turn On Chassis" button changes to "Turn Off Chassis".
6. To turn off the expansion chassis, just press the "Turn Off Chassis" button

PCI-E INFO

The **PCI-E Info** page contains status on the individual slots of the backplane device, status of 3.3v and 12v. It also provides you with an overview of what speed it's running on and how many lanes the slot is using. This variation is based on the PCI-Express card that is inserted into the slot.

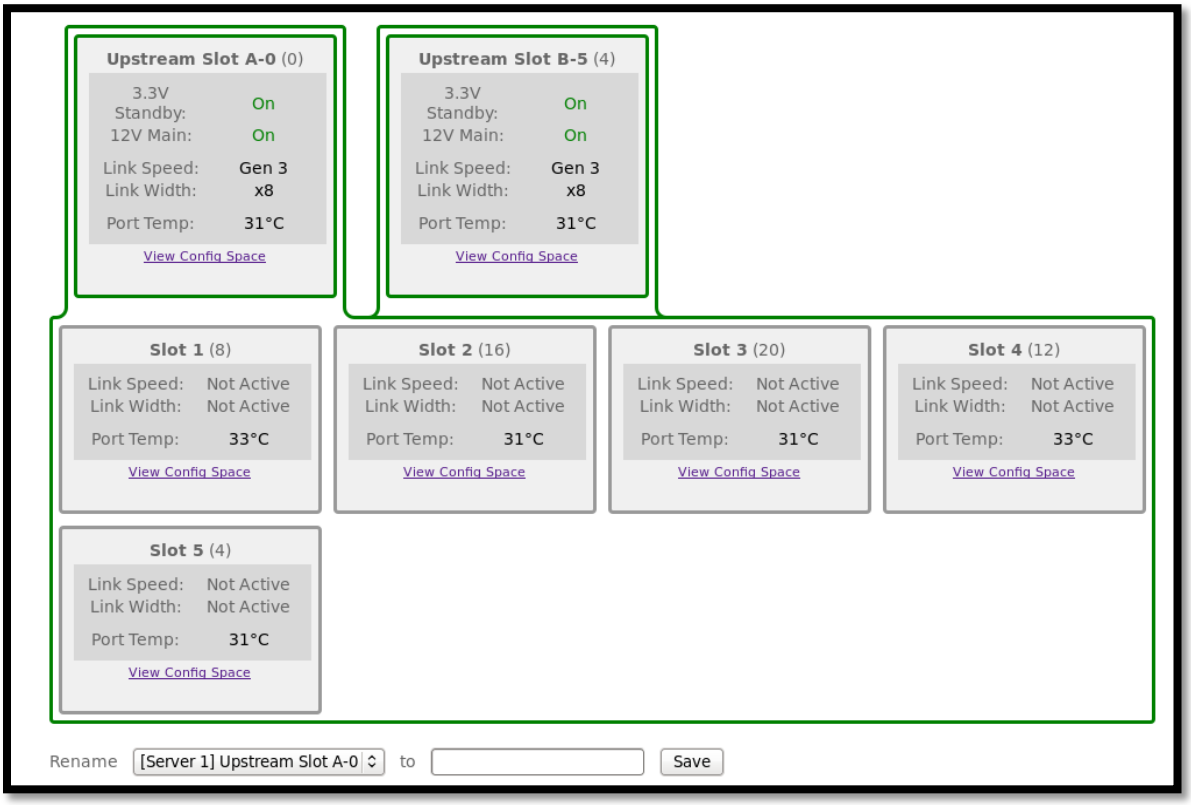

The Port Temp is the temperature of the port on the PLX chip.

Fan Control

Control fan speeds for better performance. You can manage the velocity of the fan by selecting the desired speed.
MAGMA does not support lowering the fan speed, do this at your own risk. It is not recommended to lower the fans speed to reduce noise when running high end GPUs as it can heat up (increase operating temperature) and lead to failure. High end GPU needs cooling.
NOTE: You can monitor heat from chassis from nvidia-smi.

To access the Fan Control do the following:

1. On your Internet browser type 192.168.1.10/fan_control.html
2. Select Edit. Click the drop-down arrow
3. Choose the desired speed (from 20% to 100%)
4. Click submit
5. Click save

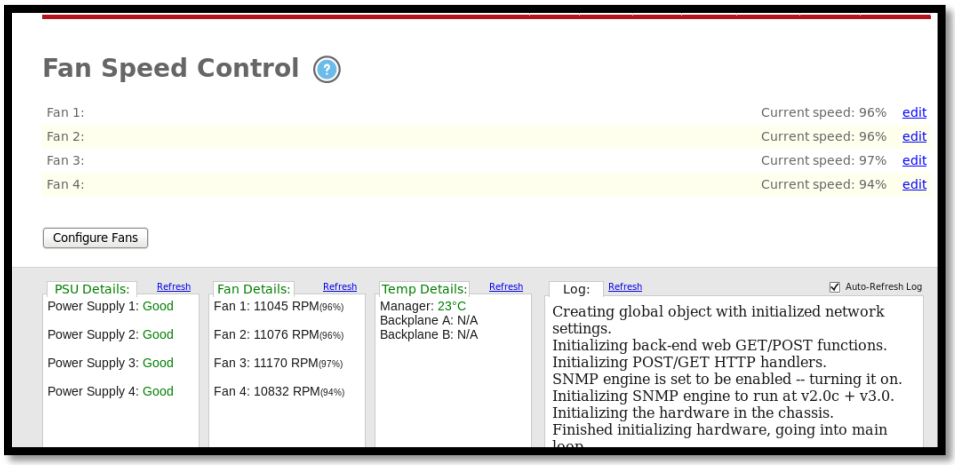
Fan Speed Control
Fan 1: Current speed: 96% edit
Fan 2: Current speed: 96% edit
Fan 3: Current speed: 97% edit
Fan 4: Current speed: 94% edit
Configure Fans
PSU Details: Refresh
Power Supply 1: Good
Power Supply 2: Good
Power Supply 3: Good
Power Supply 4: Good
Fan Details: Refresh
Fan 1: 11045 RPM(96%)
Fan 2: 11076 RPM(96%)
Fan 3: 11170 RPM(97%)
Fan 4: 10832 RPM(94%)
Temp Details: Refresh
Manager: 23°C
Backplane A: N/A
Backplane B: N/A
Log: Refresh
Auto-Refresh Log
Creating global object with initialized network settings.
Initializing back-end web GET/POST functions.
Initializing POST/GET HTTP handlers.
SNMP engine is set to be enabled -- turning it on.
Initializing SNMP engine to run at v2.0c + v3.0.
Initializing the hardware in the chassis.
Finished initializing hardware, going into main loop.

Fan Configuration

This feature allows you to change and set the Fan RPM (Revolutions per minute). With a high RPM, the fan will move more air or remove more heat from the expansion chassis. Changing the RPM affects the air movement and the noise level. As you increase the RPM of a fan the noise or decibel (dBa) also increases. Decreasing the RPM also decreases the noise level.

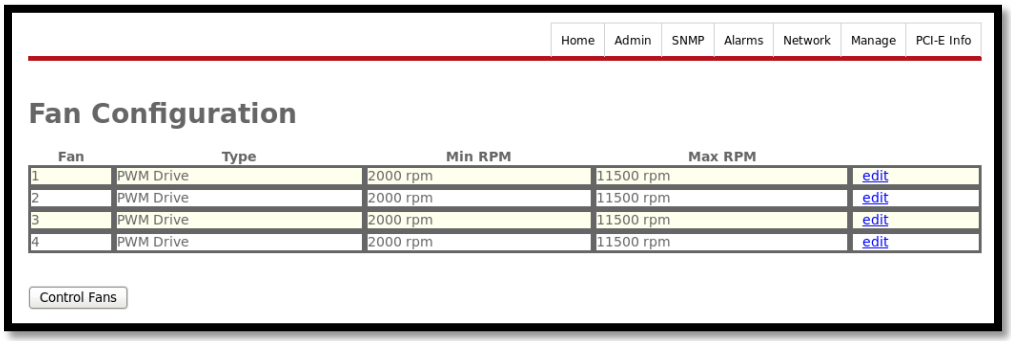

MAGMA does not support lowering the fan RPM, do this at your own risk.!!!

Servicing the Server A or B (Side A or Side B)

You can service one side of the unit without power interruption of the other side of the unit. Example of performing service: removing or replacing a PCIe card, replacing Interface card, or swapping out a power supply.

Viewing the expansion chassis from the back. SIDE A is on your Left, SIDE B is in your Right

Viewing the expansion chassis from the front. SIDE A is on your Right, SIDE B is on your Left.

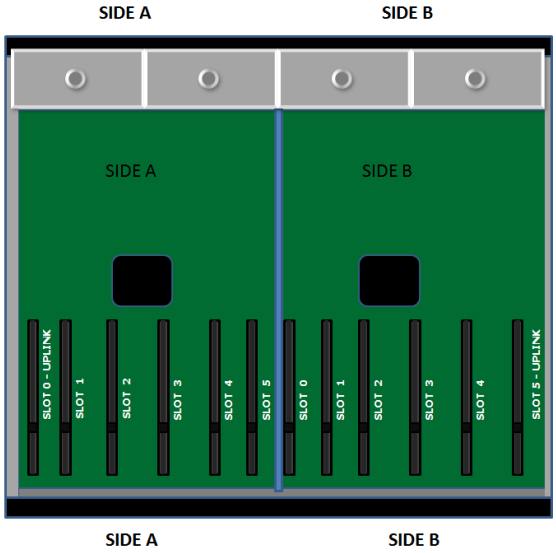

Deactivating Server A/B (side A/B)

Example: servicing server B / side B

1. Power down/Shutdown the host computer
2. Go to 192.168.1.10 using your internet browser to start Express IO Manager
    a. Username will be "default" and the Password will be "magma".

3. Click Manage
4. Click "Turn B Aux Power OFF".

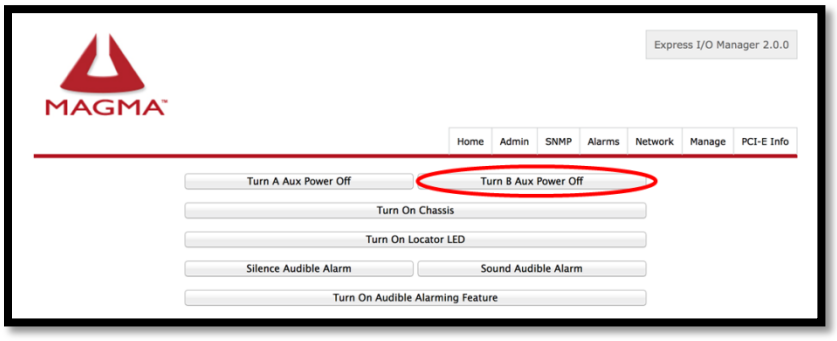

The Side B of Magma EB3600-AB will shutdown: cuts off the power to the 2 power supplies and 2 fans come to full stop.

5. Verify it is OFF, check 3.3v LED on the backplane in the expansion chassis it should be OFF.

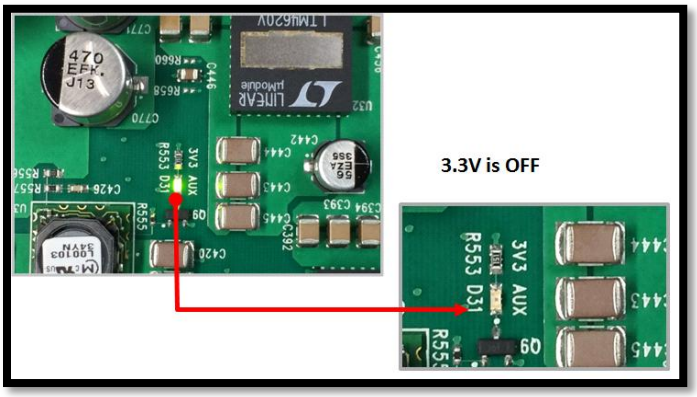

6. Go back to Express IO Web GUI, click PCI-E Info.
7. Check Upstream Slot B-5: 3.3V Standby is OFF and 12V is OFF.

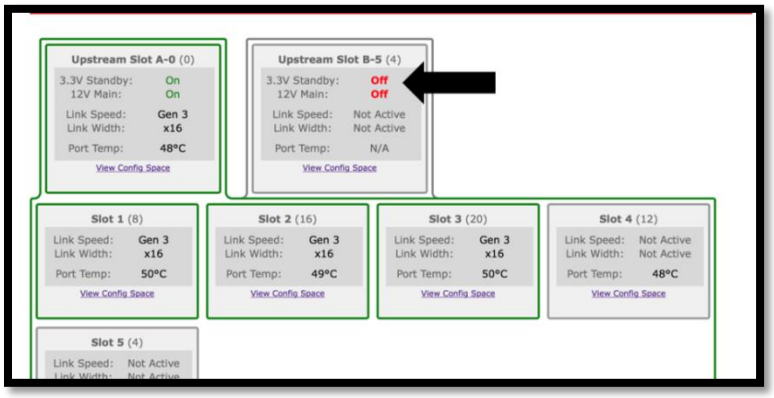

8. You may now proceed in servicing the server B / side B.

Reactivating Server A/B (side A/B)

Example: servicing server B / side B

1. Go to 192.168.1.10 using your internet browser.
2. Click Manage
3. Click "Turn B Aux Power On"

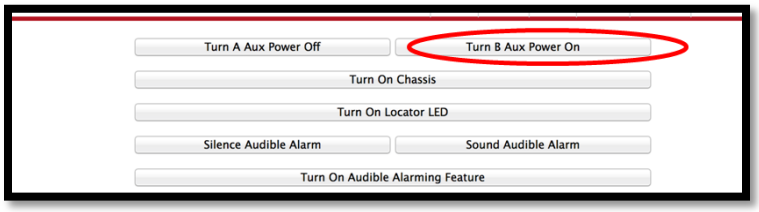
Turn A Aux Power Off
Turn B Aux Power On
Turn On Chassis
Turn On Locator LED
Silence Audible Alarm
Sound Audible Alarm
Turn On Audible Alarming Feature

4. Verify it is ON, check 3.3v LED on the backplane in the expansion chassis it should be ON.

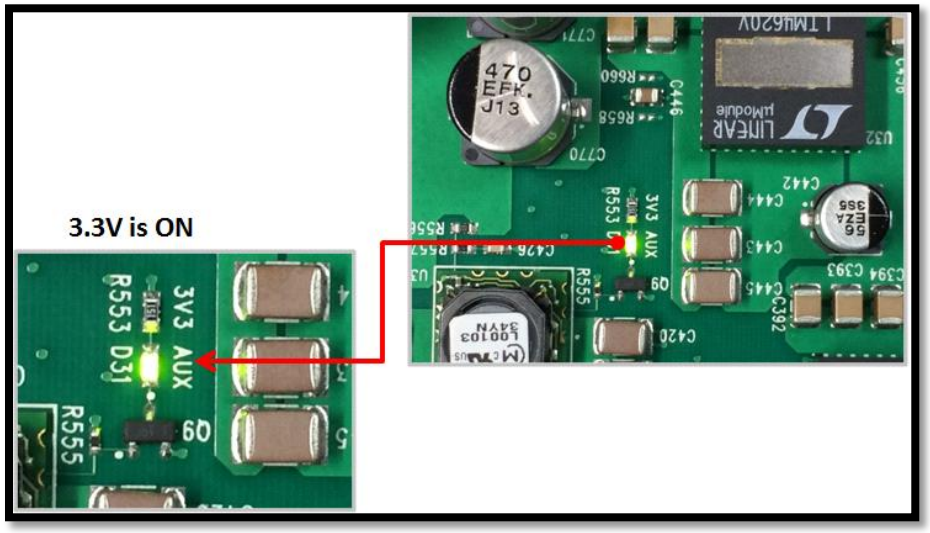

5. Go back to Express IO Web GUI, click PCI-E Info.
6. Check Upstream Slot B-5: 3.3V Standby is ON and 12V is ON.
7. Turn On the host computer.

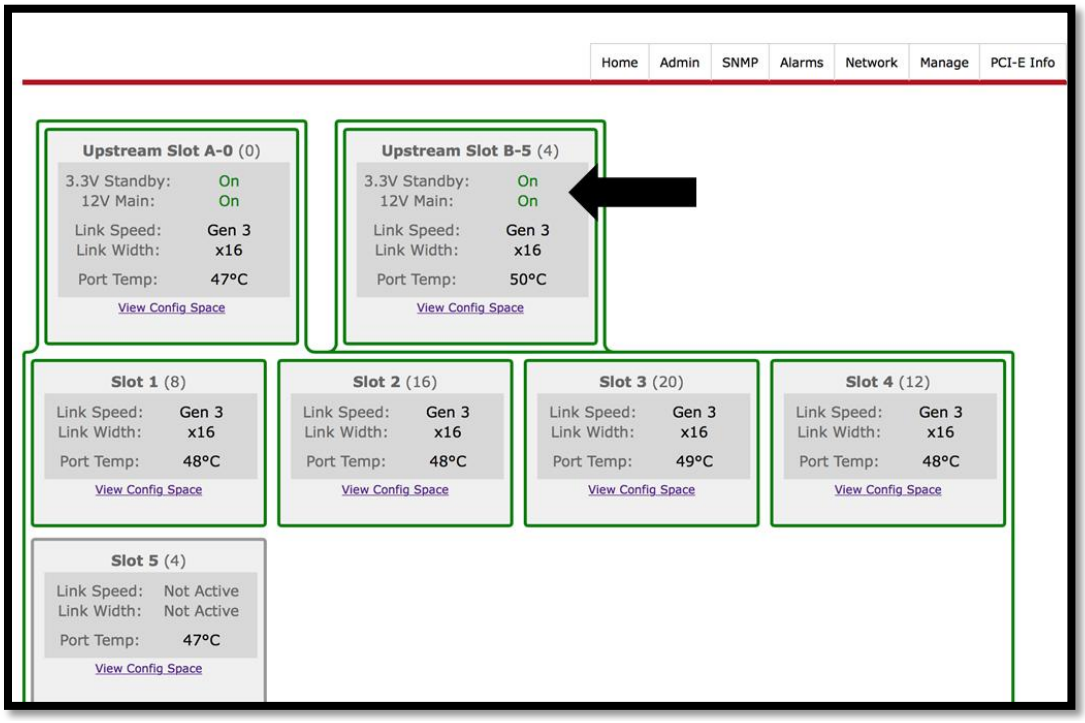

Reset to Default Values

You can restore your EB3600-AB chassis to the factory default values by pressing and holding the Alarm Reset Button. Hold and press the "Alarm Reset Button" until all LEDs are flashing from Orange to Green and then release. When all values have been restored, the LED will stop flashing.

Below are steps on how to reset the chassis to default parameters / values.

A. Power down the chassis.
B. Press and Hold the Alarm Reset button located on the Front Panel Status LEDs.
C. Hold the button until all LEDs are flashing from ORANGE to GREEN, then release.
D. Start your Internet Browser
    a. Type 192.168.1.10
    b. Enter User name: default
    c. Enter password: magma
    d. You should be able to login. Check, the SNMP is set back to default configuration.

Configure your SNMP Agent

If you use an SNMP agent to help you monitor your network, you will find all necessary monitoring information in the MIB file.

Retrieving the MIB File

The MIB file is available for download at: http://www.magma.com/drivers.asp in the SNMP section of that page. After you click on the MIB file link, save the file as type "All Files" to your preferred location. You may then open the file (using Notepad, or equivalent text editor) and all the information needed to configure your SNMP agent will be displayed on the screen:

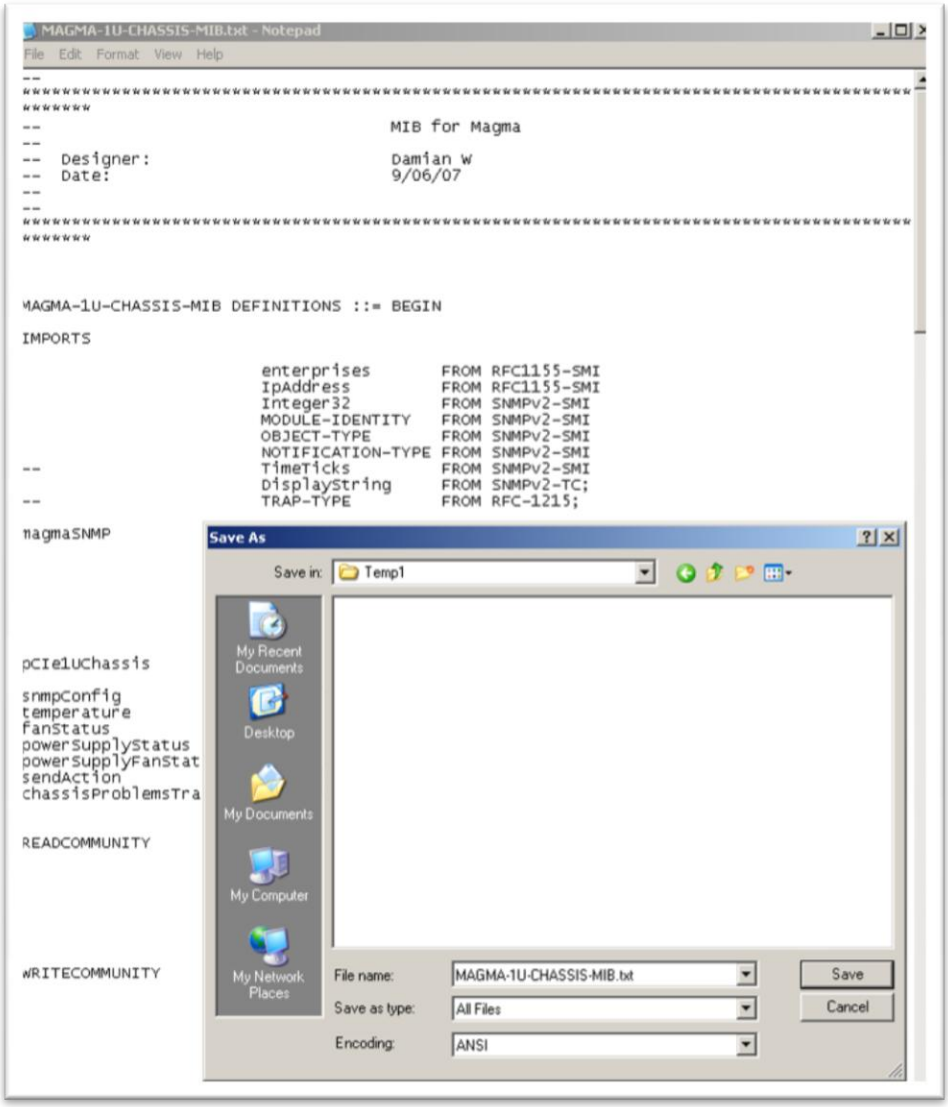

Once the MIB file is saved it can now be copied and loaded locally or to a remote server.

Accessing the various SNMP functions

Once the MIB file has been loaded to an SNMP server (via front-end software typically called a MIB Browser) we can read status information and set up specific functions otherwise not available via the Web interface.

The MIB Browser (or equivalent front-end SNMP software) will display the Magma chassis MIB contents in an explorer-like, Tree interface. A snapshot from the MIB Browser by iReasoning is shown below:

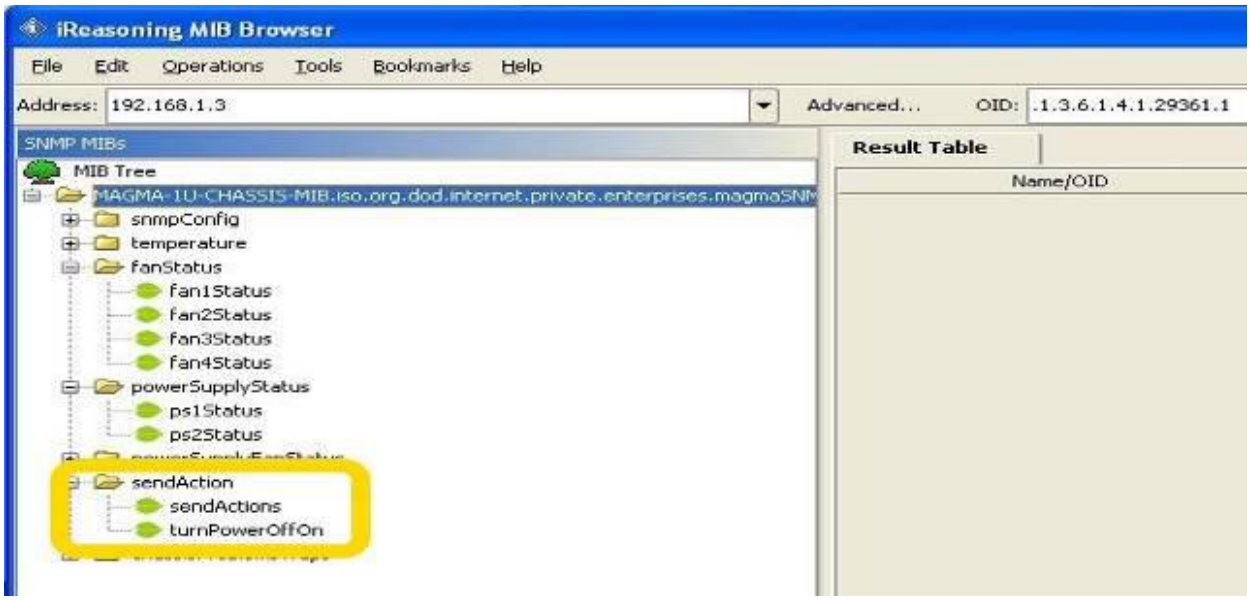

Under the MIB Tree, the Magma Chassis will have status information that can be read by expanding the respective folders. This information is also available in the Web interface mentioned previously. In addition, if we expand the *sendAction* folder (as shown above) we gain access to "writable" functions that essentially allow us to remote-control the chassis.

Chapter 5 Functional / Benchmark Tests

Here are simple functional tests that you can perform with your expansion unit.

1. Net burner / SNMP Verification Test
2. Swappable Fan Test
3. Hot swappable PSU Test
4. Express IO Manager "radio button" Test
5. Express IO Manager Administration Test

SNMP Verification Test

Accessing the SNMP Express IO Manager

A. Plug-in Ethernet cable (or use cross-over cable) to chassis RJ-45 port.
B. Plug-in all power cords to expansion chassis.
C. Don't turn ON the expansion chassis yet.
D. Connect the other end of the Ethernet cable to Laptop PC.
E. Go to your Laptop PC and Change the Internet Protocol version.
    a. Right click on the network icon from the system tray
    b. Select Open Network and Sharing Center
    c. Select Local Area Connection
    d. Select Properties
    e. Select Internet Protocol Version 4 (TCP/IPv4)
    f. Select Properties
    g. Select " Use the following IP address"
        i. IP Address: 192.168.1.20
        ii. Subnet mask: 255.255.255.0
        iii. Click OK

A. Start "internet browser" and then type 192.168.1.20
    a. Username: default
    b. Password: Magma
B. Express I/O Manager web interface shows up
C. Turn the expansion chassis ON
    a. Click Home Tab
    b. Click Details (PSU) and Fan Details.
    c. PSU's Details, should show "GOOD" for power supply 1, power supply 2, power supply 2, and power supply 4
    d. Fan Details, should show RPM values per each fan.
        i. FAN 1-8057 RPM (example only)
        ii. FAN 2 -8192 RPM (example only)
        iii. FAN 3 – 8192 RPM (example only)
        iv. FAN 4 – 8333 RPM (example only)

Swappable Fan Test

A. Pull all the fans out, do it one at a time. Start with Fan#1 first.
   a. Audible Alarm sound off
   b. Check FAN Details. It should show "FAN 1- 0 RPM' in red font
   c. Check Front Panel Status LED: FAN 1 LED is lit as solid ORANGE
B. Put the FAN 1 back into the fan slot holder.
   a. Check Front Panel Status LED: FAN 1 LED turns to solid Green
   b. Check Fan Details (via Express IO Manager). FAN 1 should show RPM value (i.e. FAN 1: 8057 RPM)
   c. Press the "Alarm Reset Button" to turn on Audible Alarm

Perform the same methods with the three remaining FANs. All Four Fans should be tested.

Swappable Power Supply Test

A. Disconnect power cord or pull out the power supply from housing, do this one at a time. Start with power cord#1 or power supply #1
   a. Power Supply audible alarm reverberates.
   b. Power Supply LED turns to Orange.
   c. PSU Details (via Express IO Manager) should show "Failure".
   d. Front Panel Status LED for PSU turns to Orange.

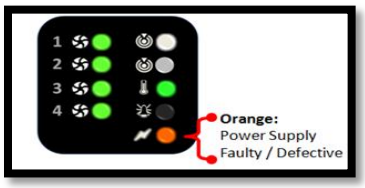

B. Put the power cord or power supply module.
   a. Press the Alarm Reset Button, this should silence the alarm.
   b. Power Supply LED turns to solid Green.
   c. PSU Details (via Express Io Manager) should show "Power Supply is Good"
   d. Front Panel Status LED turn to solid Green.

Express IO Manager "radio button" Test

A. Click "Manage" Tab
B. Click "Turn OFF chassis"
    a. Chassis should turn off
C. Click "Turn ON Chassis"
    a. Chassis should turn on
D. Click "Turn ON Locator LED"
    a. Flashing LEDs comes on from the back of the unit below RJ-45 port.
    b. Front Panel Status – Locator LED flashes
E. Click "Turn Off Locator LED"
    a. Locator LED should turn OFF.
F. Click "Turn ON Audible Alarming Feature"
    a. Click "Sound Audible Alarm", alarm should sound off
    b. Click " Silence Audible Alarm"

Express IO Manager Administration Test

A. Under "Enable / Disable Users"
    a. Enter "test" in the provided space.
    b. Check the box.
    c. Click Save.
B. Under "Permissions"
    a. Select the pull down arrow.
    b. Select test.
    c. Check all Permissions (box)
    d. Click Change Permissions
C. Under "Password Change"
    a. Select the pull down arrow.
    b. Select "test", if it's not selected yet.
    c. Enter new password as "test"
    d. Click Save Password.
D. Close the Internet Browser
    a. Re-launch Internet Browser
    b. Type 192.168.1.10
    c. Log in using the "test" account
        i. User name: test
        ii. Password: test
    d. You should be able to log in.

Chapter 6 Rack Slide Installation

EB3600-AB Chassis Rack installation

This section shows you how to install the EB3600-AB chassis in a rack-mount cabinet.

Rack Mounting

The PCIe expansion chassis can be installed in a rackmount cabinet that conforms to Electronic Industries Alliance (EIA) standards for computer equipment. The cabinet must be tall enough to accommodate the computer's height and deep enough to accommodate the system's depth, while providing the proper clearances for air flow and cabling. A cabinet with a standard depth of 31.5 inches (800mm) should be sufficient; however, a rack with a non-standard depth dimension of at least 28 inches (660mm) will provide the suggested minimum front and rear chassis clearances needed for an installation. The PCIe expansion chassis is designed to be supported in the cabinet with rack slides

Rack Slides

Two different rack slide kits are available, 26" and 28" Rack slide kits. Each rack slide kit comes with two 7.25" adjustable mounting bracket extensions for use with the rack slides.

Slide Rail Dimension Information

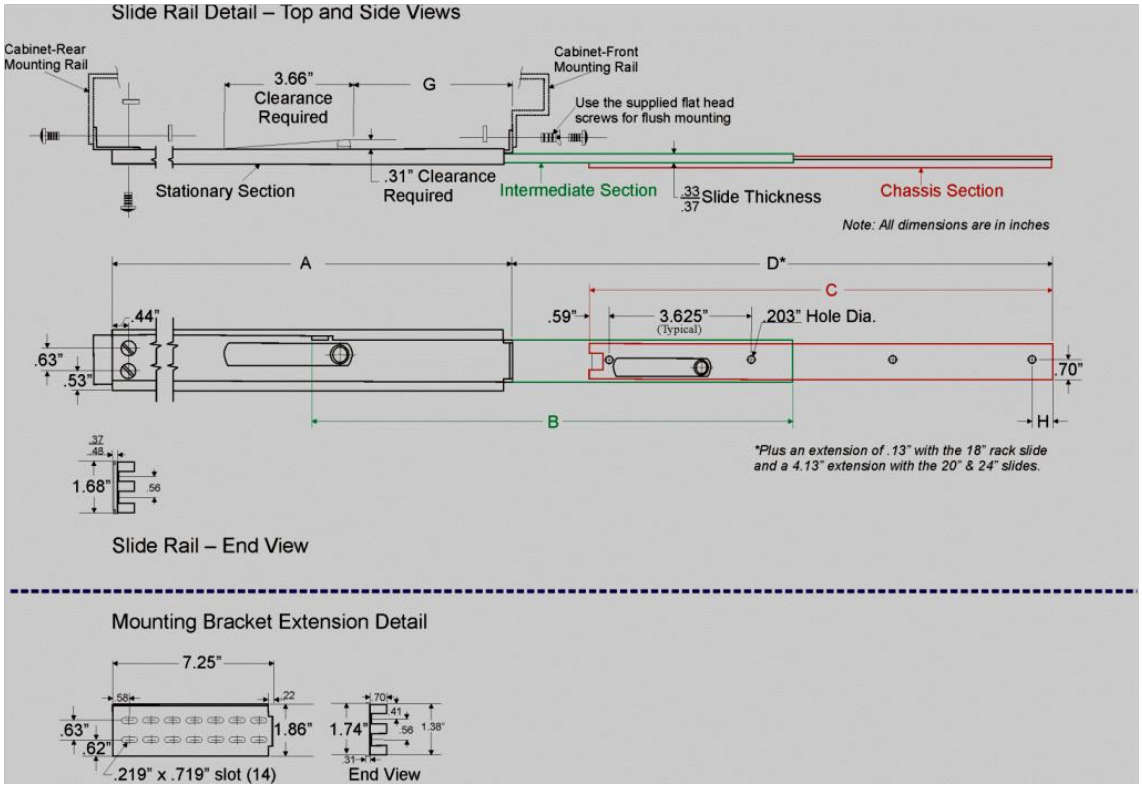

Specifications

Slide Rail Specs	
Stationary Section	Closed Slot
Material	Cold Rolled Steel
Slide Length – A	28.00 in
Intermediate Length - B	25.25 in
Forward Extension - D (min)	27.00 in
Forward Extension - D (max)	29.00 in
Weight Capacity	80 lbs

- Standard hardware packages include all hardware necessary to mount your Chassis:
  - Rear mounting brackets
  - Bar nuts (CA8056-06-0017)
  - #10-32 x 0.50 F.H.M.S. (flush front rail mounting)
  - #10-32 x 0.38 B.H.M.S.
  - #10-32KEPS® nuts

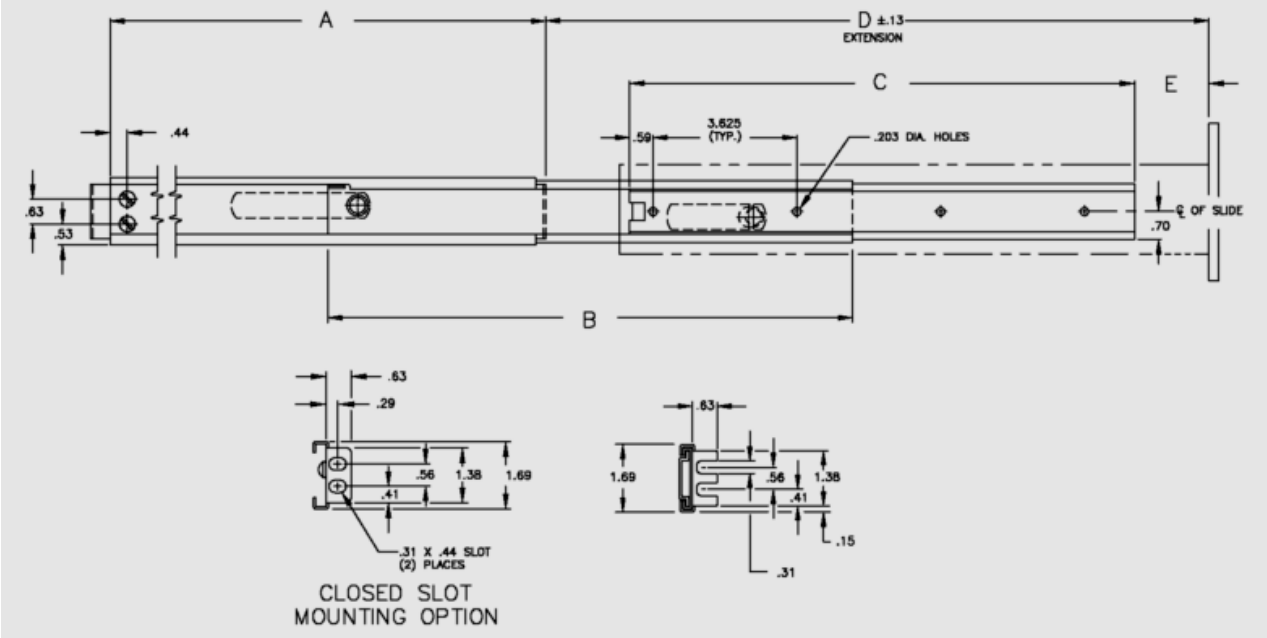

Safety Instructions

Always use caution when servicing any electrical component. Before handling the Magma Expansion chassis, read the following instructions and safety guidelines to prevent damage to the product and to ensure your own personal safety.

Materials handling

To reduce the risk of personal injury or damage to the equipment:

1. Practice local occupational health and safety requirements and guidelines for handling materials.
2. Obtain assistance to lift and stabilize the product during installation or removal.
3. The weight of this part or unit is between 60 to 70 lbs. It takes two people to safely lift this part or unit. To prevent personal injury or damage to the chassis, never attempt to lift expansion chassis alone.

4.
5. Disconnect all cabling and pluggable power supplies and modules to reduce the weight of the product.
6. Be careful when pressing the rail release latches and sliding the product into the rack. The slide rails could pinch your fingertips.
7. Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
8. Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.

Rack Stability

To reduce the risk of personal injury or damage to the equipment, the rack must be secured adequately to prevent it from becoming unstable and/or falling over.

1. Extend the leveling jacks to the floor.
2. Ensure that the full weight of the rack rests on the leveling jacks.
3. Install stabilizing feet on the rack.
4. In a multiple-rack installation, fasten the racks together securely.
5. Extend only one rack component at a time. Racks can become unstable if more than one component is extended.
6. Load the rack from the bottom up, starting with the heaviest component.
7. Ensure that the component is properly mated with the rails, or the rails may be unstable.
8. Do not attempt to move a fully loaded rack. Remove components from the rack before moving it.
9. Do not attempt to move a rack on an incline that is greater than 10 degrees from horizontal.

CAUTION

Elevated Operating Ambient Temperature: If the expansion is installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment might be greater than room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified for the expansion.

CAUTION

Reduced Air Flow: Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised

CAUTION

Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or over current protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.

CAUTION

Reliable Earthing: Reliable earthing of rackmounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (for example, use of power strips).

Tools and Supplies Needed

1. Phillips* (cross head) screwdriver (#1 bit and #2 bit)
2. Measuring Tape

Parts List

2 - Slide Rails
4 - End Brackets (2-long, 2-short)
2 - Bags of Assorted Nuts & Bolts

Slide Rail Installation Instructions

Prepare Slide Rails for Assembly (STEP 1)

1. Remove slide rails and end bracket from the box.
2. Slide rail kits include the following items

Remove slide piece **A** from the assembly. Slide the inside portion of the rail completely out until you hear an audible click. On the inside of the rail, you will see a rail stop hook, push the hook up to release and detach the inside portion of the slide completely from the outside portion of the rack slide. Set aside slide A. You'll be mounting this part of the expansion chassis.

The remaining assembly includes slide piece **C** inside slide piece **B**.
Prepare the end bracket **D** will be added to slide piece **B** in **Step 3**.

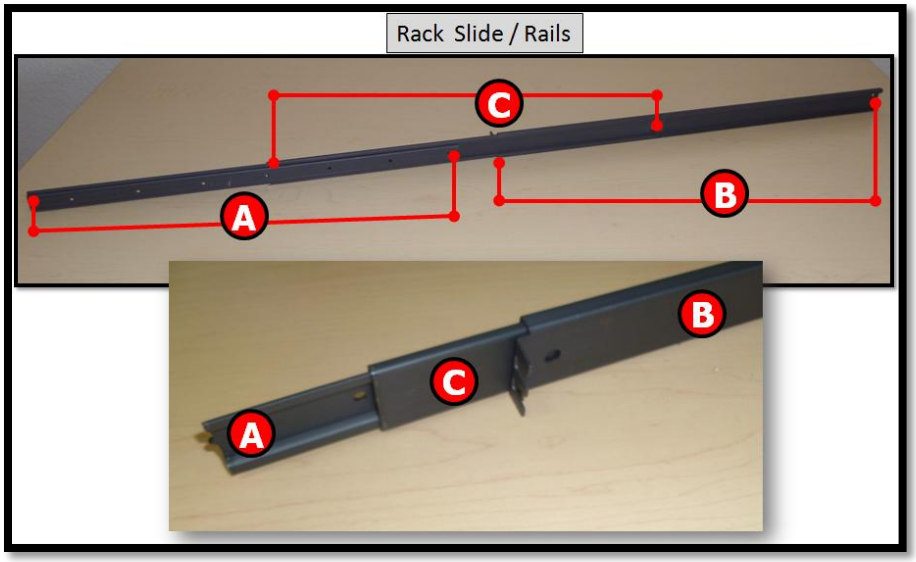

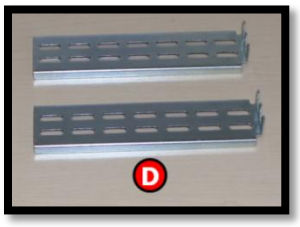

Attach Rail to Chassis (STEP 2)

Attach Slide piece **A** to the side of the chassis. Position the spring end toward the rear of chassis. Place as far forward as the whole alignment allows. Attach rail section to both sides of chassis before continuing.

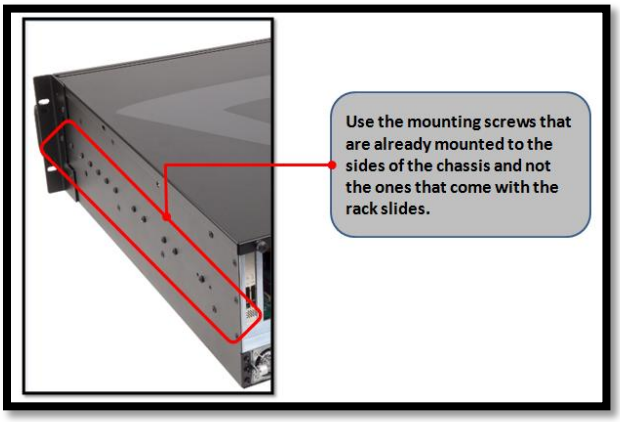
Use the mounting screws that are already mounted to the sides of the chassis and not the ones that come with the rack slides.

The screws that come with the slides will be too long and could potentially touch the Host PCB's. If you reuse the screws that are already on the sides, you will be fine. These screws have Sems Lock washers and get 2 full turns into the threads and there are several that can be used on any rack slides. They do not protrude deep into the chassis, but they give enough support.

Assemble Slide Rails (STEP 3)

Measure the rack from front to back so you can confirm how long the rail must be to fit properly.

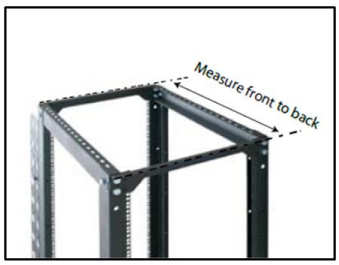

Next, assemble Slide piece **B** with end bracket **D** as shown below and secure with 2 Panhead screws and locking nut. Ensure the Phillips screw head is located on the "open" side of the Slide pieces as shown below. Tighten finger tight only to allow for minor adjustment during assembly in the **Step 5.**

Add Screws to Rack Post (STEP 4)

Attach 2 Panhead screws into the rack post where you want the chassis mounted. Be sure you have measured accurately to ensure that everything fits in the rack correctly. Leave the screws untightened until after you place the slide rail's fingers (Step **5**) between the screws as shown. If your rack has holes too large for the screws, you can use the Bar Nut to secure your mounting by inserting the Panhead screw through the rack hole and screwing it into the Bar Nut on the reverse side of the rack post, as shown. Notice that the holes on the Bar Nut are spaced unevenly to accommodate different racks.

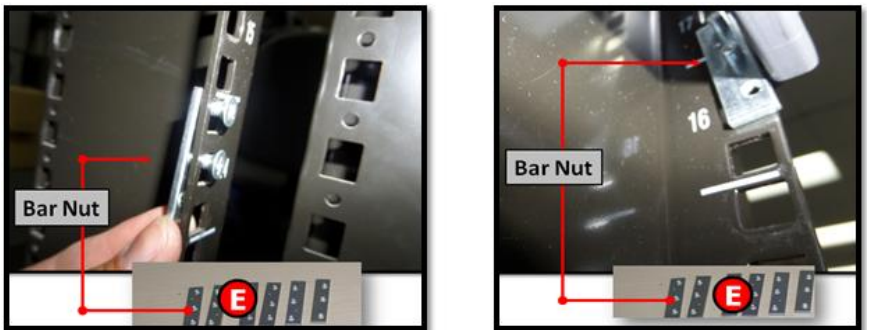

Attach Slide Rail to Rack (STEP 5)

Attach to inside of rack with "fingers" pointing "out" and the end bracket to the rear. Secure each Slide Mount with 4 screws as shown below.

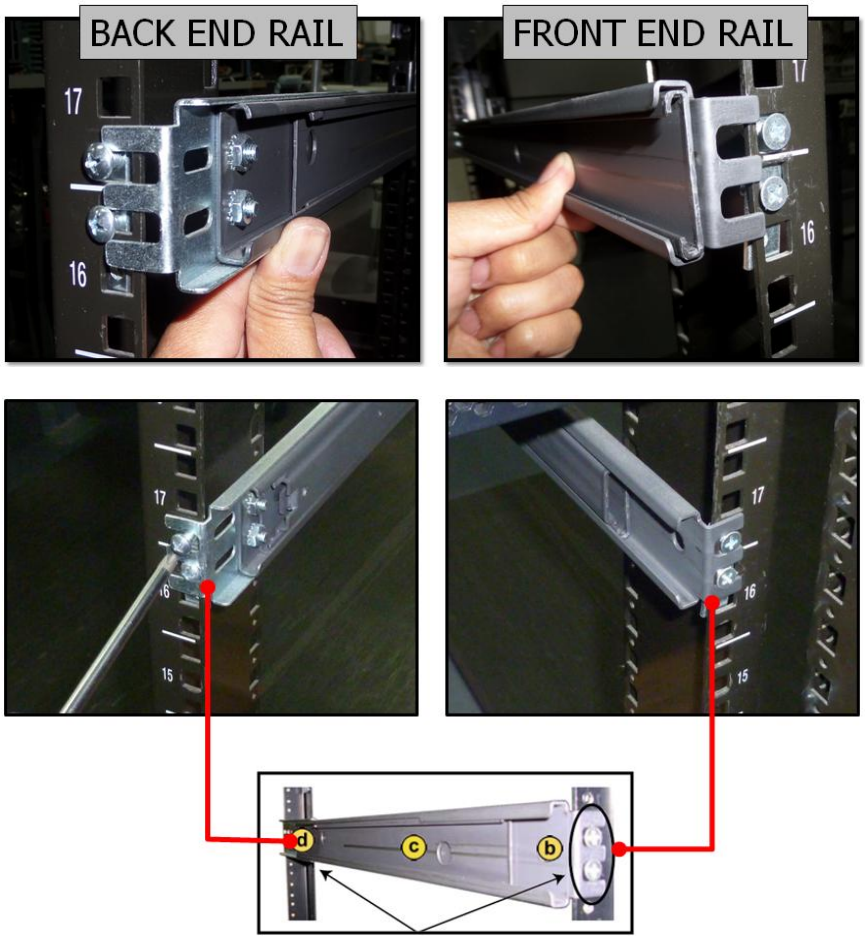

Secure with 2 screws to both front and rear posts. After you have secured the slide rail fingers to the rack posts, tighten the 2 screws used to attach slide rail **B** to the end bracket **D**.

Attach Chassis to Slide Rail / Rack (STEP 6)

CAUTION

Install the system as low as possible into the rack enclosure. For best stability, do not install the system above equipment that weighs less than it does.

The system is heavy, it weighs about 60 lbs. In the following procedures, two people are required to move the system. Two people are also required to align and install the slide assemblies into the rack.

Extend slide piece **C** out until the safety catch engages. Do this for both sides. Next, insert the slide rail **A** inside the grooves on slice part **C** as shown below. Push in until it stops.

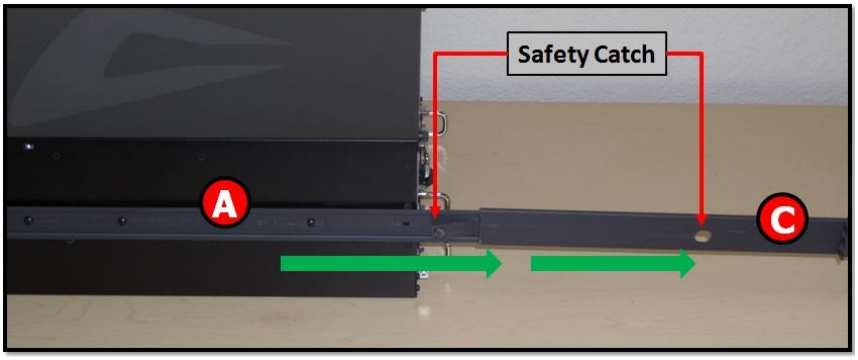

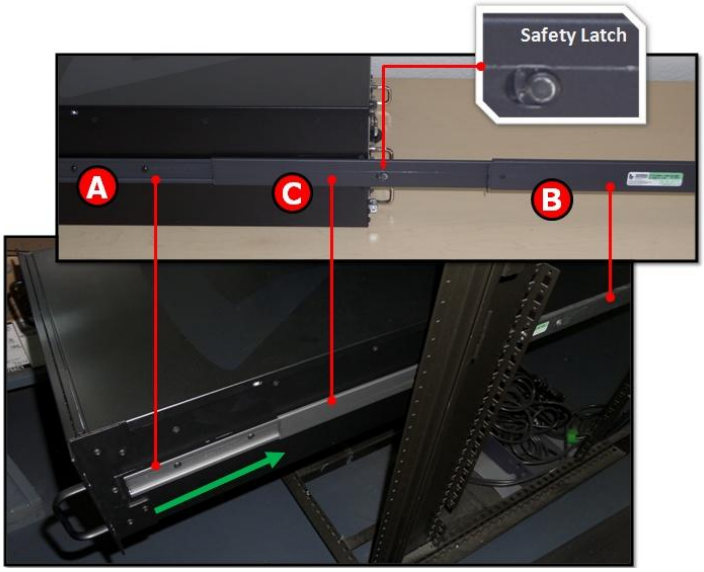

Next, press on the safety catch on slide piece **A** and continue to push until it stops again. Press on the safety catch again to allow the chassis to slide all the way into the rack.

Secure the Chassis to the Rack (STEP 7)

Use 2 Panhead screws, on each side, to secure the chassis to the rack as shown below.

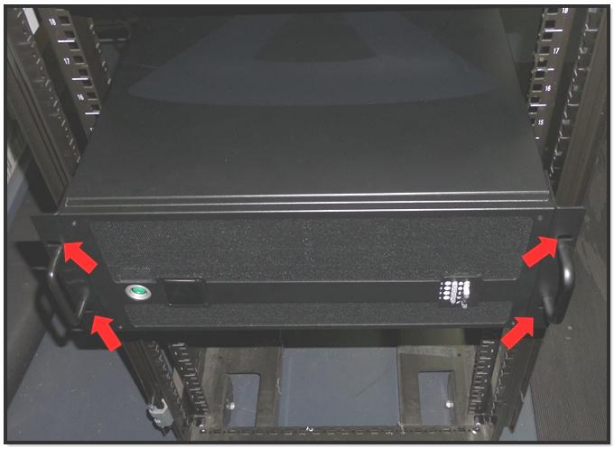

Earth Leakage Current

To reduce the risk of electric shock due to high leakage currents, ensure that there is a reliable grounded (earthed) connection before connecting power distribution products to AC power.

Grounding the EB3600-AB Expansion Chassis

CAUTION

The system chassis must be securely grounded to the rack cabinet frame. Do not attempt to connect power to the system until grounding cables are connected. Completed power and safety ground wiring must be inspected by a qualified electrical inspector. An energy hazard will exist if the safety ground cable is omitted or disconnected.

CAUTION

Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

CAUTION

This unit has more than one power cord. To reduce the risk of electrical shock, disconnect all power cords before servicing.

This equipment must be grounded properly for proper operation in accordance with local electrical safety standard.

Regulatory Safety Requirements

The equipment as evaluated is found to classify as "Stationery Pluggable equipment A" based on the IEC.EN 60950-1:2005

NOTE
In Finland, Norway and Sweden, TOUCH CURRENT measurement results exceeding 3,5 mA r.m.s. are permitted only for the following equipment:
- STATIONARY PLUGGABLE EQUIPMENT TYPE A that
• is intended to be used in a RESTRICTED ACCESS LOCATION where equipotential bonding has been applied, for example, in a telecommunication centre,
• has provision for a permanently connected PROTECTIVE EARTHING CONDUCTOR, and
• is provided with instructions for the installation of that conductor by a SERVICE PERSON;
- STATIONARY PLUGGABLE EQUIPMENT TYPE B;
- STATIONARY PERMANENTLY CONNECTED EQUIPMENT.

NOTE
In Denmark, TOUCH CURRENT measurement results exceeding 3,5 mA r.m.s. is permitted only for PERMANENTLY CONNECTED EQUIPMENT and PLUGGABLE EQUIPMENT TYPE B. In also to sell to Denmark, the equipment shall be re-designed to meet the requirements.
.

RESTRICTED ACCESS LOCATION meaning:

Location for equipment where both of the following apply:
− access can only be gained by SERVICE PERSONS or by USERS who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken; and

– access is through the use of a TOOL or lock and key, or other means of security, and is controlled by the authority responsible for the location.

PLUGGABLE EQUIPMENT TYPE A

Equipment that is intended for connection to a MAINS SUPPLY via a non-industrial plug (like CEE7 plug) or a non-industrial appliance coupler (like IEC 60320-1 connector), or both.

PLUGGABLE EQUIPMENT TYPE B

Equipment that is intended for connection to a MAINS SUPPLY via an industrial plug and socket-outlet or an appliance coupler, or both, complying with IEC 60309 or with a comparable national standard.

Chapter 7 Updating Netburner / SNMP

How to Update the Netburner on Linux

Requirements

1. Computer (Laptop / Desktop / Workstation)
2. Ethernet cable
3. Java
4. Internet connection & Internet browser (i.e. Firefox or Google Chrome)

Procedures Overview

1. Download file (.jar and .s19)
2. Connect hardware
3. Launch AutoUpdate.jar and load .s19 file
4. Check / verify the update

Download Files

1. Start your Internet Browser.
2. Contact Magma Technical Support to obtain the files and download link info.
3. Download the AutoUpdateJar.zip and .s19 file and save it to the Downloads folder.
4. Look for AutoUpdateJar.zip and extract it. To run the AutoUpdate.jar it requires the latest JAVA.
5. Open a terminal. Check that JAVA is working correctly by running the **java –version** command in the terminal. The output should look something like this.

[root@localhost Lenovo]# java -version
java version "1.7.0_45"
OpenJDK Runtime Environment (rhel-2.4.3.3.el6-x86_64 u45-b15)
OpenJDK 64-Bit Server VM (build 24.45-b08, mixed mode)
[root@localhost Lenovo]#

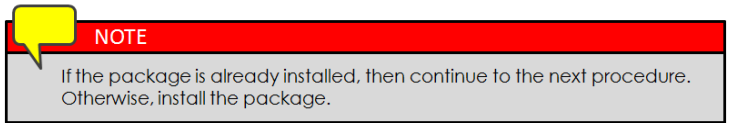

Connect the Ethernet Cable

1. Connect the Ethernet cable to RJ-45 port of Magma expansion unit and Laptop computer .
2. Set your network connection so that you are able to ping the Express IO Manager. The Magma SNMP / NetBurner has an IP address set to 192.168.1.10
3. Verify your connection by pinging the IP address 192.168.1.10. Run **ping 192.168.1.10** command in the terminal.

```
[root@localhost Lenovo]# ping 192.168.1.10
PING 192.168.1.10 (192.168.1.10) 56(84) bytes of data.
64 bytes from 192.168.1.10: icmp_seq=1 ttl=60 time=1.25 ms
64 bytes from 192.168.1.10: icmp_seq=2 ttl=60 time=0.266 ms
64 bytes from 192.168.1.10: icmp_seq=3 ttl=60 time=0.330 ms
64 bytes from 192.168.1.10: icmp_seq=4 ttl=60 time=0.301 ms
[root@localhost Lenovo]#
```

NOTE

If you are able to ping 192.168.1.10, then continue to the next procedure. Otherwise, see instructions on the following page on how to set your network.

Launch the AutoUpdate.jar

1. Open a terminal. Type **ls** command in the terminal and look for the Downloads folder.

```
[Lenovo@localhost ~]$ ls
Desktop    Downloads  Music     Public     Videos
Documents  junk.txt   Pictures  Templates
```

2. Go to the Downloads folder by typing **cd Downloads** command in the terminal, then type **ls**. Look for AutoUpdate.jar.

```
[Lenovo@localhost ~]$ cd Downloads
[Lenovo@localhost Downloads]$ ls
03492-00_CEQM77-CEQM77E-CEQM77HDE_SystemSetupUtilitySpec.pdf
1-3.pdf
AutoUpdate.jar
AutoUpdateJar.zip
autoupdate.zip
E6932_eManual_G55VW_Z104.pdf
EB3600-ab_2_0_0_beta_APP.s19
g750jw.pdf
gnuj10us.exe
jre1.8.0_45
jre-8u45-linux-i586.tar.gz
jre-8u45-linux-x64.tar.gz
NetBurner
NP915S3GK04US_manual.pdf
NVIDIA-Linux-x86_64-331.89.run
NVIDIA-Linux-x86_64-340.24.run
ThunderboltDevGuide.pdf
X10SAT.pdf
[Lenovo@localhost Downloads]$
```

3. Launch the AutoUpdate.jar software tool by typing **java –jar AutoUpdate.jar** command in the terminal. On Device IP, type or enter 192.168.1.10. Click Browse, locate the "EB3450_x_x_x.APP.s19" file, and then click "Open". See screenshot below as example.

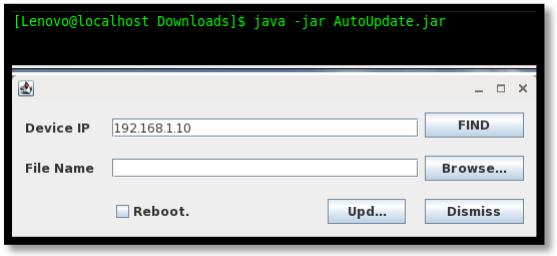

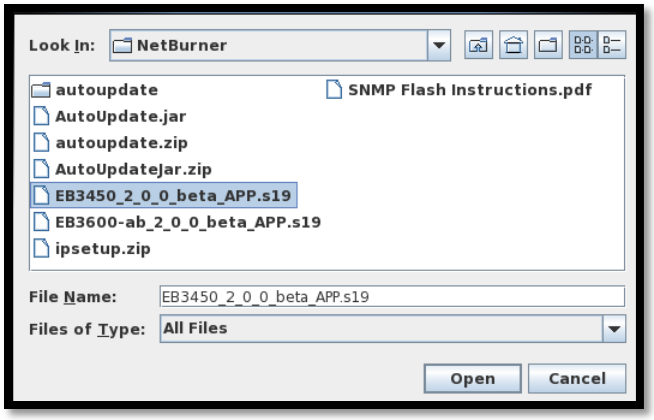

4. Check Reboot. Click Update and the "Authentication login screen" will come up. Login as "default" for UserName, magma for Password. Click OK and it will commence loading the program.

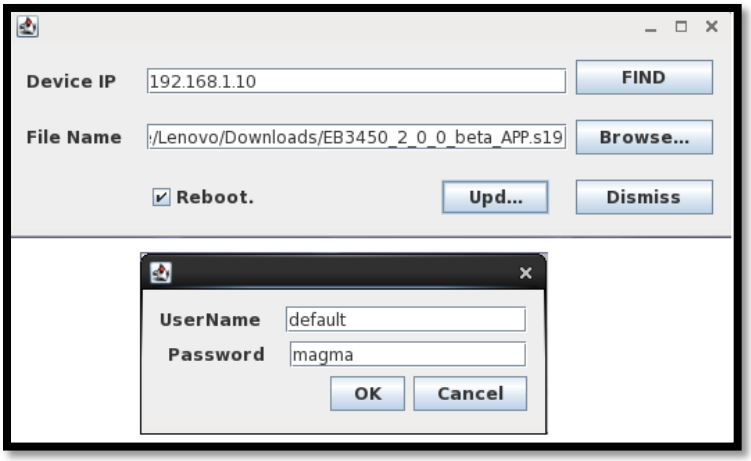

5. When done, it will show "100 Percent complete" and "Programming completed without Error".

Check and verify the update

6. Check and verify the version of Express IO Manager if it is updated.
   Launch the Internet browser (recommend to use Google Chrome or Firefox).
   Enter the IP address in the URL 192.168.1.10, then press "ENTER".
   Authentication login comes up. Enter "default" for User Name and magma for Password.

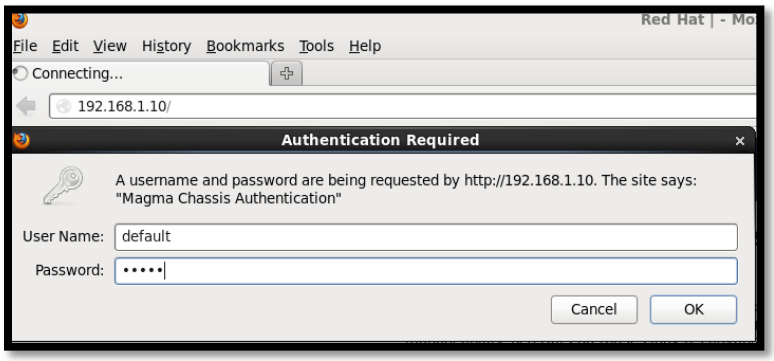

7. The user will be directed to the MAGMA Express IO Manager default home webpage. The screenshot below shows where to find the version of Express I/O Manager.

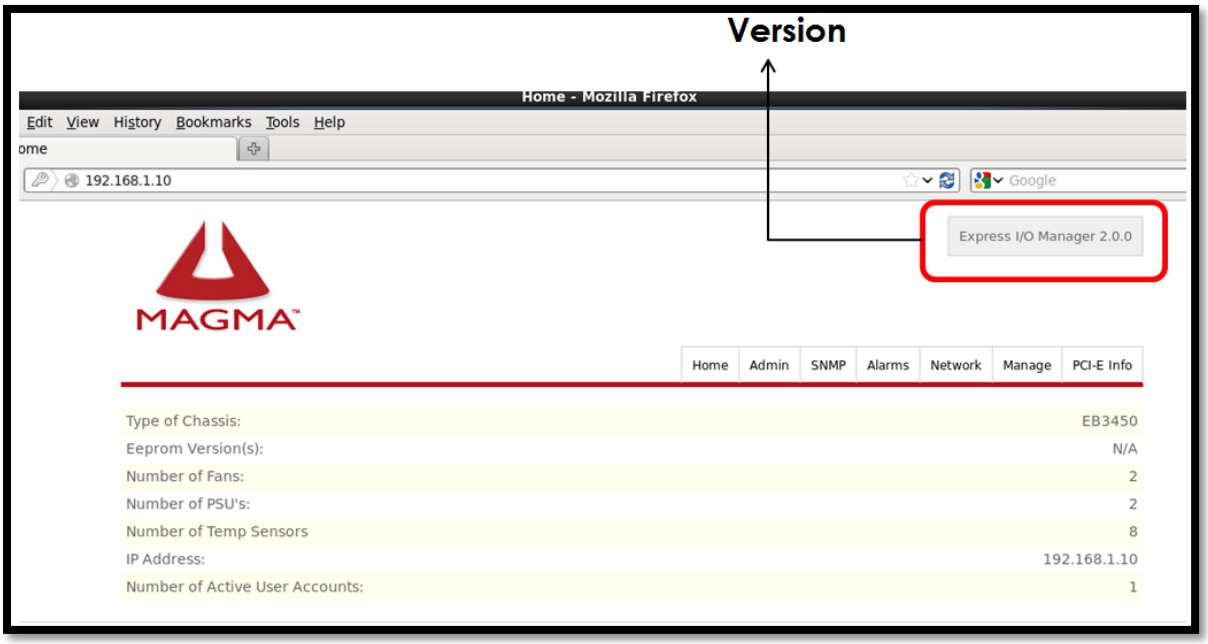

Chapter 8 Troubleshooting

Locate the Problem

If you are having trouble with the Magma Expansion chassis, first verify that all cards and cables are seated properly. Be sure you followed the instructions in earlier sections of this manual. Always remember to power **On** and **Off** correctly when rechecking your installation. If you are still having problems, try these troubleshooting steps:
The Magma expansion chassis is correctly displayed as a "PCI standard PCI-to-PCI bridge" in Windows Device Manager and as a "pci-bridge" in Linux.

Computer Hangs During Power Up

If your computer "hangs" while being turned on and you can't even start, follow the following steps to try to fix this problem:

1. Shut off the computer and then the expansion chassis and verify that all cards and cables are connected and seated correctly.
2. If it still hangs and you have added one or more hard drives in addition to several cards, ensure that you have not exceeded the power capabilities of the expansion chassis power supply. You can verify the capacity of your power supply by checking the label on the power supply. If you are not certain about the power consumption of your peripherals, it is best to remove them one by one (starting with those you suspect of being most "power hungry") until the system powers up.
3. If you have removed all 3rd Party cards from the Magma Expansion chassis and it still hangs, try the following:
    a. Remove the Magma host interface card from the computer and try booting up without the
    expansion chassis attached.
    b. If it boots up OK without the expansion chassis attached, its either you have a faulty host
    card or defective expansion chassis. You may need to replace the interface card or the chassis.
    c. If it still hangs, the problem is in the computer and not with the expansion chassis or the 3rd Party cards.
4. If it boots up OK without any 3rd Party cards installed, try adding only one card and see if it boots up.
    a. If it boots up OK with one card in it, shut it down and swap cards. Repeat this until all cards have been tested. If they all test OK, then add them back one at a time until you find the combination that doesn't work. If you find a bad card, call Technical Support. If you don't – congratulations, you fixed it!.

    a. If it still hangs up, try a different card – this one is probably bad (or has driver problems). If the second cards works, troubleshoot the first card. If the second card also fails, call Technical Support.

Computer Doesn't Detect Expansion Chassis

If the expansion chassis is not visible in your Windows Device Manager, you will need to turn off your computer (first) and then the Magma Expansion chassis (second) and test all cords and cables to ensure you have everything connected correctly. If everything seems to be connected correctly, and you are sure you have applied power correctly (power up the expansion chassis first and then the computer), then try the following troubleshooting steps:

- Verify that the required LEDs on the backplane of the chassis are lit as explained in **Advanced Technical Information**. The most important indicators are the LEDs that indicate the cards are inserted in the slots. These LEDs are relevant to the speed and the amount of data lanes available on the cards.
- Also verify the Magma host interface card is properly inserted into the host computer slot. In case any other LED is off, ensure the respective card is functional and properly seated in its slot.
- Try moving the host interface card to a different slot.

Add-in card doesn't work

1. Shut down the computer followed by the Magma Expansion chassis.
2. Remove the card displaying a problem.
3. Replace the "problem card" with a simple card, such as an Ethernet card that has drivers built into the operating system. (Using this "type of card" will avoid any future questions about drivers possibly being installed incorrectly.)
4. Turn on the Magma Expansion chassis, and then turn on the computer

Windows Error Codes

If you are having a problem with one of your devices, and the Device status box shows a Windows Error Code, refer to the following list of error codes for guidance.

Error Code	Description/Action
10	This code indicates that there is a problem with the 3rd Party card driver. If necessary, contact the card's manufacturer for updated software drivers. If all else fails, contact Magma Technical Support for further assistance.
12	**On the Bridge:** If you receive error code 12 on the first PCI to PCI Bridge, call Magma Technical Support. **On the Card:** This usually means the memory, I/O, or prefetch is more than has been allocated. Call Magma Technical Support.

Error Code	Description/Action
28	The driver for the card is not installed on your system. Reinstall the card driver following the manufacturer's instructions. If that fails to fix the problem, call the card manufacturer for new drivers.
1	The host interface card or expansion chassis are not working correctly. Reinstall the host interface card into the computer's slot and recheck all cables connections. If the error code remains, try another slot. If the error persists, call Magma Technical Support.
Other Codes	For all other error codes, call: **On the PCI to PCI Bridge:** Magma Technical Support **On the Card:** Card Manufacturer's Technical Support, after first verifying that the Magma Expansion chassis is installed properly.

Chapter 9 Chassis Maintenance

Like all computer systems, you will need to perform some routine maintenance tasks. Some of these include making sure that the air vents in the chassis are clear of obstructions and that the cooling air from the fans flows freely. You will also need to check the foam filter behind the front panel to ensure it is clean, thus allowing for unrestricted air flow to the fans. You should always keep an eye on all cables to make sure they are not damaged and are securely connected. Occasionally, you should remove the chassis cover and check for loose cards, and remove any dust build-up.

Always remember to power down your computer and the expansion system BEFORE you attempt to perform any maintenance tasks.

General Chassis Cleaning

The environment where your Magma chassis is operating should be the determining factor as to how often you should perform a general cleanup of the chassis. To perform a routine general cleaning of your chassis, you will need the following:

1. Can of compressed air (proper distance, 6 inches)
2. Cotton Swabs
3. Isopropyl (alcohol)
4. Anti static wipes.
5. Warm water (for filter)
6. Dish soap (for filter)

Do not use a vacuum because vacuums create ESD.

First, remove the thumbscrews and the top chassis cover. Next, use a can of compressed air from your local computer store to blow out any dust that may have accumulated in the chassis fans.

Be sure to keep the can of compressed air about six inches from the parts being sprayed with air. Pay particular attention to the fans in the chassis and power supply because they are critical to air movement and to keeping your chassis cool. Also spray the PCIe slots on the backplane.

Next, you can use anti static wipes to wipe down any open areas inside and outside of the chassis to remove any remaining dust or dirt. If you have dust or dirt remaining in any “hard to reach area”, such as corners of a fan blade, you can use the cotton swabs, dipped in the isopropyl (alcohol), to gently rub the area clean.

Lastly, if the chassis was extremely dirty, you can remove any installed 3rd Party cards and wipe the PCIe slots with a soft bristle brush (like a toothbrush), dipped in the isopropyl (alcohol), to gently clean each slot. When finished, blow the slots with compressed air from about six inches away until dry.

Finally, clean the air filter following the instructions later in this chapter. When finished, replace the cover and turn on power to the system.

Cleaning the Air Filter

The chassis is equipped with an air filter that is easy to remove and clean. To keep your chassis running at its coolest, you should clean this filter regularly. How often the filter requires cleaning depends on environmental conditions where your Magma Expansion chassis is located. To clean this filter, follow these simple steps.

First, power down the chassis and then remove the screws on the front panel with a Phillips screwdriver.

Next, open the faceplate slowly

Then remove the foam filter, located behind the faceplate, and clean it with a solution of warm water and mild dish soap. Finally, replace the filter, reconnect the LED panel. Secure faceplate with Phillips screws. Tighten screws until snug and turn on power to the chassis (see above picture).

Chapter 10 Frequently Asked Questions (FAQ)

1. **What is the size of the PCI Express Host Card?**
   Answer: The host interface is standard half height/half length. Length: 7 inches (17.78 cm) Height: 2.25 inches (5.72 cm)
2. **Does the host card contain an onboard switch?**
   Answer: The host interface card uses low latency retimers (no switch) for cable interfacing, resulting in a lower latency than competitive switch based solutions.

3. **What is the cable interface?**
   Answer: Magma has designed a special Gen 3 cable with improved signaling characteristics over previous generation cables. This x8 or x16 cable interface allows true 0 bit error rate transmission for ultimate performance at Gen 3 signaling rates.

4. **What length is the host cable?**
   Answer: The initial release cable will be 1 meter

5. **How many boards are supported in the expansion chassis?**
   Answer: For the ExpressBox 3600-AB, up to 10 peripherals are supported. For double wide (GPU) usage, up to 9 GPUs are supported).

6. **What types of GPUs are supported?**
   Answer: Any PCI Express supported GPU may be used. The ExpressBox 3600 supports NVIDIA Tesla, GeForce and Quadro GPUs and full access to all GPUs is provided at the rear of the chassis. AMD FirePro and Intel Phi co-processors are supported

7. **What type of cooling is provided for peripheral boards?**
   Answer: The chassis provides N+ 1 redundant cooling fan. 4 fans are supplied, each with 185 cfm.

8. **Are there any imitations to the types of boards that can be used in the ExpressBox 3600?**
   Answer: Although optimized for double wide GPU modules, any PCI Express board may be used within the system. The ExpressBox 3600 support Gen 3, Gen 2 and Gen 1 boards of any data width (x1/x4/x8/x16)

9. **What size is the enclosure?**
   Answer: The enclosure is 16.8" (42.7 cm) wide x 22.125 (56.2cm) deep x 7" (17.8 cm) high (4U)

10. **How are the power supplies configured?**
    Answer: Up to 4 1200W hot swappable AC input PSUs may be configured, for a total of 4800W, or 3600W at N+1 redundant

11. **How many PCI Aux cables are provided for peripheral/GPU use?**
    Answer: Nine pairs of PCI AUX cables are supplied with the system, with each slot being supported by two 8-pin PCI AUX connectors. Total cable pairs: 18.

12. **Can I use iPass cable?**
    Answer: The EB3600-AB x16 host card is Gen3 and it has different cable ports and will NOT accept i-Pass cable. The x16Gen2 host card can be used with the EB3600-AB expansion chassis but performance will train down to Gen2.

13. **What is the dimension of the EB3600-AB enclosure?**
    Answer: Width: 19 inches (chassis is 16.8 inches plus "ears" for rack mounting = 19.0 inches) Length 22.25 inches, Height: 4U

14. **How many Fans are available? What is the CFM of the fan?**
    Answer: Four hot-swappable fans. Each fan 185 CFM.

15. **What is Express IO Manager Ethernet interface ?**
    Answer: Express I/O Manager provides an Ethernet interface to monitor the status of the components on the backplane and the items in the chassis from any location with either direct or internet access via SNMP (simple network management protocol). The following may be monitored/selected via the Express Manager Software. Traps may be configured to alarm at specified threshold values.

- Internal Temperature monitoring
- Clear Alarm button monitoring
- Swappable fan status (for fans 1,2,3 and 4) Does not monitor power supply fan performance
- Power Supply #1 Status
- Power Supply #2 Status
- Power Supply #3 Status (when installed)
- Power Supply #4 Status (when installed)
- Traps are defined to alert the SNMP server in case of overheat or failure in any of the subsystems mentioned above
- Remote chassis turn on
- Input /Output switching for partitioned chassis

16. **Does it support Japan Voltage?**
    Answer: Power supply input range: 100-240 VAC

17. **Can I connect the Interface cable to host computer while it is on?**
    Answer: Don't connect the Interface cable while the computer is on as it can cause the system to crash and can damage the end-connector of the cable.

18. **Can I disconnect the cable while the host computer and EB3600-AB unit are ON?**
    Answer: Don't disconnect the Interface cable while system is running as this can cause failure and damage the hardware.

19. **Can I plug in a GPU or any PCIe cards while the EB3600-AB is On?**
    Answer: Don't plug any PCIe cards while the EB3600-AB is on as this can cause electrical short and damage on the PCIe card and PCIe slot.

20. **Can I turn off the Magma EB3600-AB while the host computer is ON?**
    Answer: You have to turn off the host computer first before turning off the Magma EB3600-AB.

21. **Can I hot-swap the power supply module while the power supply is ON.**
    Answer: You have to unplug the power cord from the power supply before you can hot-swap it.

22. **Can I lower the fans RPM so I can reduce the noise level?**
    Answer: It's not recommended to lower the fans RPM especially when running any high-end GPUS. Slowing down the fans RPM decreases the cooling of the GPUs and can increase heat / temperature.

What are the differences between EB3600-10 and EB3600-AB?

Answer: See info / table below.

	EB3600-10	EB3600-AB
Features / Functions		
Power Subsystem	Shared Power Supply subsystem for all slots, up to 4 PSUs with a total of 4800W at 120V or 6000W at 240V full power OR 3600W/4500W N+1 redundant.	Separate power supply subsystems for 'A' and 'B' segment of system. 2 PSUs per segment. 2400W at 120V or 3000W at 240V full power OR 1200W/1500W N+1 redundant for A Segment and B segment independently
Fan speed	Fixed at 175 cfm per fan	Fan speed controllable via Express IO system management GUI for 20-100% full operation. 185cfm PMW controllable fans. Segment A and Segment B are independent with 2 fans per segment.
Segment A and Segment B serviceability	EB 3600-10 supports on power supply environment. If any PCIe card needs to be serviced, the complete system must be powered down, even if two separate servers are connected to the independent backplanes within the EB 3600-10	EB3600-AB supports individual servicing of segment 'A' and segment 'B' backplanes when connected to independent servers. The Express IO system management GUI allows the user to power down either segment's 3.3V Standby power to allow any card in that segment to be removed or serviced/replaced.
PCI AUX Power cables	The EB 3600-10 provides 18 total PCI AUXPWR cables for support of cards that need more than 75W of power as provided through the PCIe slot connector. Any cable can be used with any card in any slot in the system.	The EB 3600-AB provides 10 PCI AUXPWR cables for segment 'A' and 8 PCI AUXPWR cables for segment 'B' for cards in either segment that need more than 75W of power as provided through the PCIe slot connector. Only PCI AUXPWR cables labeled as 'A' may be used with segment 'A' cards and only PCI AUXPWR cables label as 'B' may be used with segment 'B' cards.

Chapter 11 How to Get More Help

You can visit the Magma Technical Support FAQ pages on the Internet at: www.magma.com/support/

Contacting Technical Support

Our support department can be reached by fax at (858) 530-2733 or by phone at (858) 530-2511. Support is available Monday through Friday, 8:00 AM to 5:00 PM PT. When contacting MAGMA Technical Support make sure to include the following information:

1. Exact and correct Magma Serial #
2. Service Ticket or Case # (if you already submitted an online request)
3. Computer Type & Model: Operating System
4. Make & Model of PCI/PCIe cards: Application
5. Problem description

When submitting an online technical support request always provide a valid working e-mail address, phone number, shipping address and proper contact name. Check your e-mail for an automated response containing the case # and updates. You can also visit our web site at: www.magma.com/support. For a quick response, use the Technical Support and RMA Request Form available in the Support Section of the website. Simply complete the form with all required information. Please make sure that your problem description is sufficiently detailed to help us understand your problem.

Shipping or Transporting of Expansion Unit with PCI / PCIe cards

Any PCIe cards in **should be removed** (or not to be installed) prior to shipment to avoid or prevent possible damage. Note: Expansion board and PCIe / PCI cards that arrive damaged in shipment will not be covered under warranty.

Returning Merchandise to MAGMA

If factory service is required, a Service Representative will give you a Return Merchandise Authorization (RMA) number. Put this number and your return address on the shipping label when you return the item(s) for service. **Magma will return any product that is not accompanied by an RMA number.** Please note that Magma WILL NOT accept COD packages, so be sure to return the product freight and duties-paid.

Ship the well-packaged product to the address below:

Attention:RMA # _____, MAGMA
9918 Via Pasar
San Diego, CA 92126
USA

It is not required, though highly recommended, that you keep the packaging from the original shipment of your Magma product. However, if you return a product to Magma for warranty repair/ replacement or take advantage of the 30-day money back guarantee, you will need to package the product in a manner similar to the manner in which it was received from our plant. Magma cannot be responsible for any physical damage to the product or component pieces of the product (such as the host or expansion interfaces for the expansion chassis) that are damaged due to inadequate packing. Physical damage sustained in such a situation will be repaired at the owner's expense in accordance with Out of Warranty Procedures. Please, protect your investment, a bit more padding in a good box will go a long way to insuring the device is returned to use in the same condition you shipped it in. Please call for an RMA number first.

Appendix A Compliance

FCC

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

The assembler of a personal computer system may be required to test the system and/or make necessary modifications if a system is found to cause harmful interferences or to be noncompliant with the appropriate standards for its intended use.

Industry Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cetappareilnumériqué de la classe A estconformé à la norme NMB-003 du Canada

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives. Magma will not retest or recertify systems or components that have been reconfigured by customers

MAGMA™

9918 Via Pasar, San Diego, CA 92126, USA

Toll-Free (800) 285-8990 US • Main (858) 530-2511 • Fax (858) 530-2733

www.magma.com

Manual Part Number: 09-09957-02 Rev B